


## Drywall Lite Bead Installation Guide


### Materials Needed

- Stapler
- Bonding spray
- Drywall compound
- Sanding materials


### Instructions

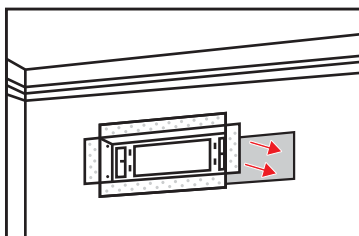


1. Dry fit Drywall Lite Bead into duct opening. Ensure flange is flat to the wall.

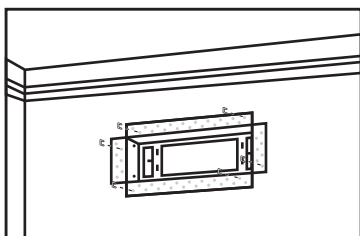


2. Use bonding spray to secure beaded flange on drywall surface. Staple in place.

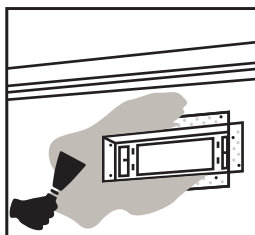

3. Mud drywall compound to cover flange. Allow to dry.

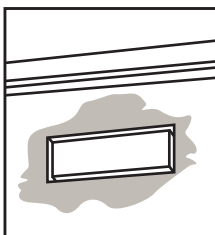

4. Sand, mud so surface transitions smoothly. Repeat steps 3, 4 as needed.

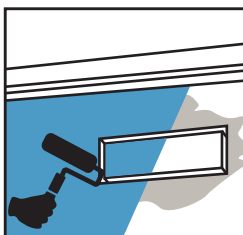

5. Paint walls, and all vent surfaces. Enjoy!

\*can also be used with wallpaper

\*No airflow adjustment on this model

### Support

support@ariavent.com

ariavent.com

Manufactured entirely in Canada

Patent information

[www.ariavent.com/pages/patents](http://www.ariavent.com/pages/patents)