

Cargo Lamp Kit Installation (GMC Minor Endgate Lamp Instruction ID: 84153657)

Installation Instructions Part Number


84153657

Kit Contents



Qty	Description
2	Endgate Cargo Minor Lamp
1	Wire Harness with Tie Staps
1	Installation Instructions

Procedure



1. Open endgate.

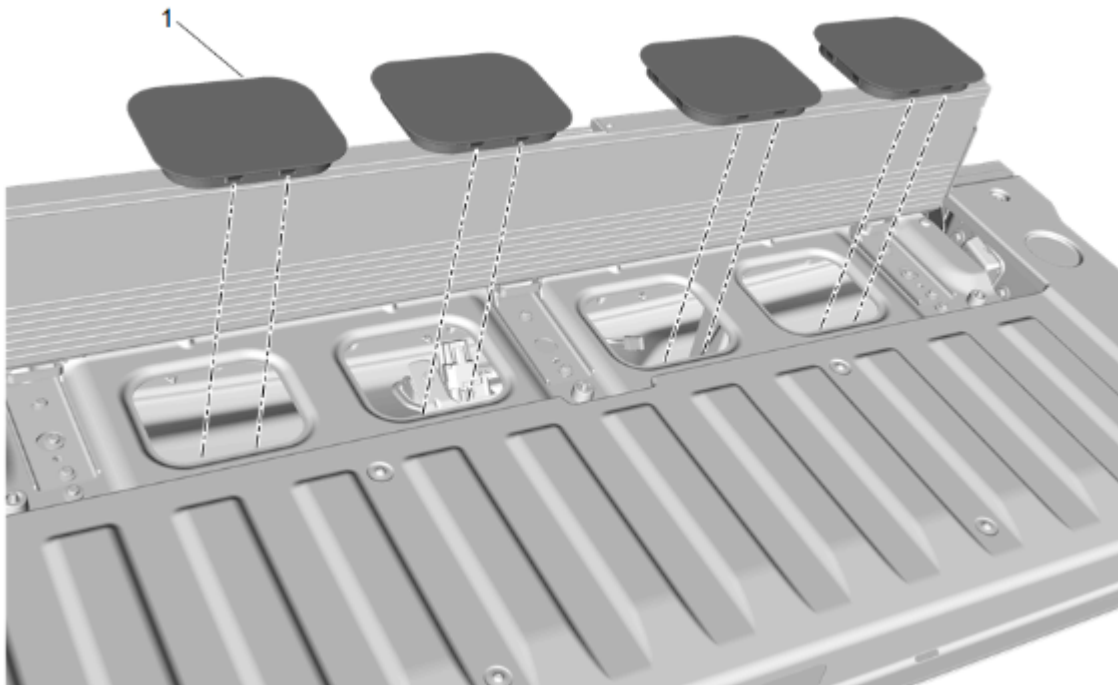

2. Using a suitable plastic flat bladed tool, remove the pickup box endgate access hole covers (1).

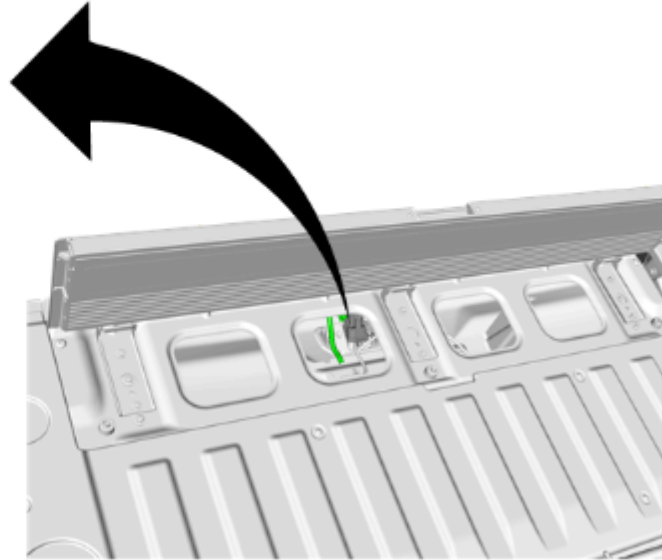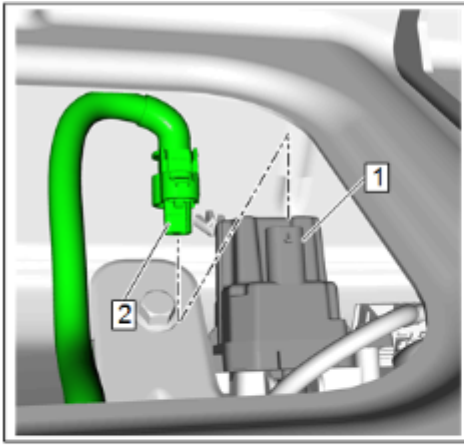


3. From inside the endgate, disconnect the harness connector (2) from the trailer hitch lamp (1).

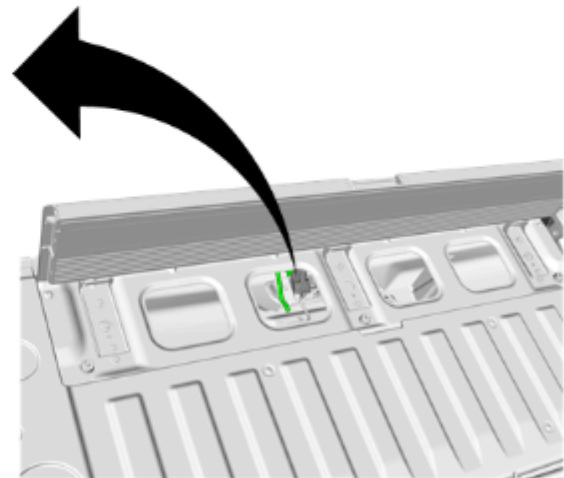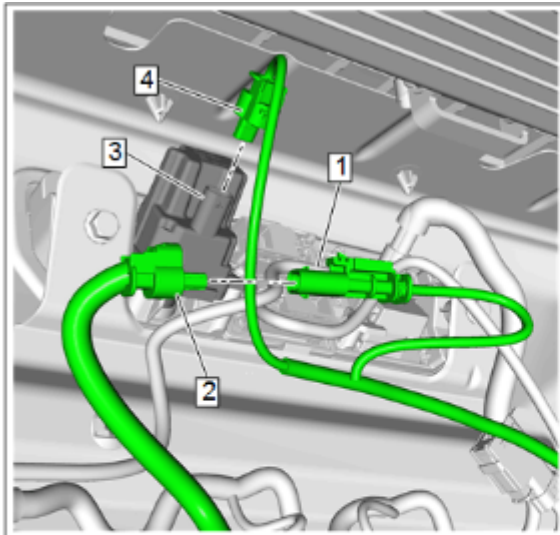


4. Connect the female connector (1) on the short end of accessory harness to the vehicle harness connector (2) which was disconnected from the trailer lamp.

5. Connect the neighboring male connector (4) of accessory harness to the trailer hitch lamp (3).

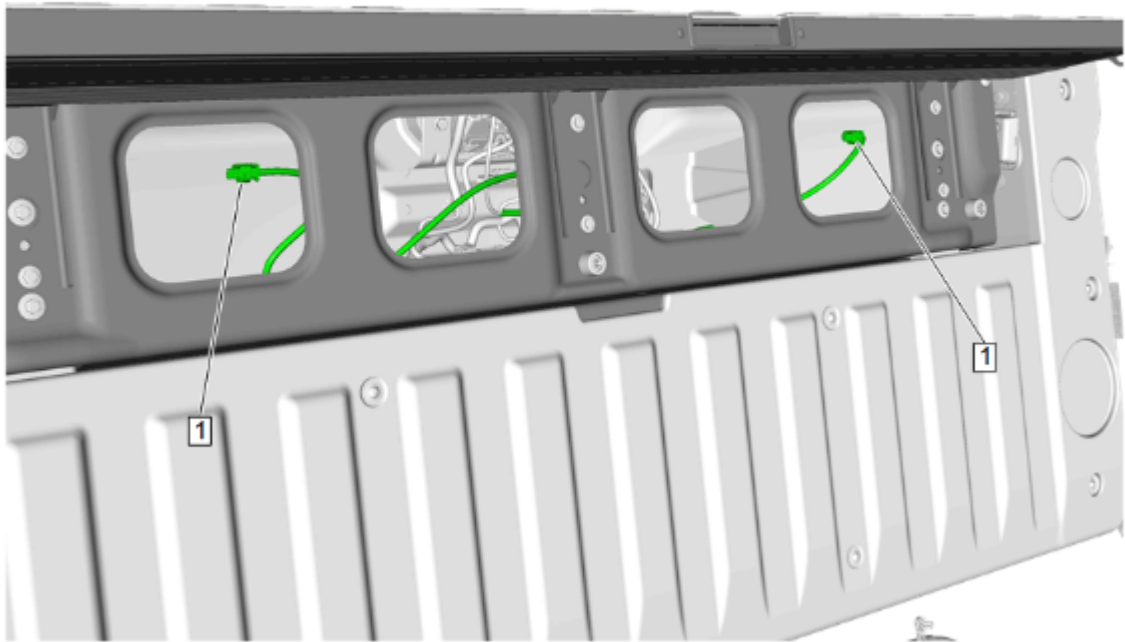


6. Feed the remaining accessory harness connectors (1) on the other end of harness, one each, through the two minor weld holes that the customer has chosen for the lamp locations.


Note: If the customer has not chosen the lamp locations, recommend installing the lamps into the two outboard weld hole locations.

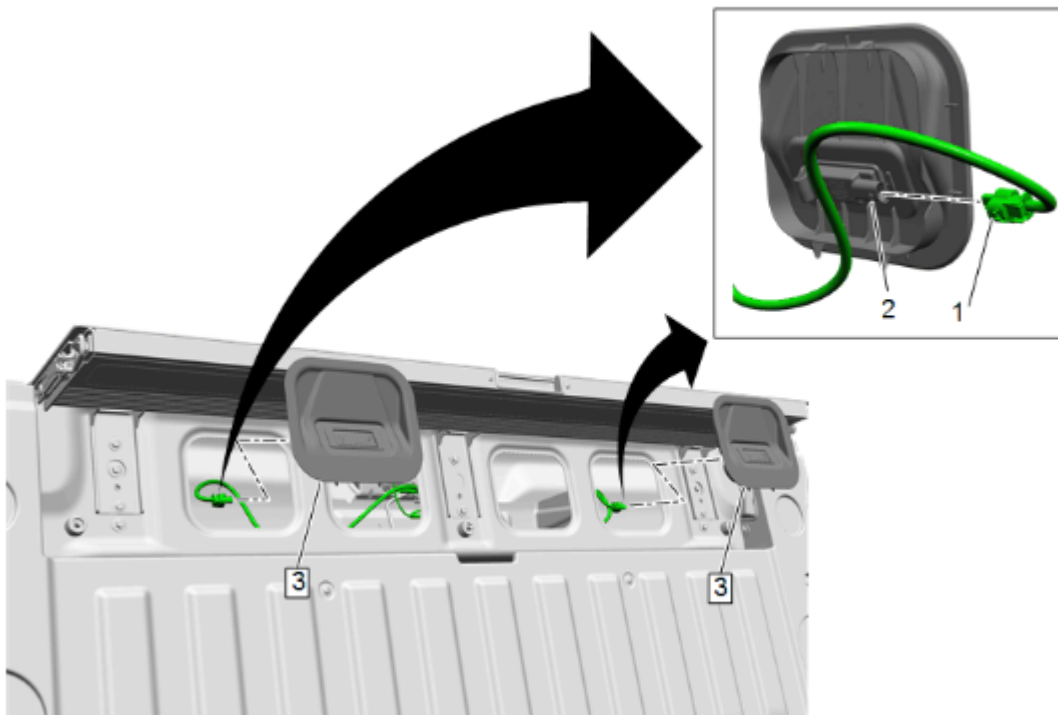

7. Insert the accessory wiring harness connectors (1) into the accessory lamps (2) of the accessory panels (3).
8. Test the function of cargo lamps, they should turn on and off with the rest of the cargo lamps controlled by the interior cargo switch.

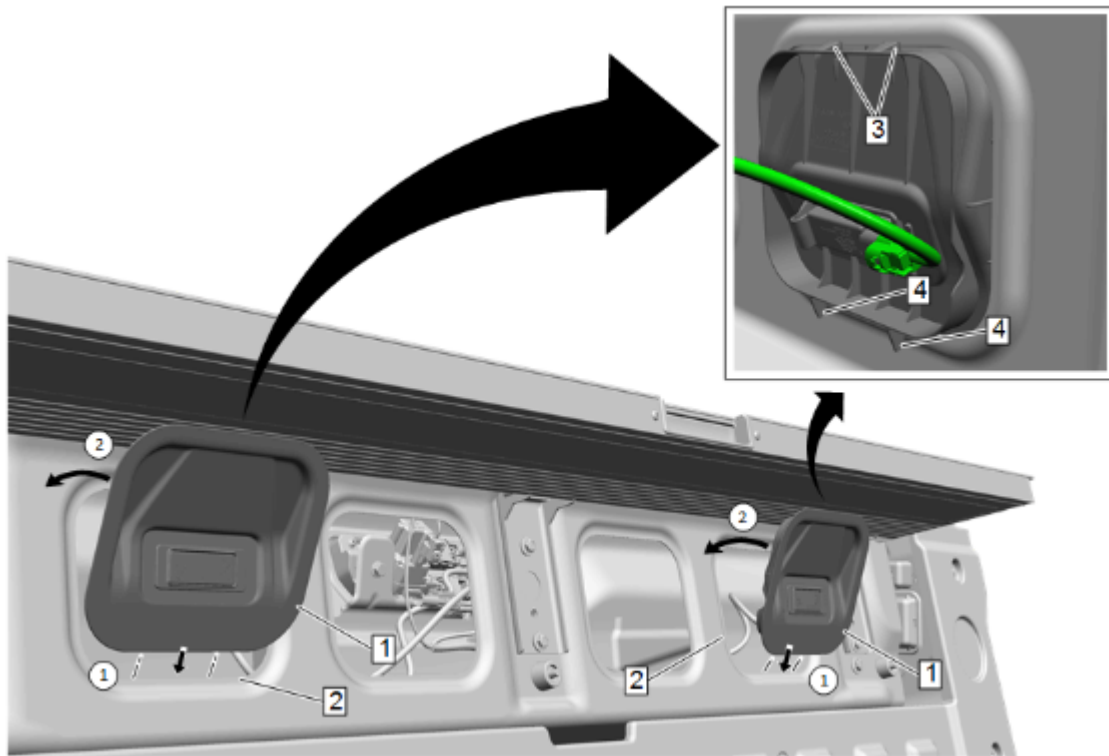

9. Install the panels (1) into the vehicle weld holes (2) by hooking the attachment features (4) at the bottom of the panel into the lower sheetmetal of the weld hole.
10. Push the upper end of panel into the sheetmetal until the panel tabs (3) engage with and clip to the upper sheetmetal of the weld hole. Check that the panel is fully seated.
11. The correctly installed lamps will point light downward into the minor gate step.
12. Use the straps provided in the kit to secure the accessory wire harness to the vehicle to prevent rattling.

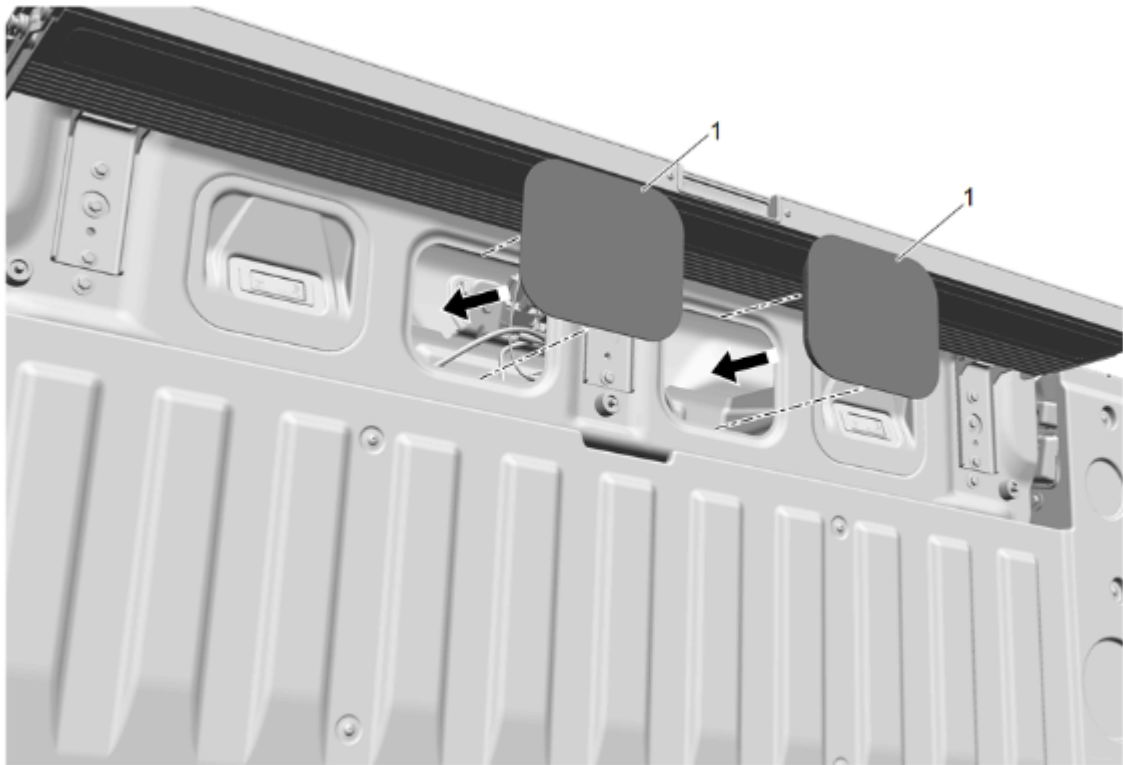

13. Reinstall two of the previously removed production covers (1) into the remaining two vehicle sheetmetal weld holes.
14. Close endgate.