



Domi-Shim Instructions

This guide will instruct how to install the Seneca Woodworking Domi-Shim on to the Festool Domino DF700 Fence. These instructions apply to the Domi-Shims for 1/2" and 3/4" stock as well as the 10mm thick Domi-Shim


1. Using a 3mm Allen wrench, install and tighten four socket head cap screws into the Domi-Shim as shown. Installing the screws in the side opposite of the size indication will allow the size to be visible once the shim has been installed on the Domino.



2. Install two of the button head cap screws along one side of the Domi Shim.



3. Fit the Domi-Shim onto the Domino fence. Install the remaining button head cap screws and tighten all four screws.

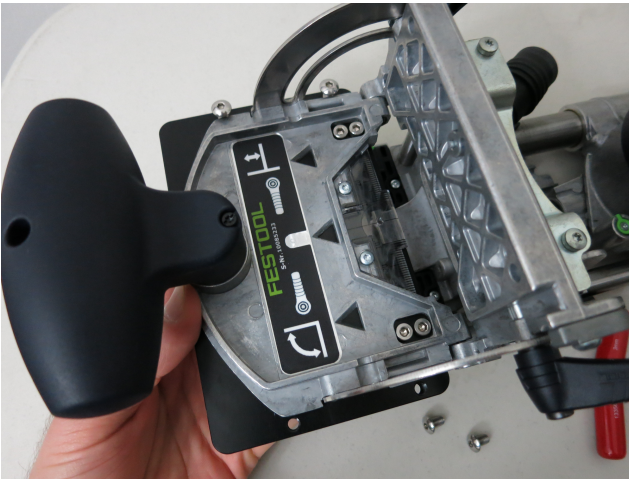

For 1/2" and 3/4" Domi-Shims:

Set the Domino fence height stop to the 15mm position. This will create the correct fence offset distance from the cutter for both the 1/2" and 3/4" Domi-Shims.



For the 10mm Thick Domi-Shim:

The fence offset can be set by subtracting 10mm from the readings on either the metric thickness gauge or fence offset scale.