
NOMENWESCIO







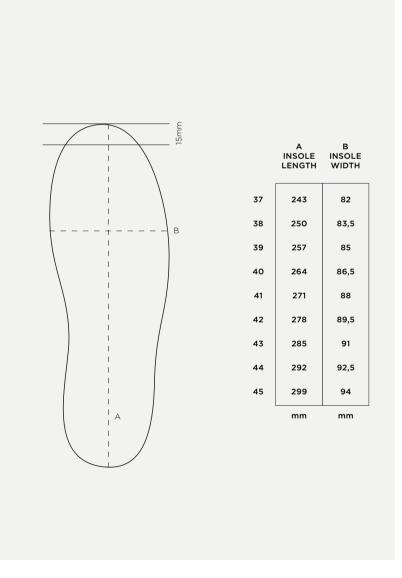

unisex high boot with elastic side/sock detail vegetable tanned leather non-slip outer sole leather inner sole

material: production:

vegetable tanned cow leather from Portugal Rondonshoes Lda, Felgueiras, Portugal design: Nomen Nescio Oy, Helsinki, Finland

Optimal vacant space at toes 15mm.

How to measure your foot:

Set your foot on a piece of paper. If you have different size feet, measure bigger one. Stand on both feet and apply equal pressure to the ground. Draw a line around your foot and keep the pencil horisontal. Then measure lenght using a ruler.

About width: The optimal width of insole is up to 10mm narrower than the widest part of your foot. Extra space should be left between your toes and the tip of the shoe.