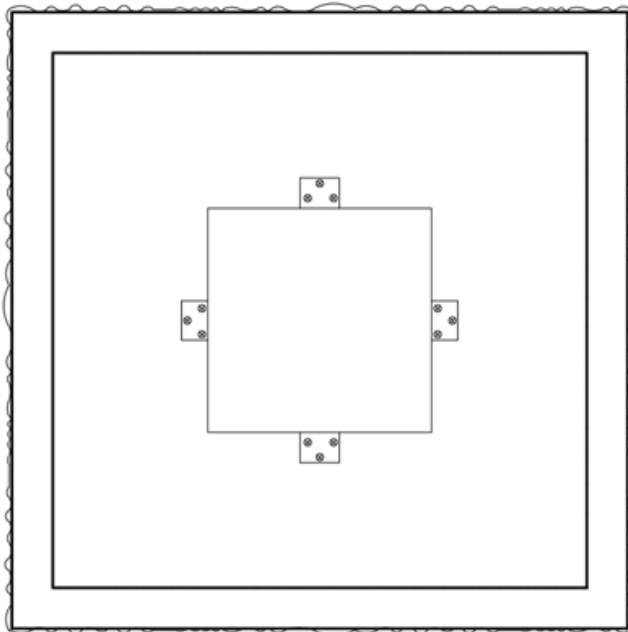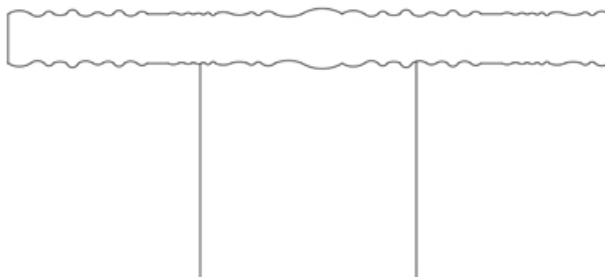1. PLACE BRACKETS IN TABLE BASE GROOVES AND SCREW INTO PLACE.

2. PLACE TABLE TOP FACE DOWN AND ALIGN TABLE BASE WITH BRACKETS TO UNDERSIDE OF TABLE TOP. SCREW INTO PLACE. .

3. PLACE TABLE UPRIGHT.