

# **RIGGING KIT 0 INSTRUCTIONS**

## **Curved Tripod Stand**


The custom Curved Tripod Stand is an easy and beautiful option where no trees or structures exist. For example, it is ideal on the beach or poolside. Additionally, the curved tripod stand is just over 8 feet tall, allowing it to fit in most indoor spaces. Please refer to the **Stand Instructional Video** (sent via email) for complete assembly instructions.

### Kit includes:

- Top Piece
- (3) Legs
- (3) Bottom Pieces
- (3) Steel Sleeve Inserts
- Rigging Kit
  - (2) Quick Links one with a short nylon sleeve
  - (3) Bolt Sets Bolt/Washer/Lock Washer/Nut
  - Four Link Chain
- Bottle Oil (unless international, where shipping oil is a no-no)
- Optional:
  - Rotor Swivel with Velcro Swivel Stop
  - Additional Quick Link (see photos)

#### You will/may need:

- Starhead or Torx screwdriver/bit (size T20) to open the crate
- Scissors or box cutter to remove strapping
- 2 people
- Small step ladder
- +  $\frac{3}{4}$  inch socket wrench or adjustable wrench
- Rag for oil

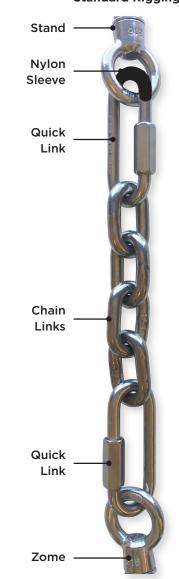

#### **Standard Rigging**



#### **Assembly Instructions:**

Please watch the video included in the welcome email. This video is about 5 minutes long and walks you through the stand assembly step by step, including helpful hints along the way. Trust us, it will save you time in the long run!

#### Here are a few other tips and revisions we found helpful since filming the video:

- The video shows (4) bottom pieces. We have updated the design to (3) pieces. The procedure is the same, hand tightening the front 2 bolts, adding the 2 front legs, then adding the rear leg.
- Be sure to add a generous amount of oil to the exposed steel sleeves inserts. Oil will help with the install, as well as, help prevent any squeaks for years to come.
- For the rigging, we have changed from a Dynex runner to stainless steel chain links. Refer to the photos below for your rigging option. In either case, be sure to have the nylon sleeve between the top-most quick link and the stand (with a dab of oil).
- Expanding on the dab of oil add just a drop or 3 to the nylon sleeve at the top of the upper quick link. This is the place where the moving Zome meets the rigid stand. During humid weather, the metal-on-metal can get sticky and give a less than smooth feeling. Adding a few drops of oil to this connection point helps keep things smooth and silent.

If you have any questions or encounter any problems with installation, please give us a call or send us an email. We are here to help!

The KODAMA Team



