Parts List:











Right Frame

Left Frame

Small Bar

Curved Bar

Medium Bar

Long

Seat

Cushion





Backrest

Knee

Cushions

Bar

Backrest Cushion















Allen

(for the cushions)

Small Screws

N

(Optional)

x2



Wooden **Dowels x12**

Big Screws Metal Nuts **x10**

Wrench

(for the bars)









x1



Attachment Cushion Screw



x1







Spacer x1

Metal Rod **x**1

Missing something? Reach out to us at hello@sleekform.com

Follow, Share, Double Tap!

@sleekform














Insert the wooden pegs (J) into the holes on both the left & right sides of the support bars (C,E,F)

Place the frames (A,B) on the floor. Connect the support bars (C,E,F).

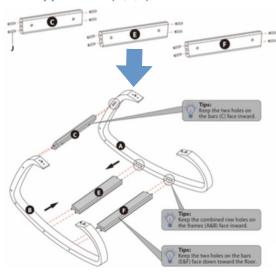


Insert backrest bar (O) into the hole in the curved bar (D).
Insert metal rod (T) through the middle hole on curved bar (D)
Thread it through backrest bar (O) through to the other side of curved bar (D)




Line the curved bar (D) & backrest bar (O) up with the frames (A,B)

Insert the long screws (K) through the holes in the frame, tighten with the Allen key (M).

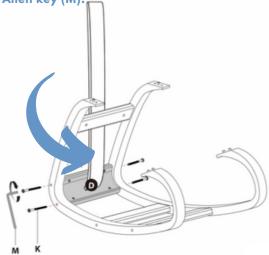


Lie the frame down.
Insert the metal nuts (L) into the holes on each bar.
Insert the long screws (K) through the holes, tighten with the Allen key (M).
Flip the frame over and repeat step on the other side

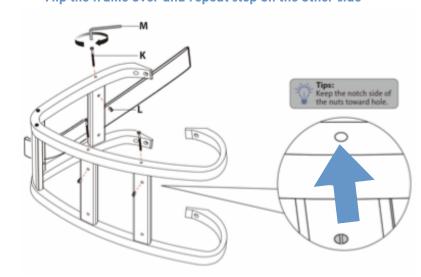


Attach the knee cushions (H) to the frame with the small screws (I)

Attach the seat cushion (G) to the frame with the small screws (I)

Tighten with the Allen key (M).

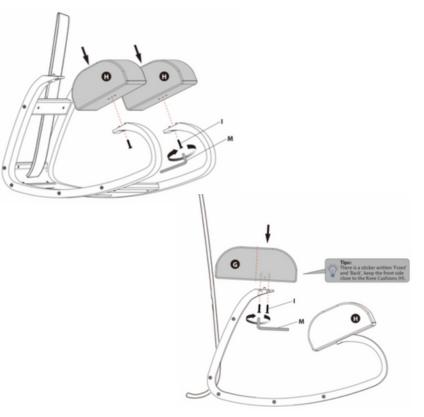

Attach the backrest cushion (P) to the backrest support bar (O) using the R screw.

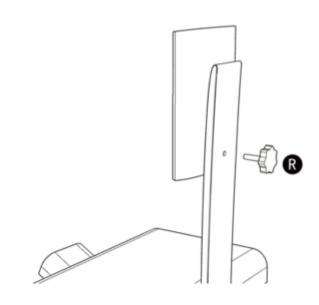

Secure the backrest to the chair by threading the Q screw through the lower hole on the backrest support bar (O).

Place the plastic spacer (S) on the screw between the backrest bar and the seat. Insert the screw into the hole on the back of the seat, tighten with the Allen wrench.

