

VoshMods Audi C5 Big Brake Kit Installation Instructions

1	Rear Brembo Calipers	
2	Rear Wilwood Calipers	
3	Rear Brake Lines	
4	C5 Bolt Kit	
5	Rear Passenger Bracket	
6	Rear Driver Bracket	
7	Bracket Support Pieces	

IMPORTANT NOTES: Ensure that both wheels are off the ground for proper brake adjustment.

SAFETY FIRST! Utilize Jack Stands and place tires under the vehicle. Please read instructions thoroughly before beginning and contact us at voshmods.com for any questions!




Step 1: Align the bolts and washers into the



Step 2: Line up the Brembo Caliper to the bracket

Brembo Calipers as shown in the above illustration. and torque bolts down.

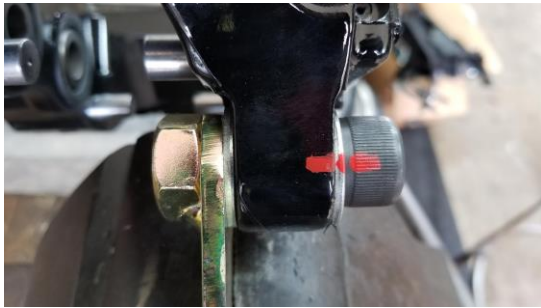

*Ensure that bolt and washers are installed as shown above before proceeding to step 3.




Step 3: Clean and prep the mounting surface of rust before installing bracket onto the knuckle.



Step 4: Use threadlocker on all 3 m6 bolts and m10 bolts.



(bottom supporting bracket)

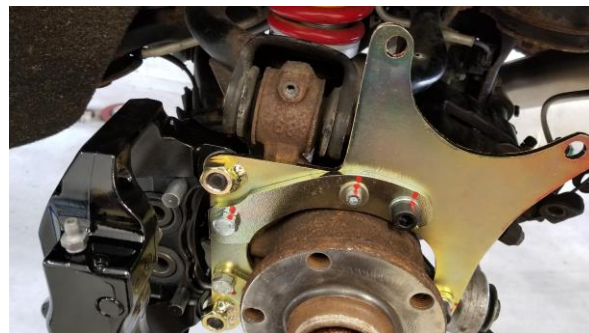

(top supporting bracket)

Step 5: Install bracket and additional supports as shown above.




Step 6: Install rotor with lug bolts.



Step 7: Use threadlocker on parking brake bolts.



Step 8: Install Parking brake caliper using the 2 bolts from step 7.

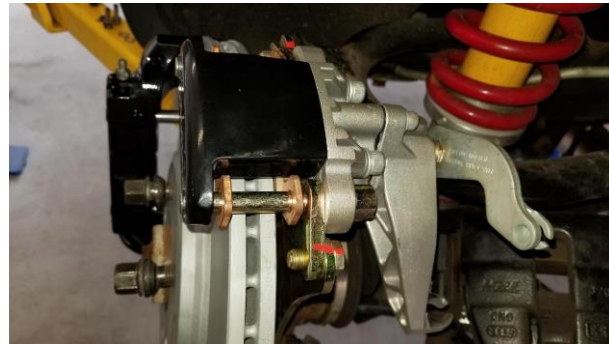

Please Note: If you purchased your calipers from VoshMods, the spacers are already installed into the Wilwood calipers. Skip to step 15.



Step 9: Loosen both rear caliper assembly bolts.



*Mark the alignment of the brake arm to shaft.



Step 10: Remove caliper body from caliper.



Step 11: Locate caliper spacer included in bolt kit.



Step 12: Install caliper spacer as shown.



Step 13: Loctite caliper assembly bolts.



Step 14: Install caliper body and re-orient parking brake arm to the shaft as marked in step 9.



Step 15: Move the parking brake cable towards the front of the vehicle so that it goes between the arm and the axle.



Step 16: Install the parking brake cable.



Step 17: Install parking brake cable and secure the cotter pin as shown above.



Step 18: Install Brake Pads into calipers. Please follow manufacturers suggestions based on the brake pads you choose.



Step 19: Install anti-rattle clip and locking pin.

Please contact us at voshmods@gmail.com if you have any questions or concerns during installation.

Send us pictures of your installation to be featured in our gallery on voshmods.com!