


HEARTWORK[®]

Instructions for Building Block Pedestal

Welcome!


In the next few pages, you'll find what you need to do to set-up your mobile pedestal.

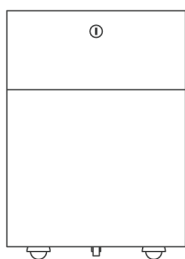

ALPHA




BRAVO

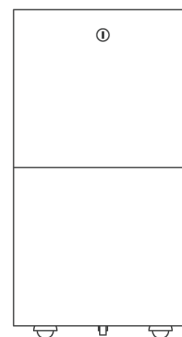


CHARLIE

In the box (Bravo shown)

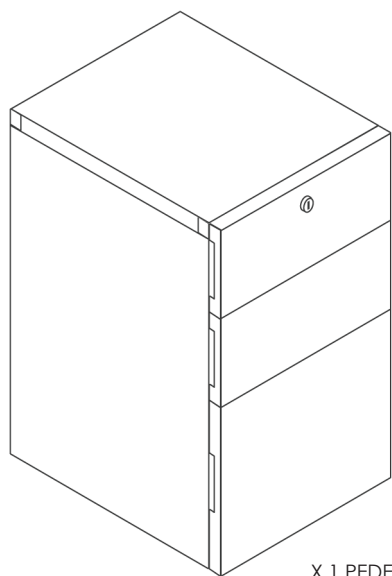

X 1 PEDESTAL




X 2 PUSH IN BRAKING CASTERS



X 2 PUSH IN NON-BRAKING CASTERS




X 1 SET OF KEYS

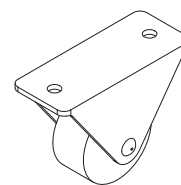

X 1 5TH WHEEL




X 2 SHEET METAL SCREW



ALPHA X 1 DRAWER DIVIDER
BRAVO X 2 DRAWER DIVIDERS
CHARLIE X 0 DRAWER DIVIERS

Required tools

Phillips-head screwdriver

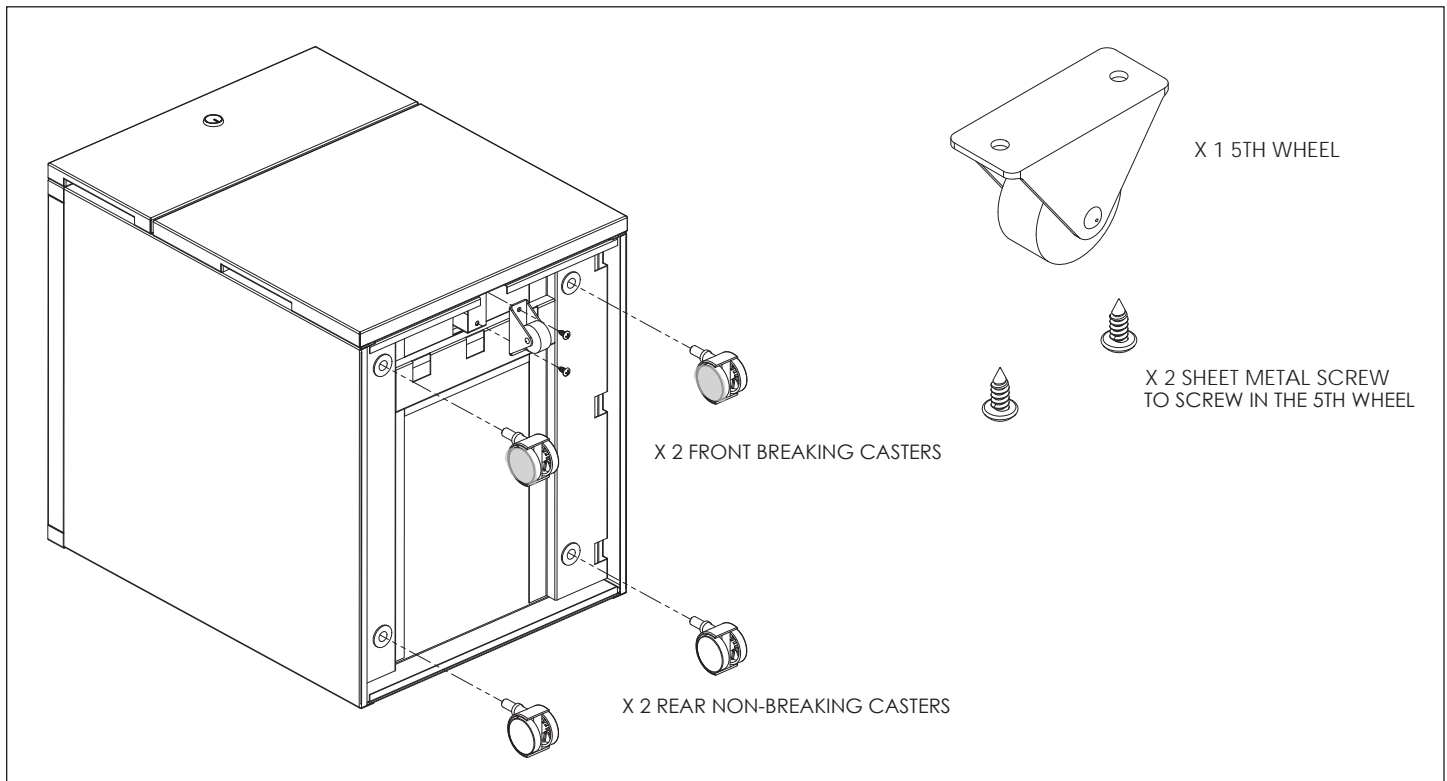

Assembly Instructions

1. On a carpet or padded surface, carefully tip the pedestal on its back.
2. Insert casters into four corner holes on the bottom of the pedestal with braking casters in front two holes. Push in casters by hand (they may need some force to push into the socket).
3. Using a power drill or a phillips-head screw driver, screw in the 5th wheel on the bracket as shown in the illustration.
4. Carefully lift the pedestal on its wheels. Once in place, lock front casters by pressing down on tab.
5. On applicable models, insert drawer divider(s) into top drawer(s) as desired.



WARNING

If not properly installed, and secured while moving, this cabinet can become unstable and tip over, causing serious injury. Follow all safety guidelines closely.

Safety

To ensure safety, please follow directions for proper use:

- Make sure pedestal is stable and level before loading.
- Lock front casters before loading.
- For stability, load bottom drawer first and distribute contents evenly among shelves.
- Do not step, stand or lean on drawers.

Cleaning & care

Wipe your Heartwork product with a damp rag and mild detergent as needed.
Do not use harsh chemicals or abrasive materials when cleaning.

Be mindful what you place on the item surface so as to prevent unnecessary scratching.

Periodically check and tighten hardware.

For any additional help please contact us.

hello@heartwork.com