



altwork™

SIDE MONITOR mount

Assembly Instructions

The new way to work

Tools & Hardware

Side Mount (1)



1/4-20 Mounting Screw (1)



Stand-offs 14mm (4)



Vesa Plate (1)



Plastic Washer (1)



Stand-offs 30mm (4)



1/2" Open Wrench (1)



Screw with Flats (1)



M4 x 14mm Flat Head Screws (5)



5/32" Hex Key (1)



Nut (1)



The new way to work

Preparation



STEP 1: Install screw into vesa plate.




STEP 2: Set screw flush.



STEP 3: Install nylon washer.



Screw with flats

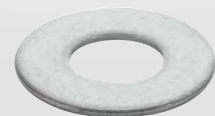

Plastic Washer

The new way to work

Attach The Vesa Mount



STEP 4: Align vesa mount and bracket.



Nut



1/2" Open Wrench



STEP 5: Install vesa plate to bracket where desired. The plate should be installed with the shiny side against the mount.



STEP 6: Install and tighten nut.

The new way to work

Adjust Depth



STEP 7: Install standoffs to monitor if needed due to a recessed vesa mount location. The stand-offs can also be used to position the monitor closer to the user if needed.



Stand-offs

The new way to work


Stand-offs



Stand-offs

The new way to work

Install The Mount

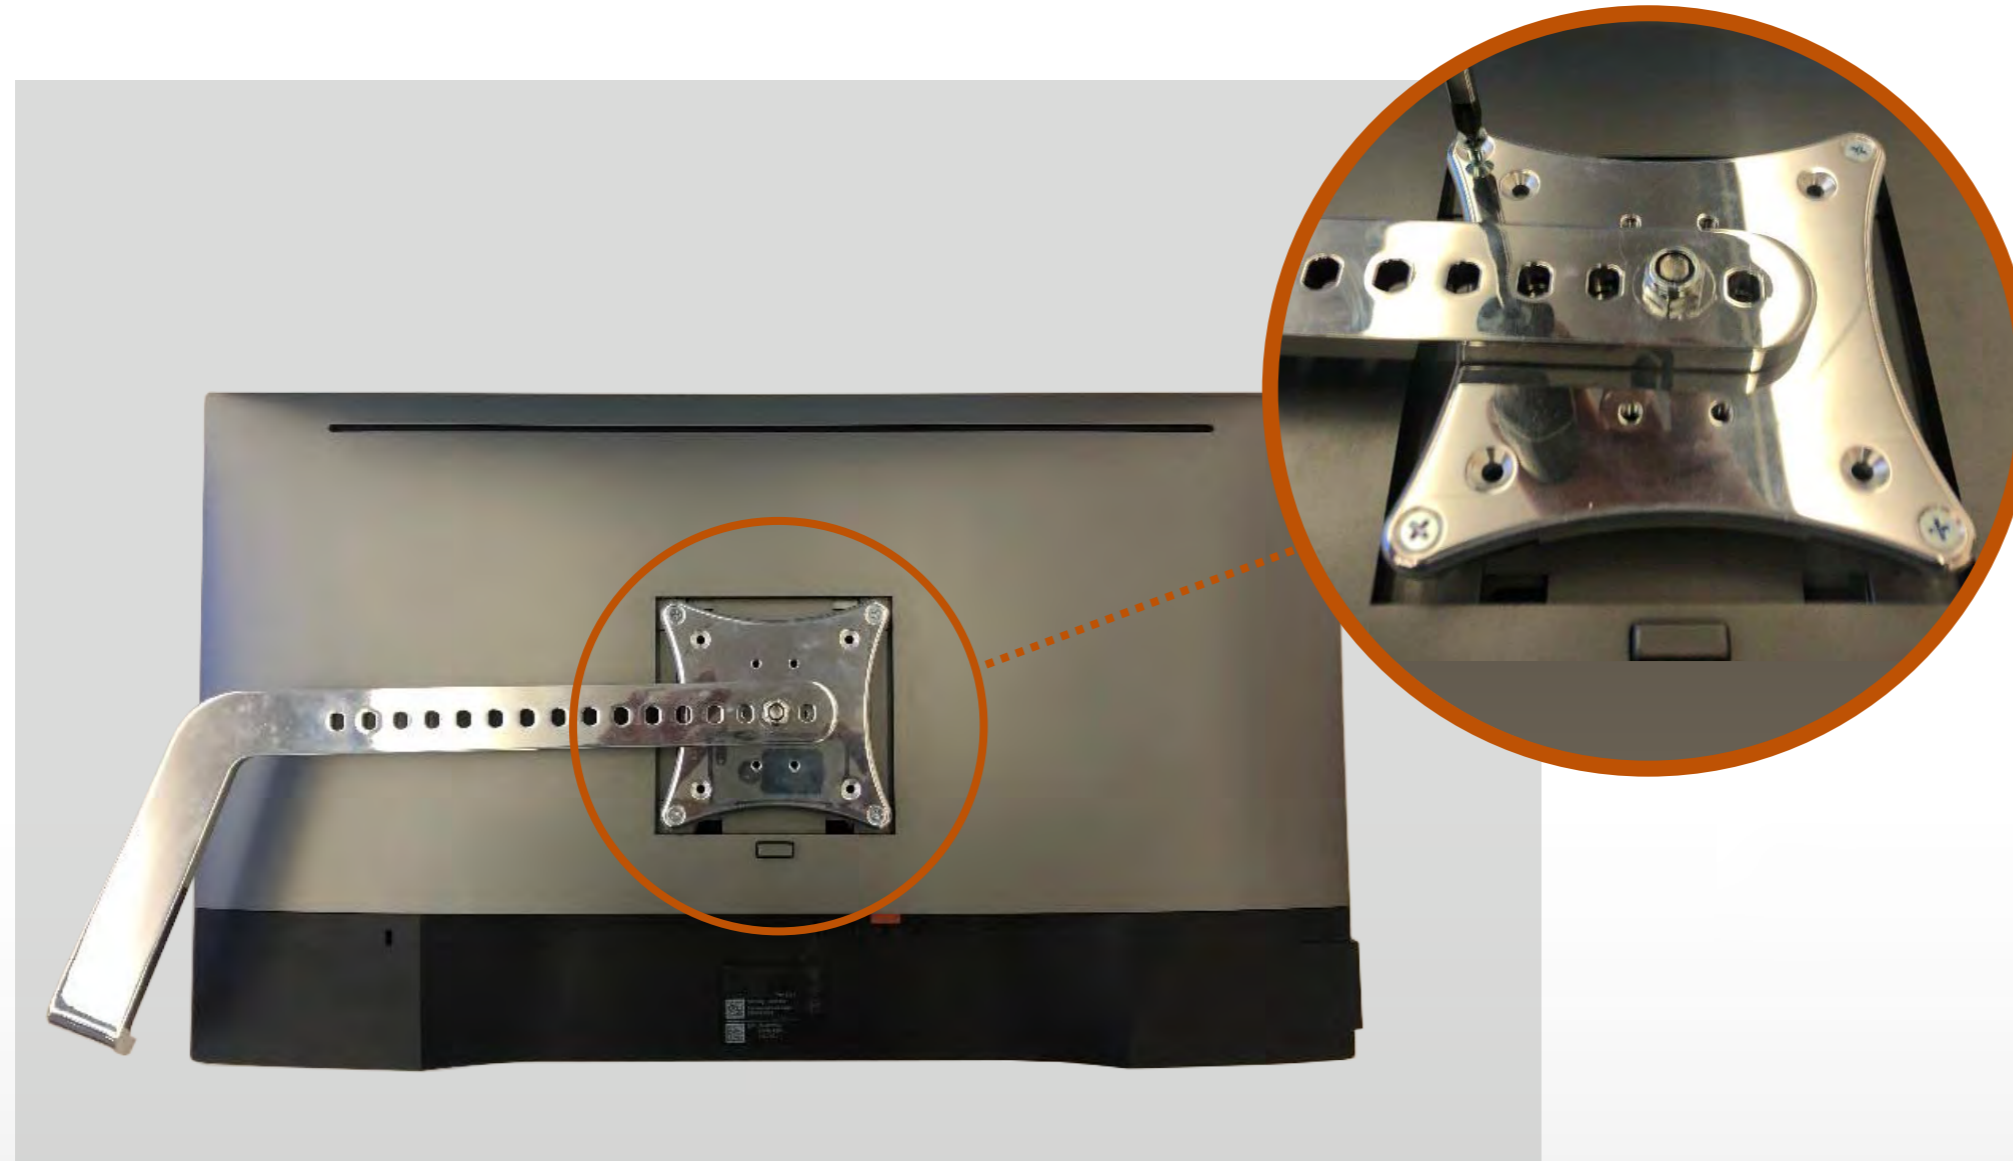

STEP 8: Attach vesa mount to monitor



STEP 9: Attach the monitor mount to the Altwork station with the screw and key provided




Hex Key



1/4 -20 Mounting Screw



M4 x 14mm Flat Head Screws

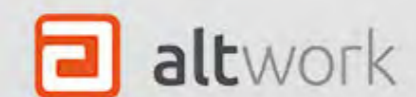

SIDE MONITOR mount

The new way to work

Adjust Monitor



STEP 10: Rotate the monitor to the desired angle.



altwork™

Need help? Contact us
support@altwork.com