


Furniture Tipping Restraint Installation Instructions

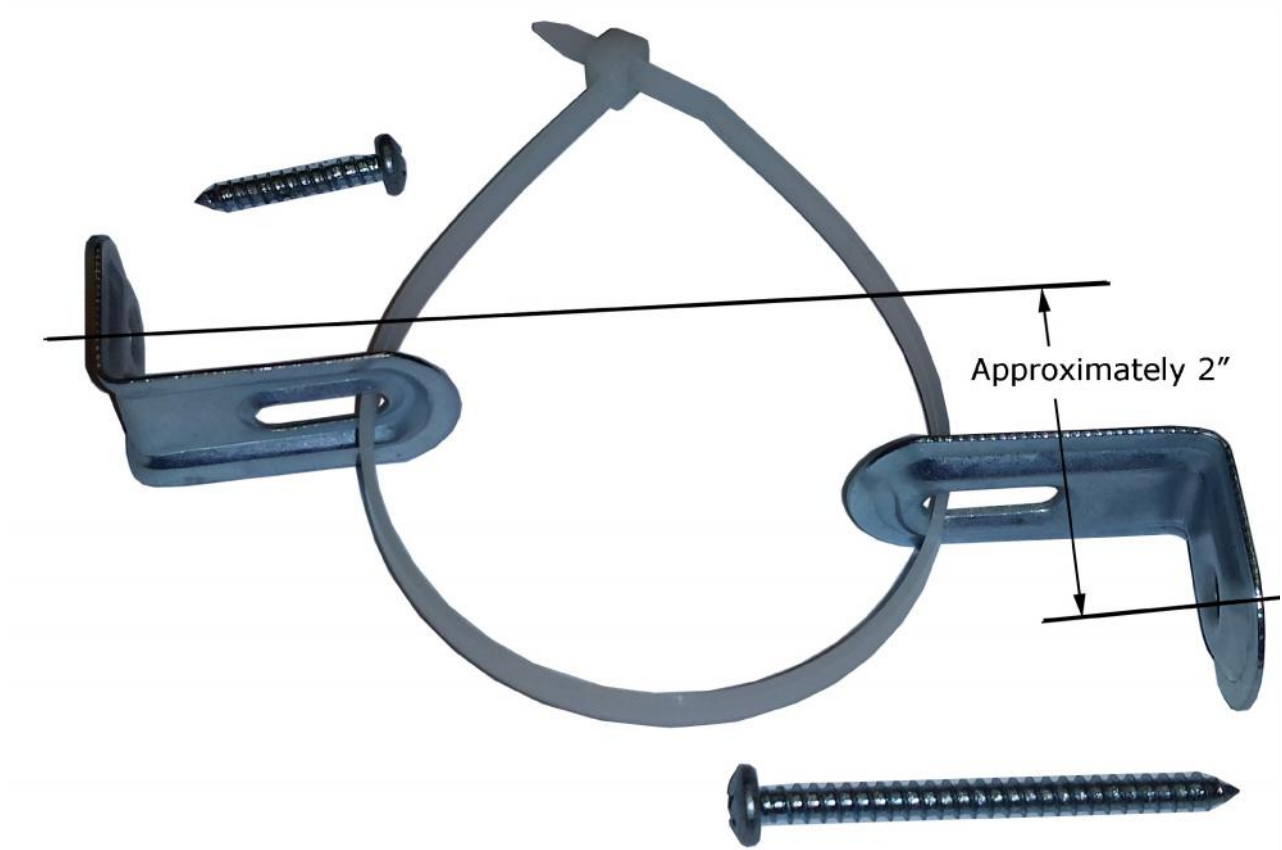

1. Attach a bracket to the back top rail or back top edge of the furniture using the shorter screw provided, through the smaller hole in the bracket. Locate this bracket in line with a wall stud.
2. Locate the other bracket on the wall over the wall stud and approximately 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the end of the restraint strap through the larger hole in each mounting bracket.
5. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
6. Confirm that the strap is securely laced and locked.