


## Armoire, item # 7016, 7016A or 7016B

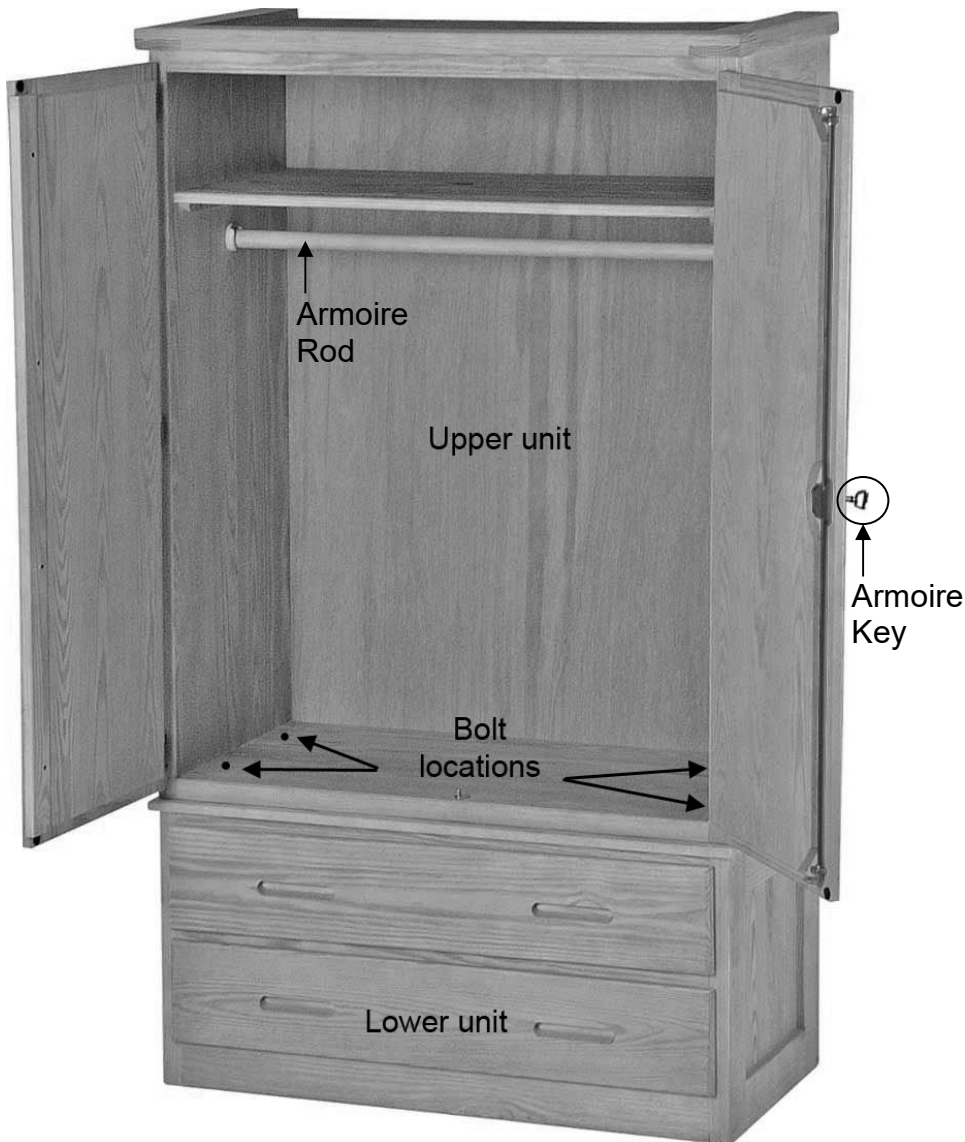

### Assembly Contents:

4 – 70mm connector bolts

1 – Allen key

1 – Armoire rod

1 – Door key

(These parts are located in a drawer)

### Instructions:

1. Place the Upper unit carefully onto the Lower unit, centred side to side and flush at the back.
2. Open Upper unit using Armoire key.
3. Insert the four 70mm connector bolts into bolt locations in Upper unit and tighten with the Allen key.
4. Place Armoire rod (for item # 7016 or 7016B only)

### Note:

Your unit may have a different shelf arrangement.



[www.cratedesignsfurniture.com](http://www.cratedesignsfurniture.com)