

# Captains Bookcase Bed Assembly Instructions

## Contents:

- (A) 1 headboard (53" tall)
- (B) 1 footboard (26" tall)
- (C) 2 bed rails (80" or 85" long)
- (D) 9 slats (twin 40-1/4" long, full 55-1/4" long, queen 61-1/4" long)
- (E) 4 connector bolts (100mm long)
- (F) 4 cross dowels
- (G) 18 wood screws (1-1/2" long)
- (H) 4 wood screws (2-1/2" long)
- (I) 1 Allen key

## Tools required:

- Slotted screwdriver (use to rotate cross dowel)
- #2 Robertson or Phillips screwdriver



## Please read all instructions completely before beginning

- Assemble the footboard (B) to each bed rail (C) using 4 connector bolts (E) with 4 cross dowels (F). Refer to **Figure 1** for correct position of bed rail, bed end and hardware.
- Position the bed rails into the headboard (A). Ensure that the rails are inserted as far as they will go.
- Fasten the bed rails to the headboard with two 2 1/2" long wood screws (H) per bed rail through the pilot holes and into the headboard, refer to **Figure 3**.
- If a 3 drawer unit is being installed, do so now. Position the drawer unit on the support rail shown on the headboard & on the matching rail on the footboard. Refer to notes & images below.
- Slats (D) slide into groove of bed rails and must be secured using 1-1/2" screws (G) through pre-drilled holes, refer to **Figure 2**. Begin by positioning a slat in the centre and screwing one end inside the groove. From the opposite side of the secured slat pull slat towards you while pushing second bed rail to secure second end of centre slat while fully inside groove. Once the centre slat is secured at both ends position the remaining eight slats equally with no spaces greater than 3-1/2" and screw into place.

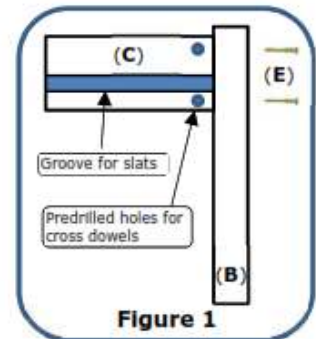
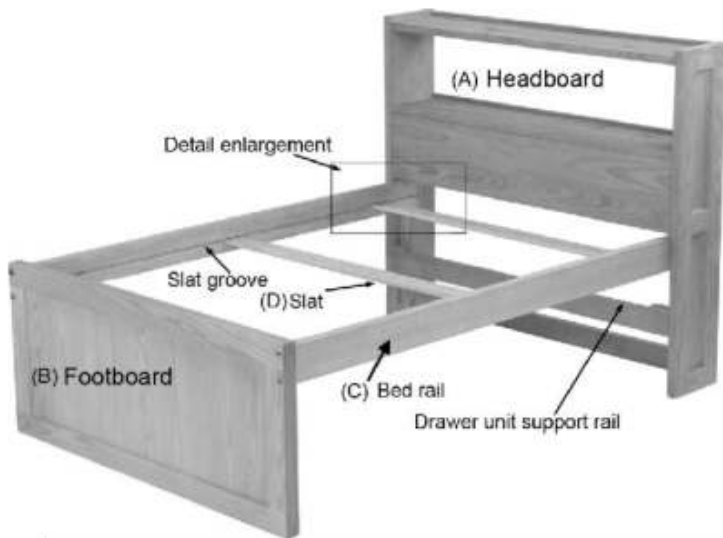


Figure 1

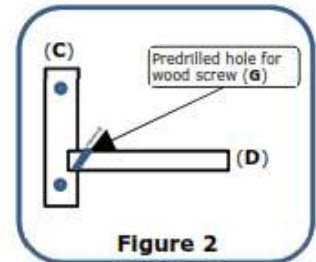


Figure 2

- ### Adding an optional 3 drawer unit
- Attach mounting blocks (J) to both end panels (if necessary).
  - Position the drawer unit on the drawer unit support rail in the picture above & on the matching rail on the footboard.
  - Screw lock block (K) to the footboard.
  - Screw the mounting block (J) to the headboard rail.


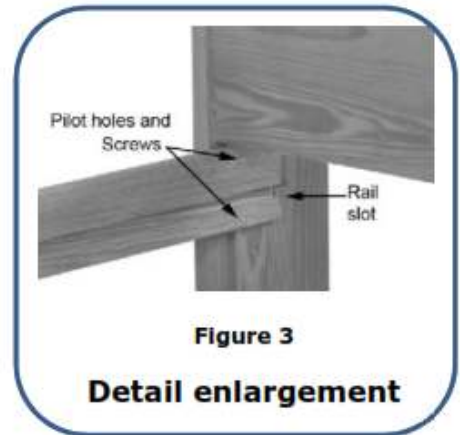


Figure 3

Detail enlargement

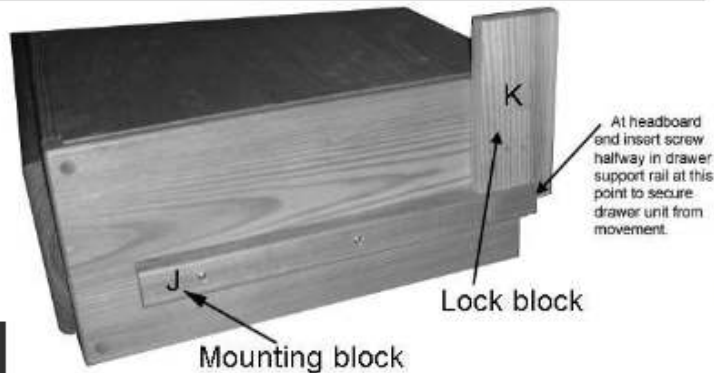