


Bookcase Bed Assembly Instructions

Contents:

- (A) 1 Headboard (43" tall)
- (B) 1 Footboard (16" tall)
- (C) 2 Bed rails (80" or 85" long)
- (D) 9 Slats (twin 40-1/4", full 55-1/4", queen 61-1/4" long)
- (E) 4 Lag bolts (5-1/2" long)
- (F) 4 Washers
- (G) 18 screws (1-1/2" long)
- (H) 4 screws (2-1/2" long)

Tools required:

- 9/16" socket or wrench
- #2 Robertson or Phillips screwdriver

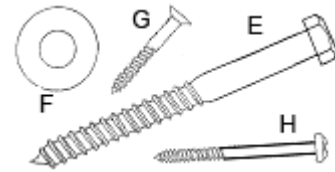

Please read the instructions completely before beginning.

1. Assemble the footboard (B) to each bed rail (C) using 4 – 4" bolts (E) with 4 washers (F). Be sure the groove on the bed rails is on the inside, close to the bottom & that the ends of the bed rails with 2 small pilot holes through the face are at the headboard end.
2. Position the bed rails into the headboard (A). Ensure that the rails are inserted as far as they will go.
3. Fasten the bedrails to the headboard with two 2 1/2" long screws (H) per rail through the pilot holes and into the headboard, refer to **Figure 3**.
4. Slide 9 slats (D) into bed rail grooves Position so that the spaces between slats are equal. Secure each slat with two 1-1/2" long wood screws (G) using predrilled holes at each end of a slat, refer to **Figure 2**.

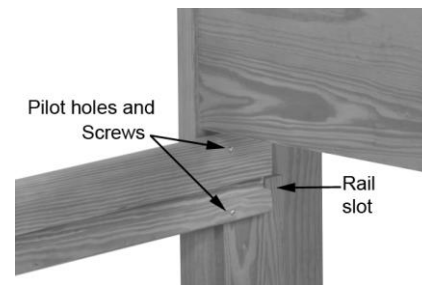
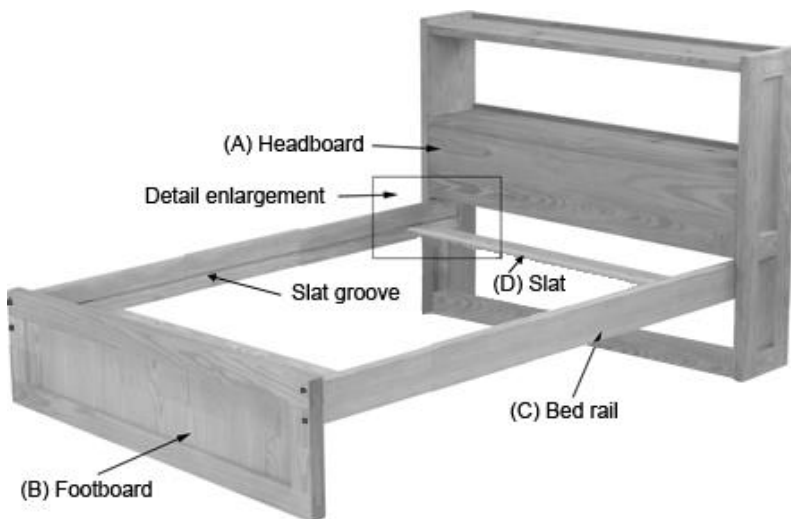


Figure 3

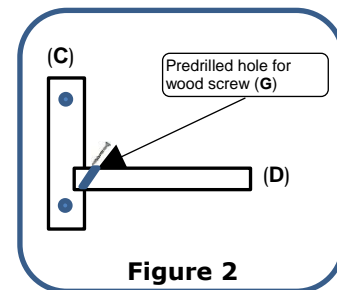


Figure 2

