Captain's Bed Assembly Instructions

Tools required:


 $^{9}/_{16}$ " socket or wrench

#2 Robertson or Phillips screwdriver


Contents:

- (A) 1 headboard (26" or 39" tall)
- (**B**) 1 footboard (26" or 39" tall)
- (C) 2 bed rails (75" or 80" long)
- **(D)** 9 slats (twin 40-1/4", full 55-1/4", queen 61-1/4", king 79-1/2" long)
- (E) 8 Lag bolts (5-1/2" long)
- (F) 8 Washers
- (G) 18 wood screws $(1-\frac{1}{2}'' \text{ long})$
- (H) 1 centre rail (king size only)

Please read all instructions before beginning



- Assemble bed using 2 bed rails (C), 1 headboard (A), 1 footboard (B), 8 lag bolts (E), and 8 washers (F). Refer to Figure 1 for correct position of bed rail, bed end and hardware. Be sure the groove on the bed rails is on the inside, close to the bottom. Support rails must be on the inside of the bed.
- 2. King bed only: slide centre rail **(H)** into the slots in the headboard and footboard. If a trundle bed is being added, move the centre rail brackets off-centred as required.
- 3. If a 3 drawer unit is being installed it should be placed on the support rails before the bolts are fully tightened. Position the drawer unit on the support rail shown on the headboard & on the matching rail on the footboard.
- 4. Slide 9 slats (**D**) into bed rail grooves Position so that the spaces between slats are equal. Secure each slat with two 1-1/2" long wood screws (**G**) using predrilled holes at each end of a slat, refer to **Figure 2**.

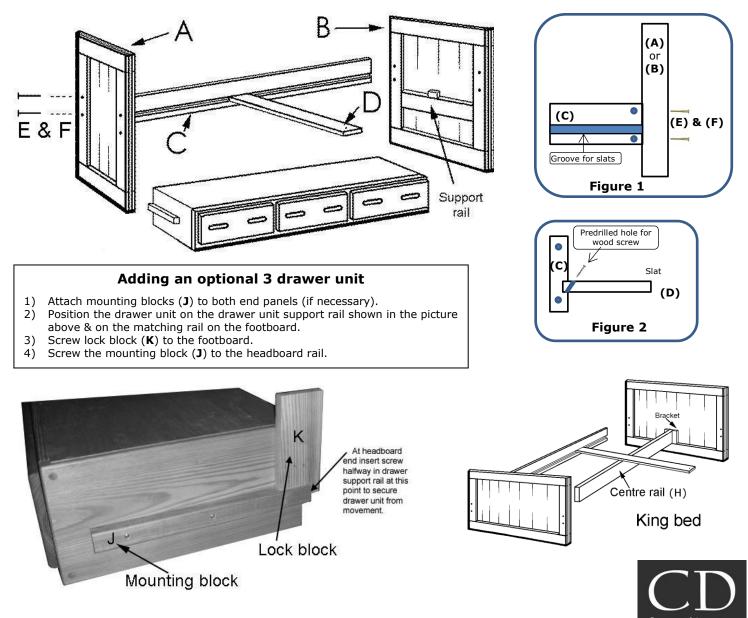

furniture