




1200 SERIES SECURED CUSHIONS

Tools required: #2 Robertson or Phillips screwdriver

Hardware required: 3x wood screws (two 1-3/4" long & one 1" long per seat)

1. Slide the back upholstery assembly into the frame.
2. Fasten the back by positioning a 1-3/4" long screw to go through back upholstery into frame as shown in Picture 1. Be sure head of the screw is almost flush with upholstery. Repeat with the other side as shown in Picture 2.

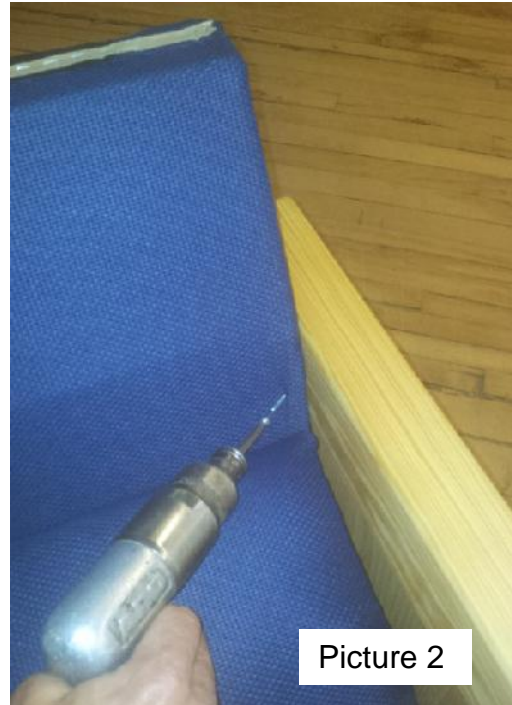

3. Fasten the seat cushion by first placing the seat cushion into the frame, as shown in Picture 3. Tip the entire frame onto its back to access the end of the strap attached to the seat cushion, as shown in picture 4. Fasten a 1" long screw through the strap into the bottom of the back rail of the frame.

