



1000 & 1200 SERIES



Tools required: Hammer, #2 Robertson or Phillips screwdriver

- A. Back
- B. Seat
- C. 2 – Arms
- D. 10 – 3” wood screws
- E. 10 – Wood plugs
- F. 2 - 1 ½” Wood screws


Reverse all steps for dis-assembly

Please read instructions completely prior to starting.

1. Insert the front rail into the first arm at point G. The back rail will sit on the bottom rail of the arm. Fasten with 2 – 3” wood screws – do not fully tighten. Repeat with the other arm.
2. Place the back between the arms. Align flush at the back & top of the arms. Fasten each arm to the back with 3 – 3” screws.
3. Tighten the front rail screws.
4. Fasten the back rail to the arms with 1 ½” screws into the bottom rail of the arms at point H.
5. Insert wood plugs into arm screw holes. Gently hammer flush with the surface of the arms.
6. Insert fabric & cushions.

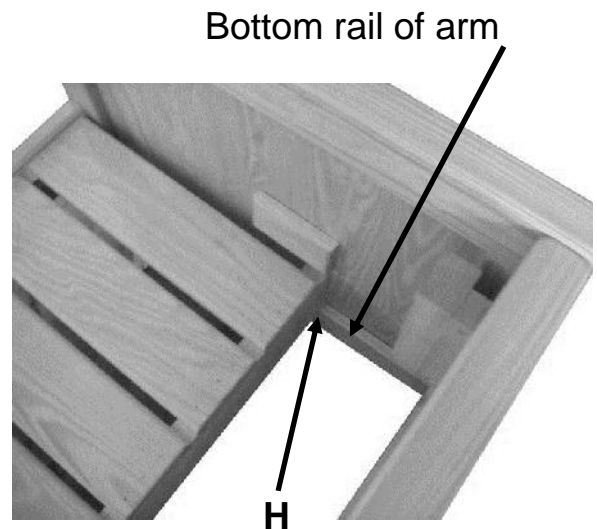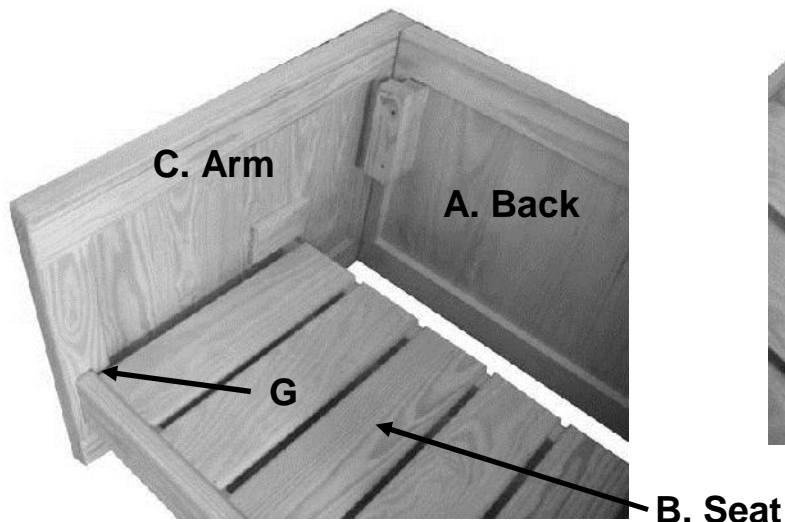

1201, 1202, 10203, 1204 and 1265
back style shown above and to the left.

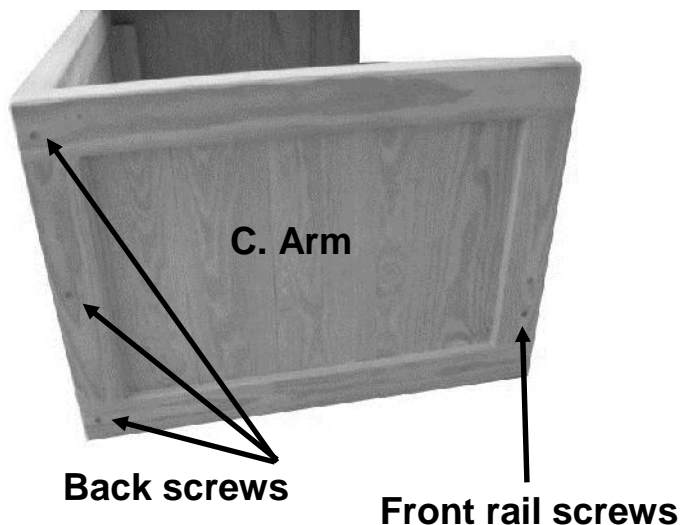

1001, 1002, 1003, 1004
back style shown above.