

# NOSY PEPPER

## *Patterns*



## *Collar Wrap Tutorial*


# Materials Required:

- (1) 4" x 8" piece of vinyl, cork or other non fraying material  
(3.25" x 8" for small), (6" x 8" large)
- Medium weight stabilizer
- 3 pairs of Kam Snaps or similar plastic snap


**Note: This design does not include a step for adding a backing, as that would add additional bulk. If you want to add a backing please do so at the second step and be sure to use a very lightweight non fraying material such as OLY-Fun.**

- Small is designed for 5/8" Wide collars and suitable for 1/2" fonts*
- Medium is designed for 1" wide collars and suitable for 3/4" fonts*
- Large is designed for 1.5" wide collars and suitable for fonts up to 1.25"*


1) Run the first step of the design directly on your stabilizer.

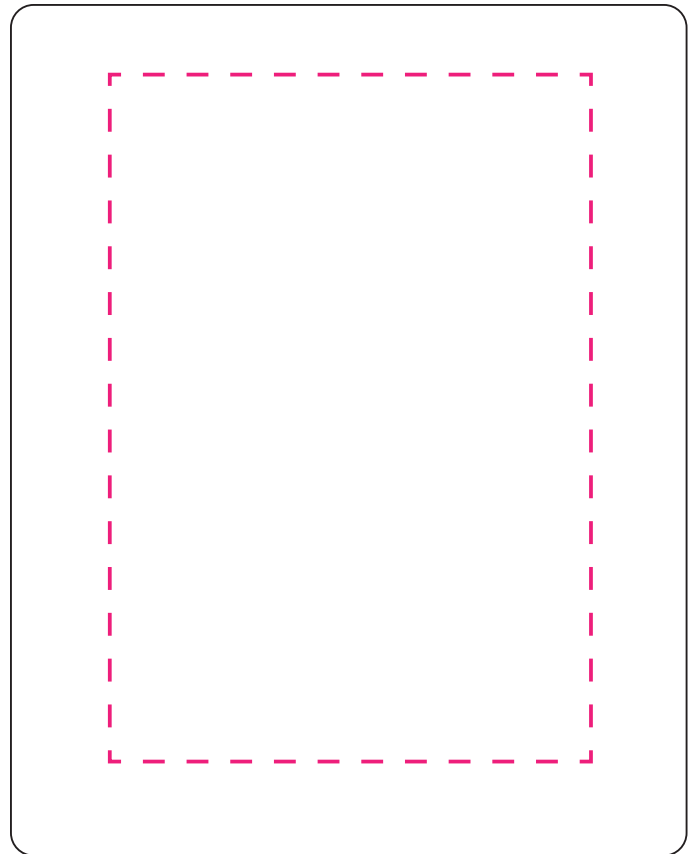


2) Place your material directly over placement stitches and secure in place.

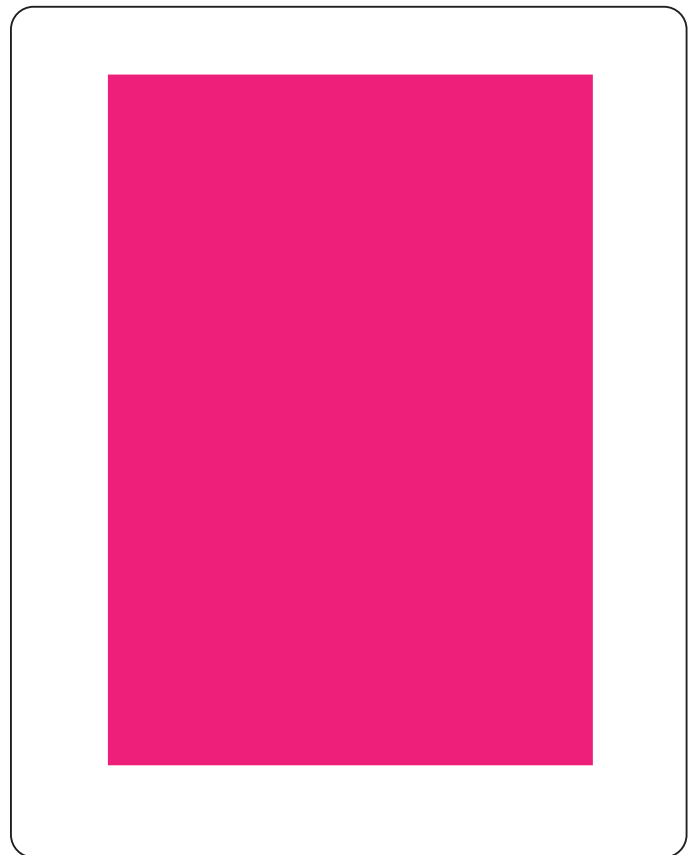

3) Run the remainder of steps on your machine. This will stitch out the snap placements and outer edge. Remove from hoop and removed excess stabilizer. Trim around all edges approximately 1/8" away from the line of stitching.

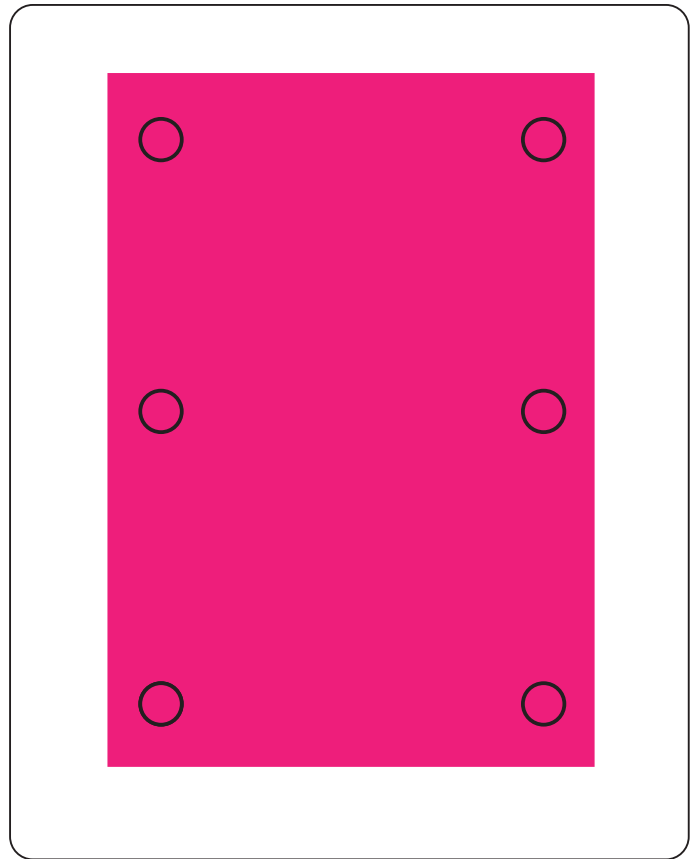

4) Install Kam snaps per manufacturer's directions. They should be installed as illustrated in the diagram at right. With the right side of the wrap facing up, install one side of the snaps with the FLAT backing on the right side of the wrap. Then install the other side in the opposite fashion so that the FLAT backing is to the WRONG side of the wrap. Be sure to install all male halves on one long side of the wrap and all female halves on the other.

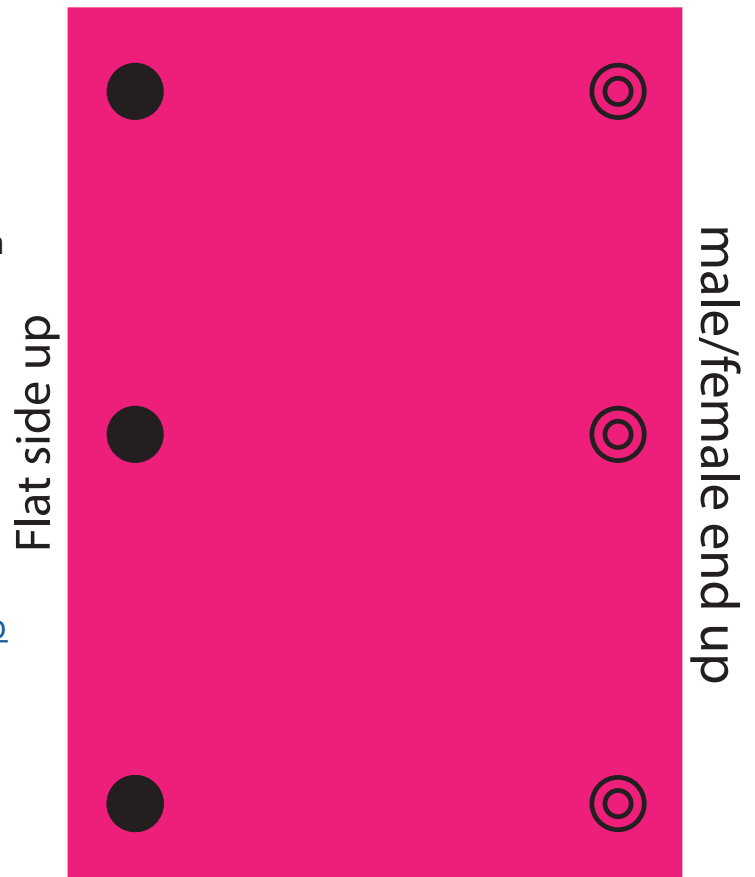

Please share your makes in our [Facebook Group](#) or use the hashtag #NosyPepperEmbroidery on Instagram so we can all see your makes!

Find more designs on the website: [www.NosyPepperPatterns.com](http://www.NosyPepperPatterns.com)