

# NOSY PEPPER



*Teacher Card Case Tutorial*

# Materials

## Snap Version

- (1) 3.5" x 6" Vinyl for front
- (1) 3.5" x 6" Vinyl for front backing
- (1) 3.5" x 3.5" Vinyl for pocket
- (1) pair of Kam snaps
- Stabilizer
- Masking Tape

## Eyelet Version:

- (1) 3.5" x 4.5" Vinyl for front
- (1) 3.5" x 4.5" Vinyl for front backing
- (1) 3.5" x 3.5" Vinyl for pocket
- (1) Eyelet
- Stabilizer
- Masking Tape


1) Run step one of the design directly on stabilizer to run placement stitches. Place Vinyl for front on top of placement stitches, making sure all stitching is covered by vinyl. Run step 2 of design to tack down front Vinyl.



2) Run all “design” steps, to stitch the design on the front of your vinyl. The number of steps will vary depending on the design. If you are NOT stitching any design on your case, then skip to step 3.




3) Flip the hoop over and place the vinyl for the front backing over the stitches on the back of the hoop. Make sure all stitches are covered and secure vinyl in place with tape. Return hoop to machine. Run the next step to tack down the vinyl.

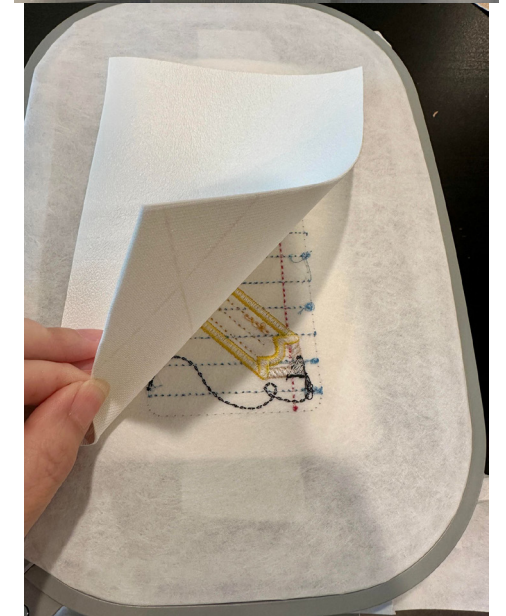

4) Using applique scissors, cut the hole in the center of the design. Be sure to cut through both layers of vinyl. Cut as closely as possible to the stitches, using care to not cut any stitches.

*\*Tip\* Use a seam ripper to start in the center and make a slit that you can get the tips of your scissors in to start cutting.*

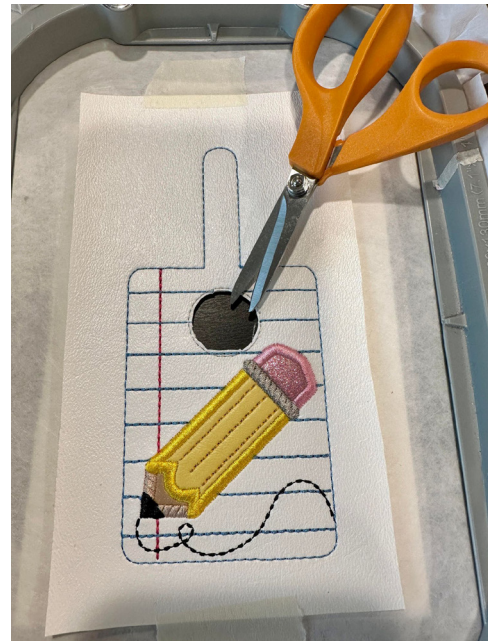


5) **\*\*Optional\*\*** Use a small piece of tear away stabilizer over the hole to support the satin stitches that will stitch next. This is especially helpful for white, thinner, or softer vinyls.




6) Run the next step to run the satin stitches around the hole. Remove stabilizer from hole (if used).




7) Run the next step to stitch the placement lines for the back pocket. Remove hoop from machine. Take the Vinyl for pocket and place the top edge at the placement lines. Secure in place with tape and return hoop to machine.

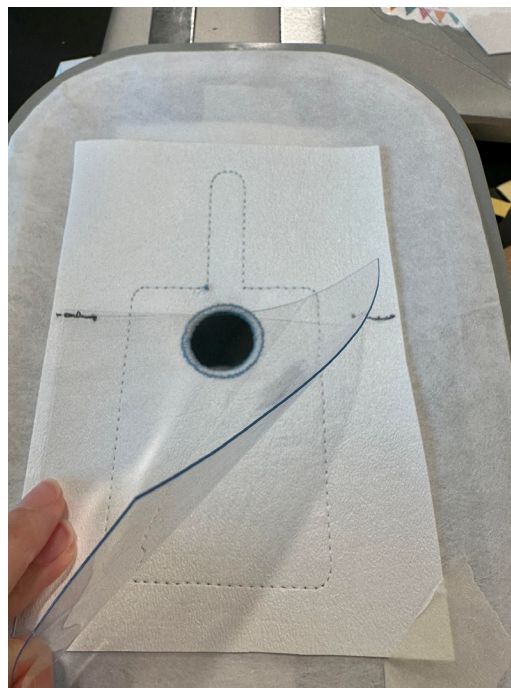

8) Run the last step of the design to secure the back pocket.

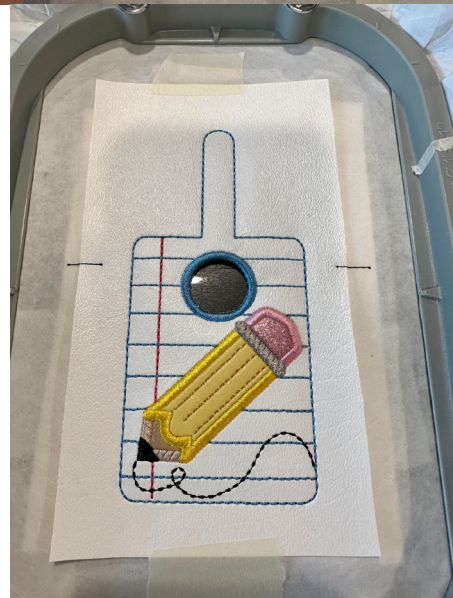

9) Remove from hoop and trim case, about 1/4" from stitching.

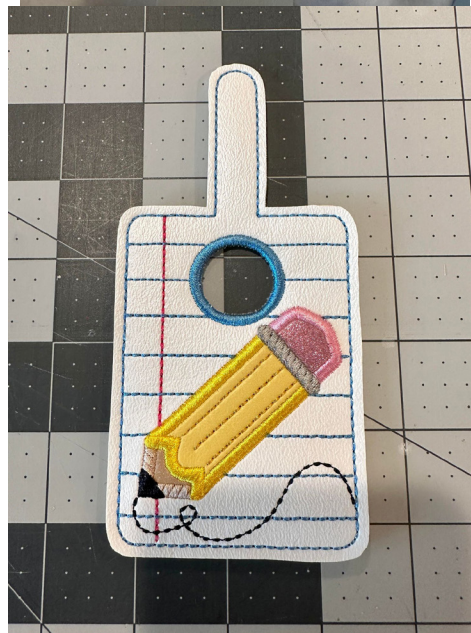

10) Install Kam snaps (for snap version) to the top of the tap and top of the back pocket. For eyelet version install eyelet at the top.



Please share your makes in our [Facebook Group](#) or use the hashtag #NosyPepperEmbroidery on Instagram so we can all see your makes!

Find more designs on the website:  
[www.NosyPepperPatterns.com](http://www.NosyPepperPatterns.com)

