

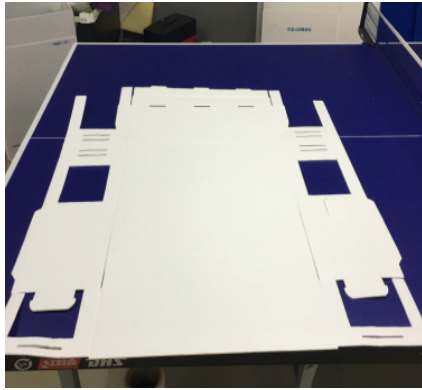
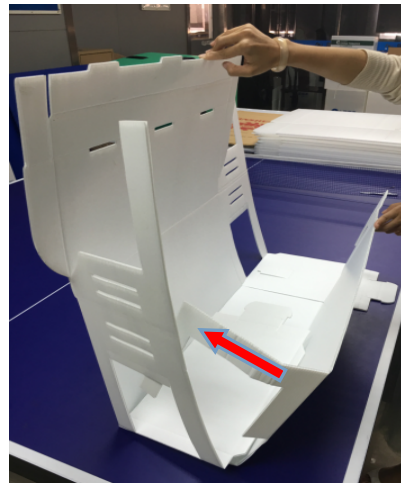


Assembly Instructions

1. Firstly, Let's arrange this cut finished Corflute sheet.

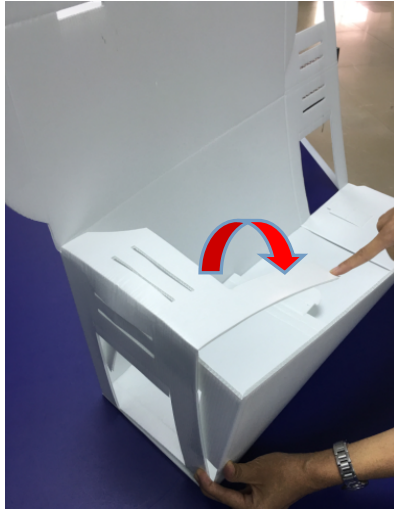

2. Bend the front and back sides as the photo below.

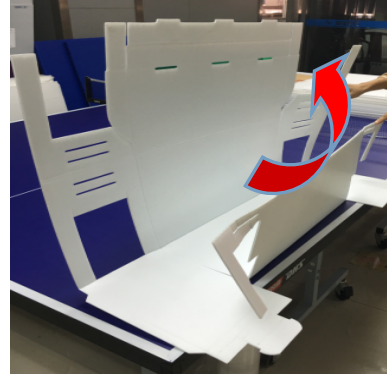

4. Bend this flap as the Direction of arrow .




3. Let's assembly this end first, insert the flap with Arrow in the middle .




5. Fold this flap as the arrow direction.




6. As the photo shows.




7. Insert the flap into the top hole .



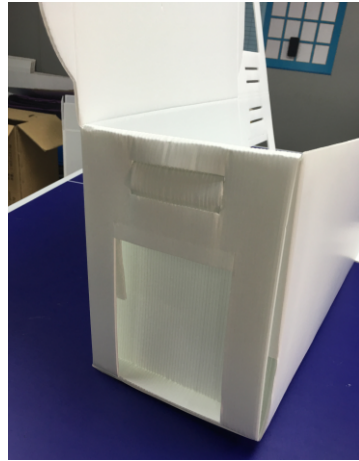

8. Insert this flap in the second hole.

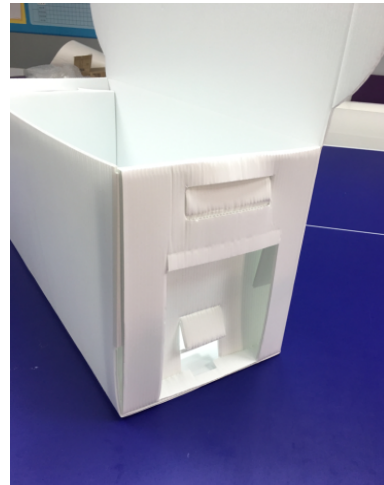

9. At last, let's assembly the cover .





10.The box is ok now .