

Chev Utility; Model 2014

Nudge bar with 2 inch oval cross member

PN - 10018T



FITTING INSTRUCTIONS



60 Minuten

PART NUMBER

227


Revision I: 12-11-2014




REQUIRED TOOLS



3/ 8 DRIVE

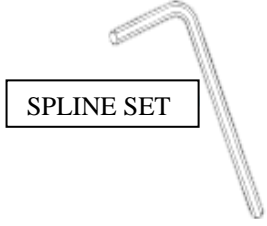



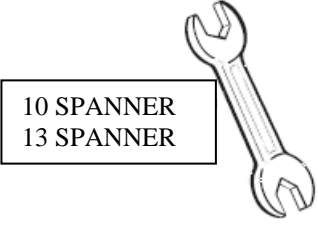







SPLINE SET







10 SPANNER
13 SPANNER



SCREW
DRIVER
SET

a		M6X25; 8.8 (EG)	4
b		M6X20; 8.8 (EG)	2
c		M6X20X1.6; (EG)	4
d		M6X16X1.6; (EG)	4
e		M6; 8.8 (EG)	2
f		M6; (EG)	6
g		M8; (A2)	4
h		M8X20X1.5; (A2)	8
i		M8; (A2)	4
j		M8X20; (A2)	4

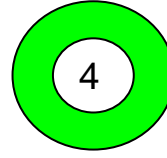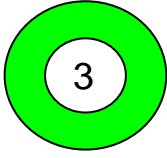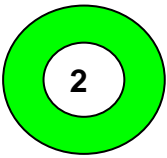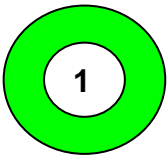


PRECAUTIONS

Ensure that your workmanship is of the highest professional standard and that you do not scratch or damage the vehicle or accessory to be fitted.


Before commencing with fitment, carefully unwrap the product and ensure that the kit is complete and that the part is free of damage.

INSTALLATION PROCEDURE

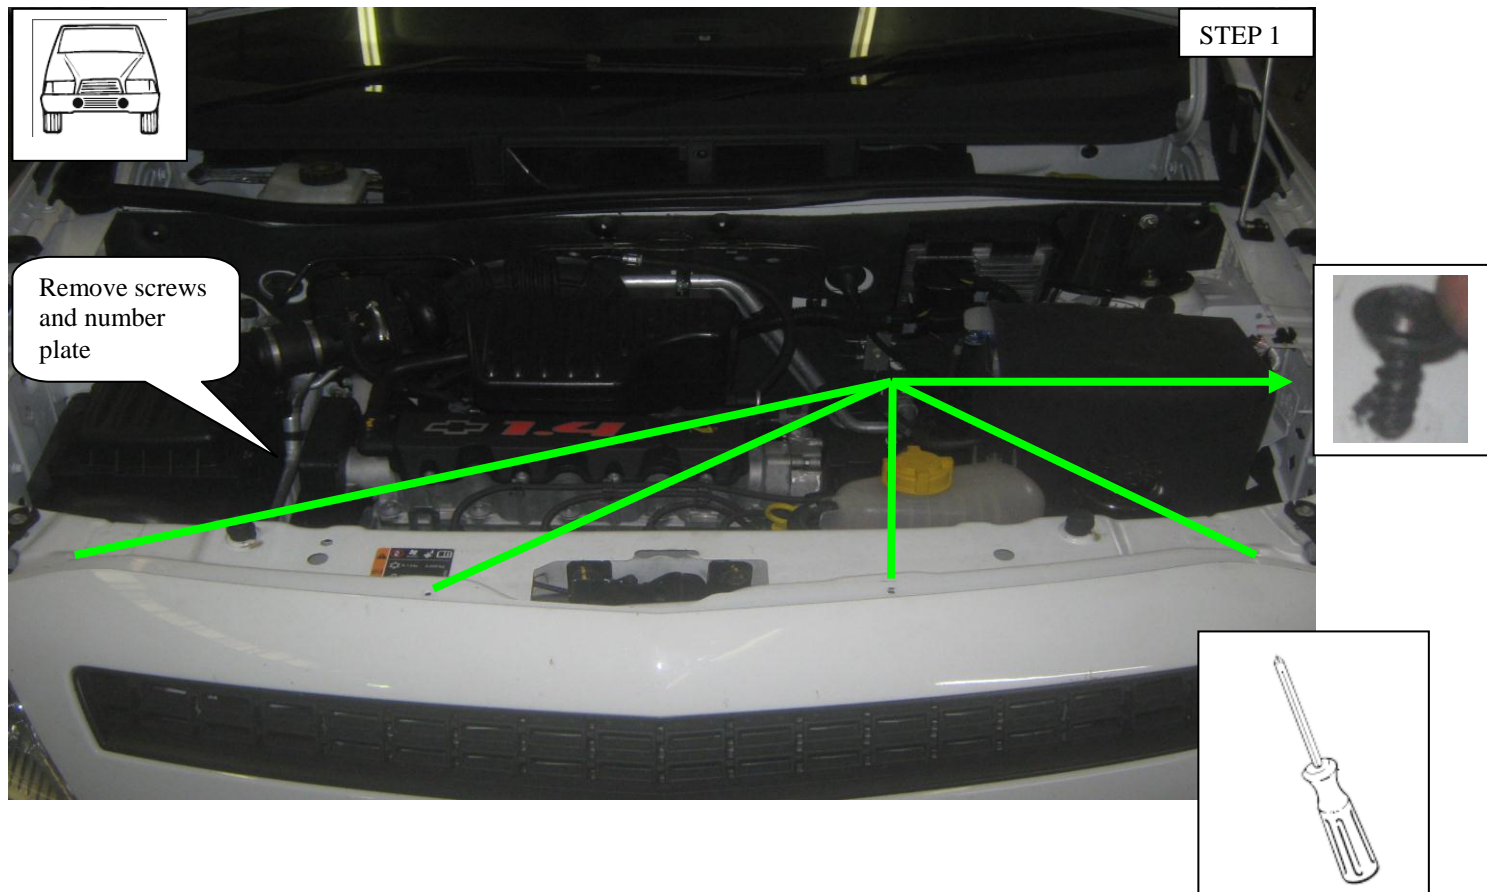

STEP 2





Pry bumper back gently to bolt brackets inside.

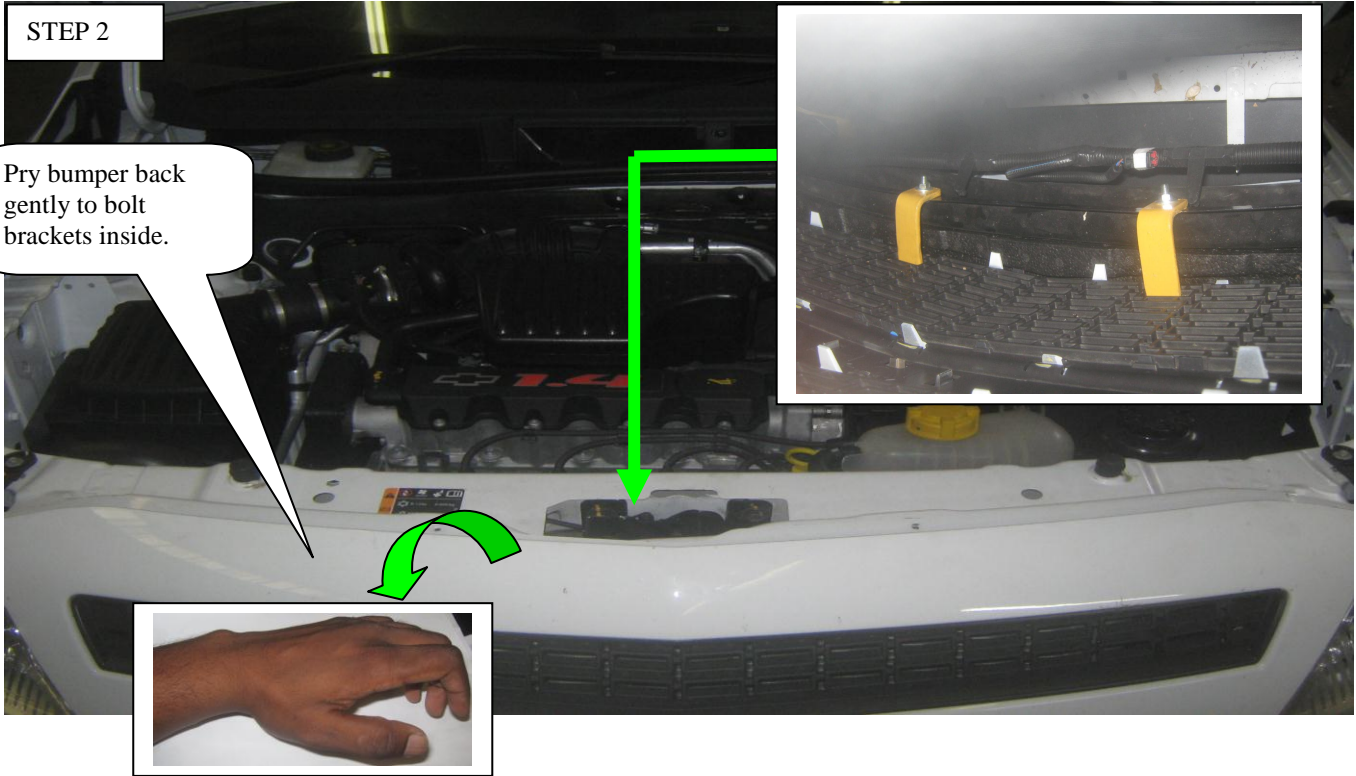




STEP 3

REMOVE FROM ANCHOR POINTS



BOLT TO HOLES

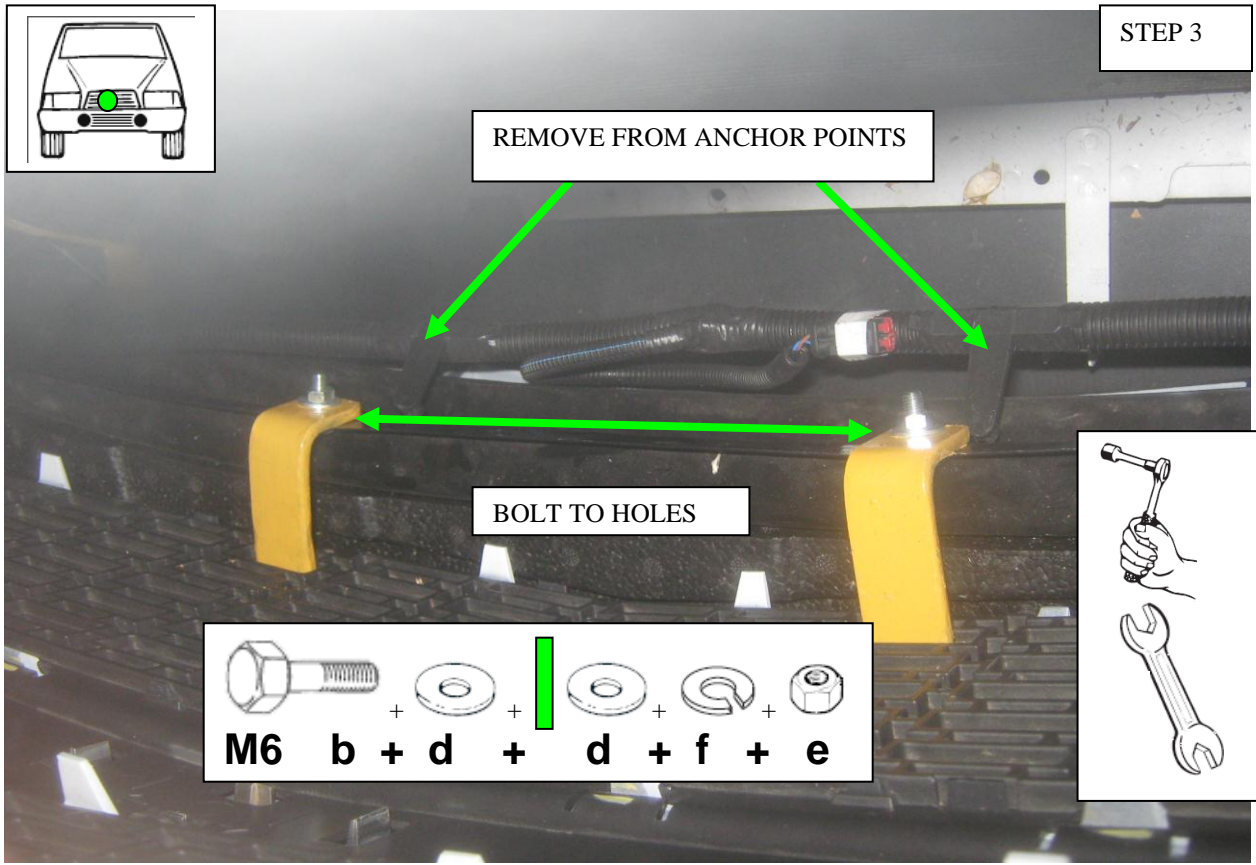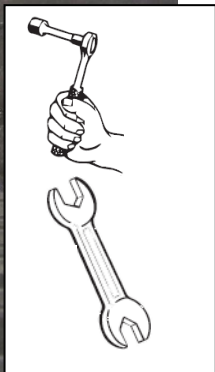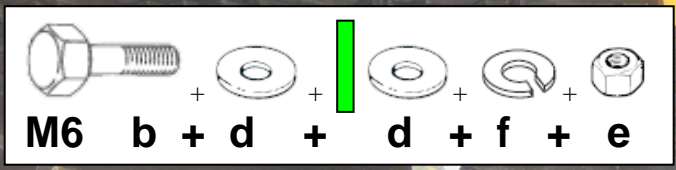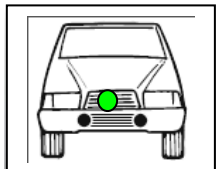




STEP 3 A

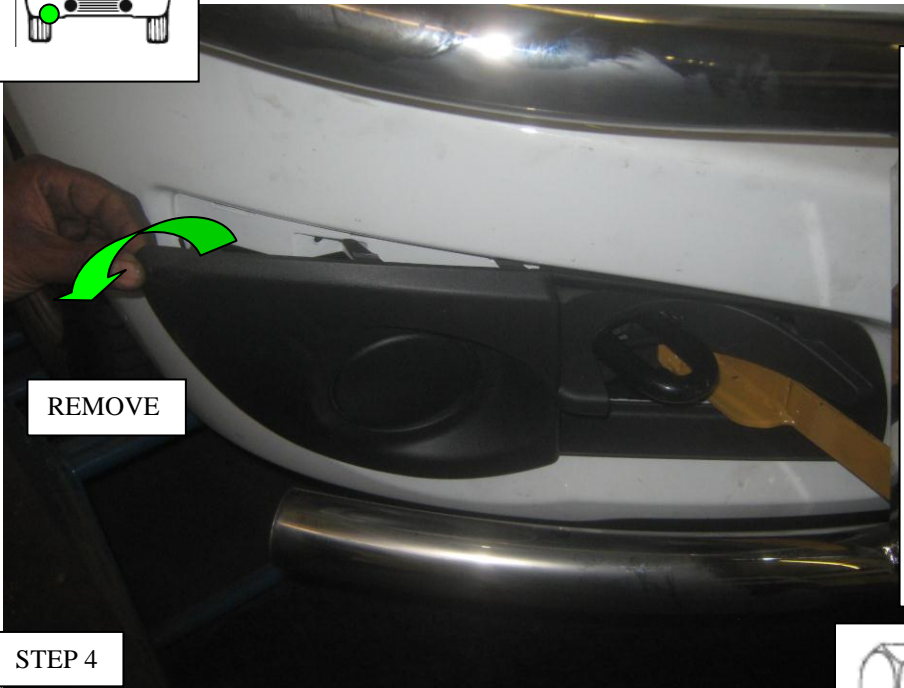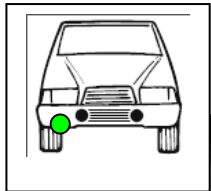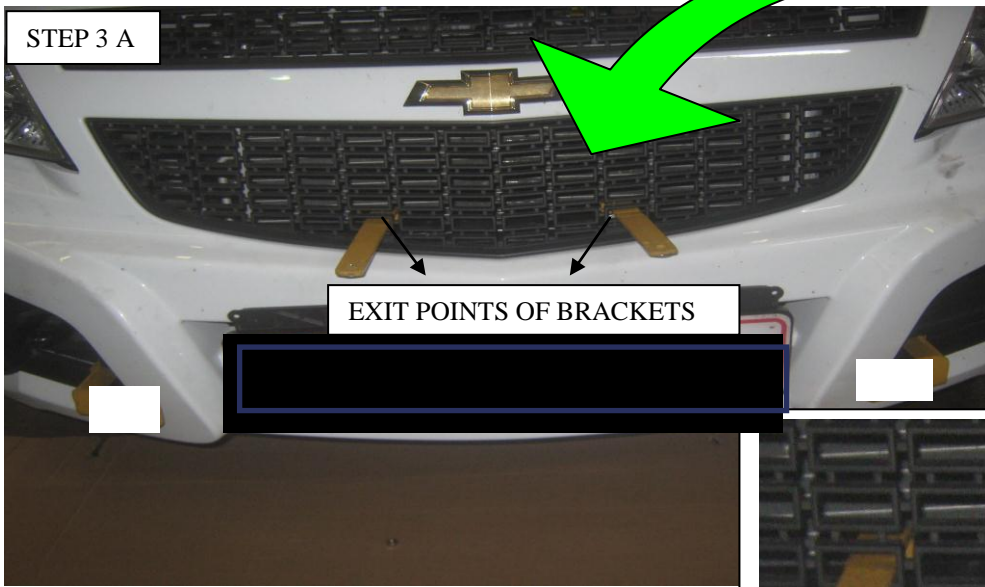

STEP 4

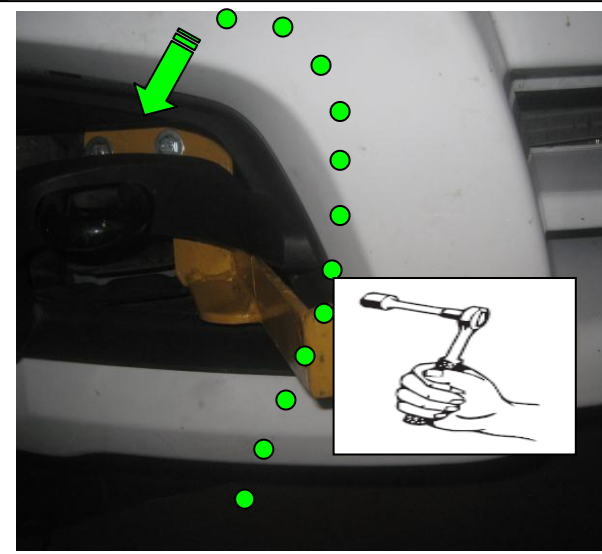




M6 a + f + c

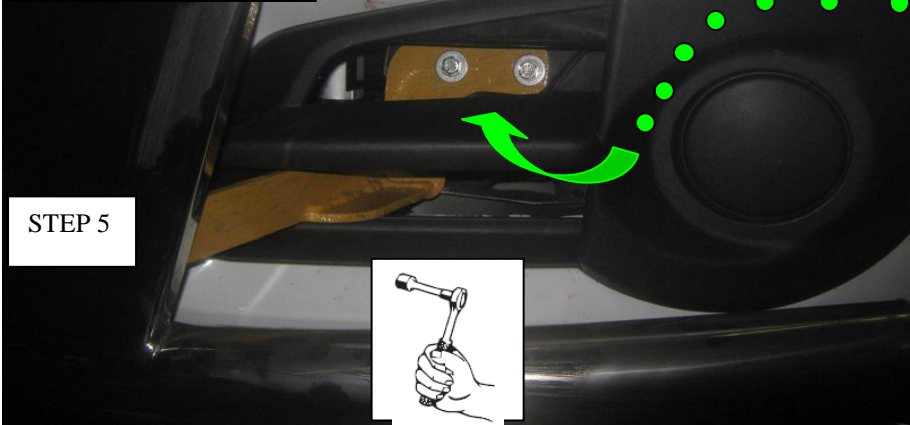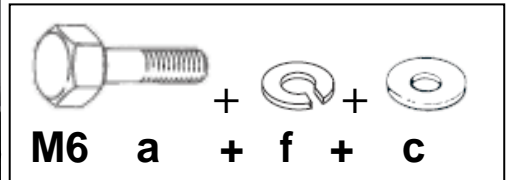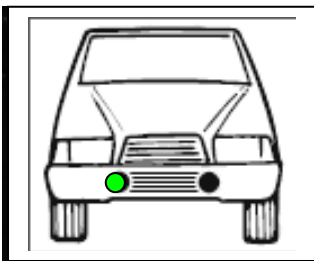

STEP 5



STEP 6

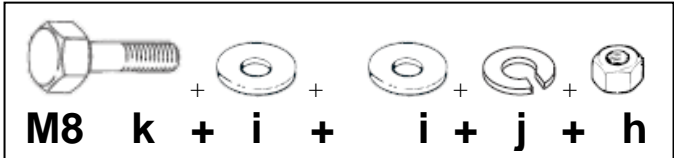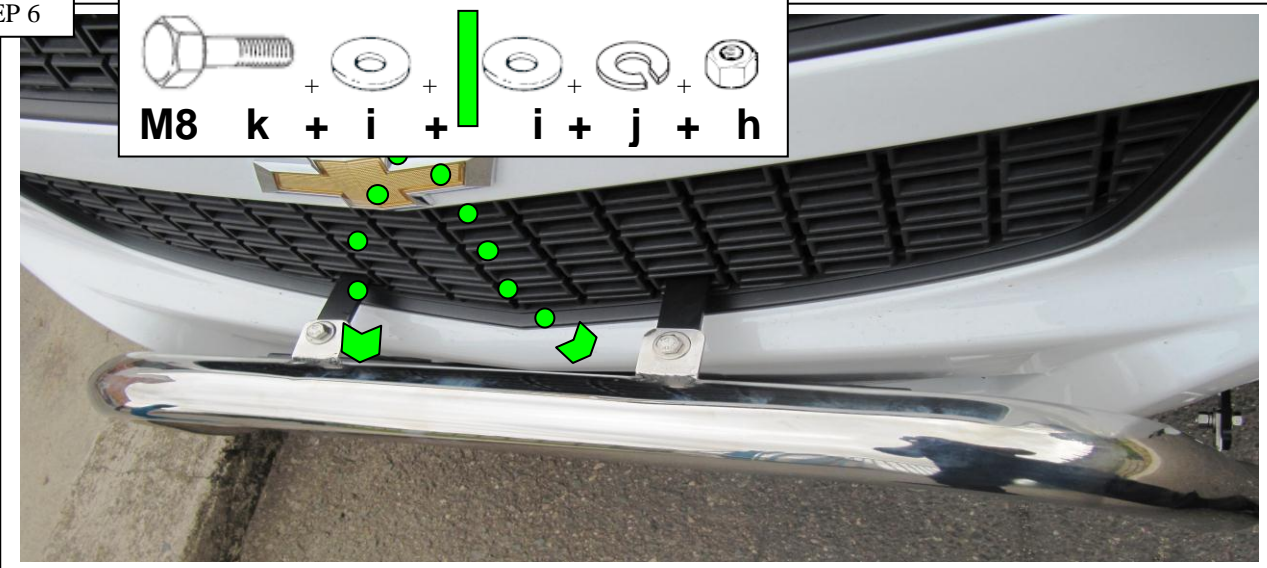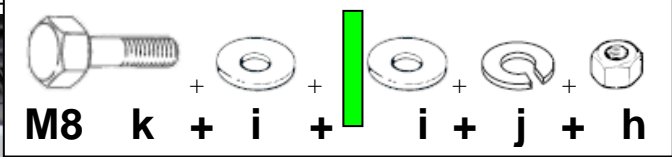

STEP 6 A

