

ACCESSORY FITMENT INSTRUCTION

Product

Nissan NP200 Styling Bar (2 Piece)

Part no.

(170014T)(BS-170014)_(Tracking No. 102)



30
Minutes

Models : All

Page 1 of 4

Date : 10-DEC-2018

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	2	M8 Set Screw x 25mm Long			
B	2	M8 Spring Washer			
C	2	M8 Flat Washer $\phi 22 \times 1.6\text{mm THK}$			
D	2	Side Bracket (PS & DS)			

Additional equipment/Material needed for fitment :

Qty		Qty	
	Spanner Set		
	Ratchet and Socket Set		
	Torque Spline Set		
	Allen Key Set		

Precautions during fitment:



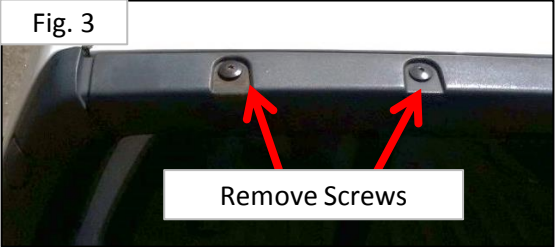

Ensure that you are using the Correct PPE Clothing during Installation.

Do not cause any damages to the vehicle.

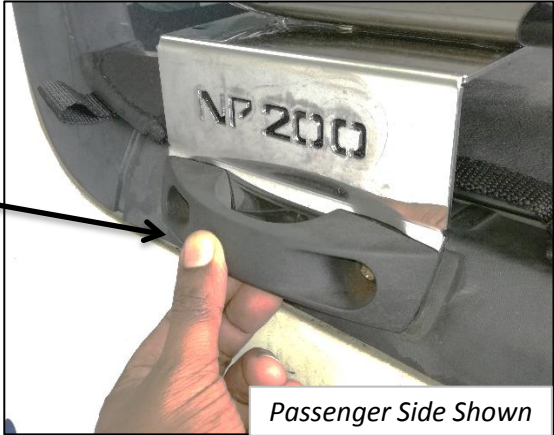
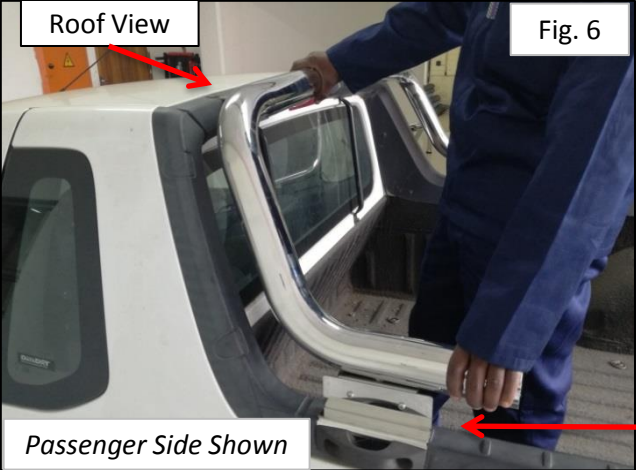
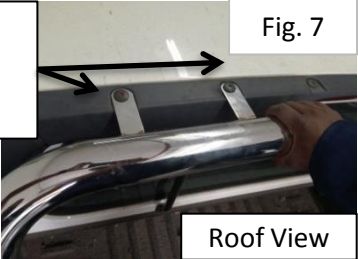
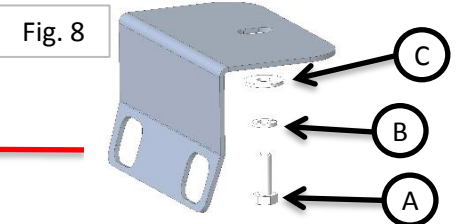
Directions for use:

Read all the Instructions carefully before installation.

Fitment Instruction: Nissan NP200 Styling Bar (2 Piece)

Visual / Graphic Illustration	Step #	Description/Method
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Fig. 1</p> <p>Passenger Side</p> </div> <div style="text-align: center;">  <p>Fig. 2</p> <p>Remove Screws</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><i>Hint:</i> T30 Torque Spline</p> </div> </div> </div>	<p>1</p>	<p>Locate Side Handles and temporarily remove them as shown in figure 1 & figure2 as this will be the bottom mounting position.</p>
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Fig. 3</p> <p>Remove Screws</p> <p>Passenger Side</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><u>Do not Dispose of the screws removed as they will be used in the fitment of the Styling Bar</u></p> </div> </div> <div style="text-align: center;">  <p>Fig. 4</p> <p>Picture Showing roof of vehicle</p> </div> </div>	<p>3</p>	<p>Locate the Roof Screws and temporarily remove them as shown in figure 4 and figure 3 as this will be the Top Mounting Position.</p>

Fitment Instruction: Nissan NP200 Styling Bar (2 Piece)

Visual / Graphic Illustration	Step #	Description/Method
<div data-bbox="176 544 501 715" style="border: 1px solid black; padding: 5px; width: fit-content;"> Replace Side Handle and Screws. </div> 	<p>4</p>	<p>Fit the bracket to the bottom mount position as shown in figure 5. Do the same to the other side of the vehicle.</p>
 <div data-bbox="719 906 898 1043" style="border: 1px solid black; padding: 5px; width: fit-content;"> Replace Screws </div> 	<p>5</p>	
	<p>Complete</p>	

Final step

Page 4 of 4

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

