



Putting your protection upfront



43 Circuit Road, Westmead, KwaZulu Natal, South Africa
PO Box 1098, Gilllits, 3603, KwaZulu Natal, South Africa
Tel: +27 31 7002726
Fax: +27 31 7002735 / 0665305957

Fitting INSTRUCTIONS

PAJERO 2010 NUDGE AND SUMP
PART NO : 21078
DATE : 23 – 04 - 2010

VERY IMPORTANT

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING WITH FITMENT

KIT CONTENTS

FASTENERS

AMT	SIZE	DESCRIPTION	TYPE	FINISH
8	M8X22X1.6	FLAT WASHERS		EG
4	M8X25	SETS	8.8	EG
2	M8X70	SETS	8.8	EG
2	M8	SPRING WASHERS		EG
4	M8	NYLOCK NUTS		EG
4	M10X25	SETS	8.8	EG
4	M10	HEX NUTS		EG
8	M10X25X2	FLAT WASHERS		EG

1 X TOP MOUNT BRACKET
2 X BOTTOM MOUNT BRACKETS
2 X SPACER TUBES 21 ODX36 MM LONG

REQUIRED TO FIT

- SOCKET SET
- 2 OF 13 SPANNER SET
- 1 OF 12 SPANNER SET

- 1 FLAT SCREW DRIVER
2 OF 17 SPANNERS

WARRANTY

1. If any product manufactured by ARTAV is found to be defective during a period of twelve (12) months after the date of purchase, ARTAV shall repair (at ARTAV's discretion) the defective product or part.
2. Any defect in a product distributed by ARTAV, but not manufactured by ARTAV, shall be dealt with in accordance with, and to the extent of, the warranty offered by the manufacturer of the product.
3. ARTAV does not warrant that the products manufactured by it comply with the laws of the place where the products are being purchased or used. It is the sole responsibility of the Purchaser to ascertain whether products being purchased – or the affixation of these products to any other object – comply with the local laws.
4. Except to the extent described in this warranty, ARTAV shall not be liable for any other claim, including those claims arising from faulty design, the use of the product on any indirect special or consequential damage or injury to any person, company or any other entity.
5. Modification or alteration to any product manufactured by ARTAV to enable fitment in conjunction with other vehicle accessories or modifications (e.g. lift kits) will void any warranty claims.

PRECAUTIONS

Ensure that your workmanship is of the highest professional standard and that you do not scratch or damage the vehicle or accessory to be fitted.

Before commencing with fitment, carefully unwrap the product and ensure that the kit is complete and that the part is free of damage.


INSTALLATION PROCEDURE

Pic 1




STEP 1

THIS PICTURE SHOWS HOW THE BRACKETS ARE ATTACHED FROM THE VEHICLE TO THE BAR

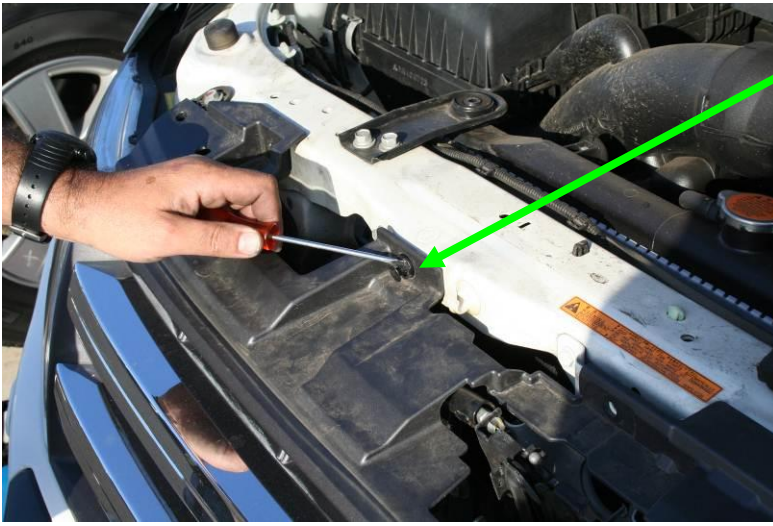

STEP 2 REMOVE THE GRILL BY TAKING OFF THE PLASTIC CLIPS AS SHOWN

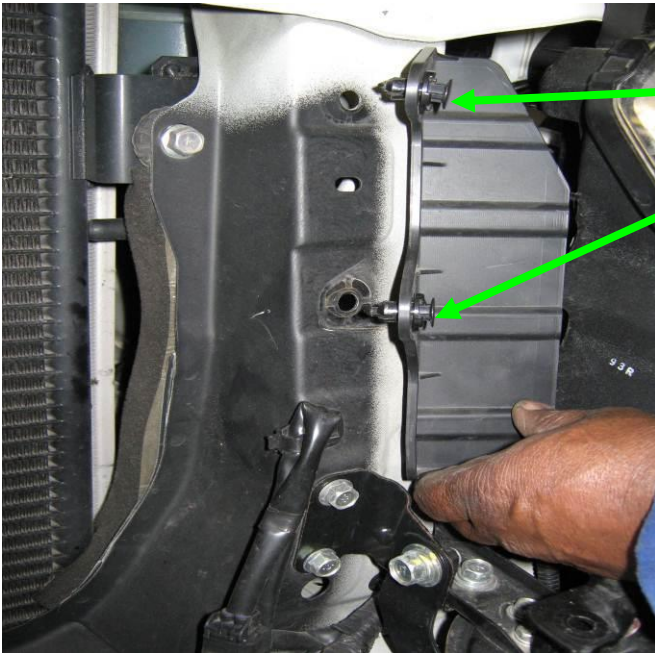

STEP 3 ALSO REMOVE THE PLASTIC PANELS NEAR THE HEADLIGHTS



STEP 4 FIT THE LONG BRACKETS SHOWN IN THE PICTURE TO WHERE THE PLASTIC PANELS WAS TOGETHER WITH WITH THE PLASTIC PANEL AND SECURE WITH M8X20 BOLTS , WASHERS AND NUTS



STEP 5

REFIT GRILL WITH THE 2 LONG BRACKETS PROTUDING THROUGH THE LOWEST OPENING OF THE GRILL



STEP 6

USING THE NUMBER 12 SOCKET REMOVE THE TWO BOLTS HOLDING THE FRONT OF SUMP GUARD



STEP 7

USING THE M 8X60 SETS PROVIDED, BOLT THE BOTTOM BRACKETS TO THE SUMP GUARD.NB. THE SPACER TUBES FIT BETWEEN SUMP GUARD AND BRACKETS. LOOSLEY BOLT THE NUDGE BAR TO THE 4 PROTUDING BRACKETS

STEP 8

**ALIGN NUDGE BAR TO THE VEHICLE
AND TIGHTEN ALL BOLTS.IT MAY BE
NECESSARY TO READJUST THE HIGHT
OF THE NUMBER PLATE**

