



## GWM Poer 2019 Acrylic Bonnet Protector Installation Instruction (Passanger version)

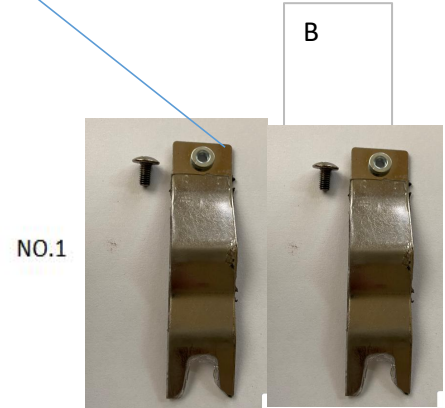

**IMPORTANT:**Ensure that the clips are positioned over anti-abrasive tape and does not come into contact with any of the bonnet's paint work.Failure to do so may result in permanent paint damage.

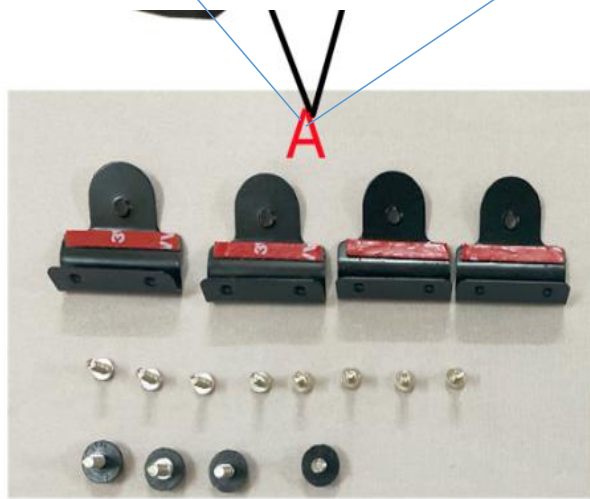

1. Open the bonnet cover, loose the chrome cover on top



2. slip on the B clips to the gap between the bonnet cover and the chrome cover. Position under the screw hole of the bonnet protector.





3. Position the A metal clips as the pics showed to the bonnet cover



4. Loosely secure the bonnet protector to the three fixed A metal clips with the small screws. Check the bonnet protector is sitting centrally on the bonnet. Tighten all three screws.

