


## SOS DIAGRAM - SHERCO 2-STROKE

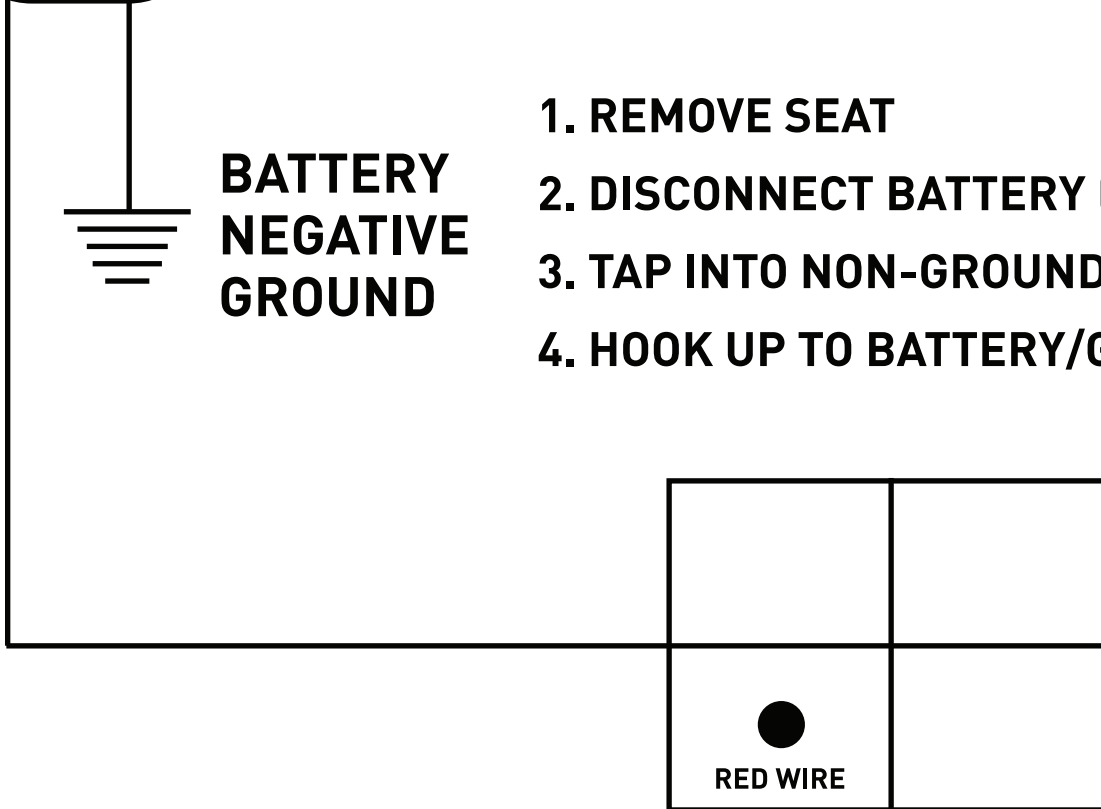

**BATTERY  
NEGATIVE  
GROUND**

- 1. REMOVE SEAT**
- 2. DISCONNECT BATTERY (NEGATIVE)**
- 3. TAP INTO NON-GROUND SIDE USING EZ-CONNECTOR**
- 4. HOOK UP TO BATTERY/GROUND SIDE**



**STARTER  
RELAY PLUG**