



MOTORCYCLE PRODUCTS-DESIGN & MANUFACTURE

www.hoppeindustries.com

22667 FM 15 Troup, TX 75789

Ph. (262) 552-2770

Fax (262) 552-2778

HPBY-0868

Installation Instructions for **Kawasaki Vulcan 900 Classic LT VANILLAZILLA** Fairing

Your new fairing has been shipped with all the necessary hardware for a basic installation to the Original Equipment Kawasaki windshield mounts. If you have any questions after reading the information in this sheet, please contact Hoppe at: tech@hoppeindustries.com or call us. **Please read all the way through the instructions before starting the installation**, as five minutes spent now may save you many times that later.


Before you start:

Please note that some inside areas of the fairing front are visible when the fairing is assembled. It is important that you let your painter know to paint the inner edge for at least 1" when they paint the front so that no primer is left showing.

To prepare the bike for fairing installation, you will have to remove the factory windshield from the mounting brackets. Put your existing windshield and fasteners in a safe place.

Two side spacer plates are included for mounting the fairing onto the windshield brackets. The spacers are placed in between the fairing brackets and the bike's windshield brackets, used as needed on either side (in some cases, two spacers can be used on one side). Stacking both spacers together on the same side bracket (or just using one on one side) allows minor centering adjustment of the fairing to the headlamp due to variances from bike to bike.

Use (4) 5/16"-18x1" or 5/16"-18x3/4" long cap screws with nyloc nuts and stainless washers for the upper and lower OEM windshield mounting bracket holes. In order, you should have the following: cap screw, washer, fairing bracket, spacer(s), OEM windshield mounting bracket. Two different length (3/4" & 1") cap screws are supplied for attaching the fairing to the OEM windshield bracket. This is to account for the different spacer combinations and the taper of the fork tubes. Included chrome washers may be used to fine tune the length of leftover cap screw threads.

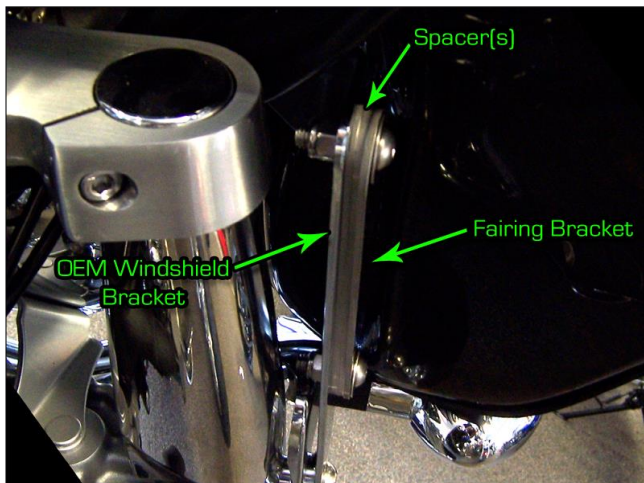

Important safety note-please read!!!

Any modification like adding a fairing, extended controls, different handlebars, etc., **will have an effect on your bike's handling.** That doesn't mean bad, just different. Take some time to get to know your bike after installing your fairing. The decreased wind felt by the use of a fairing can affect your perception of speed, leading you to possibly drive faster than you are aware of. Crosswinds and passing large vehicles will have an effect because of the larger front surface area. Handling in parking lots may feel slower.

Installation Items Included

- (2) 900LT spacer plates
- (4) 5/16"-18 x 3/4" cap screws
- (4) 5/16"-18 x 1" cap screws
- (4) 8mm chrome flat washers
- (4) 5/16" stainless flat washers
- (1) 242 Loctite tube