

## 3 - Screw the hooks and the shelf from behind.

## TORO PLAY KITCHEN

ASSEMBLY MANUAL

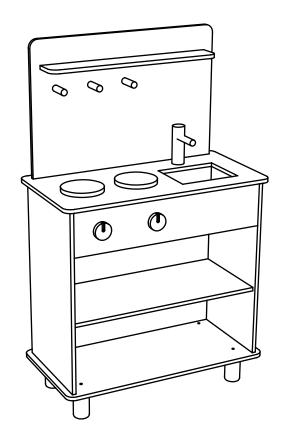




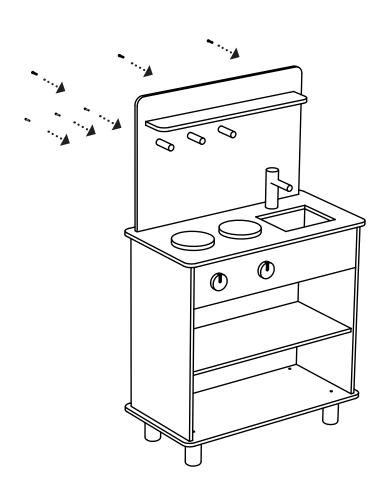


fermliving.com


## Needed for assembling

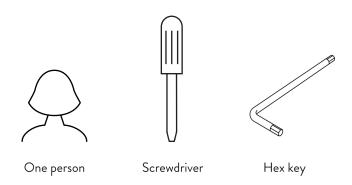

## Content

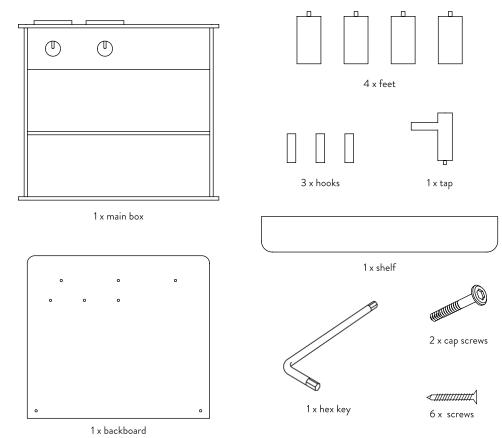

1 - Screw the tap on the countertop and the feet to the bottom.

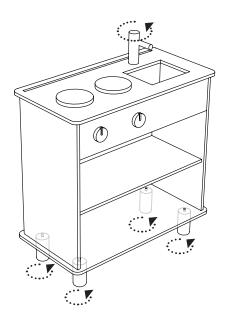

2 - Slide the backboard in the slit and fix the position with the cap screws.

