
SL 5871 ASSEMBLY & INSTALLATION GUIDE

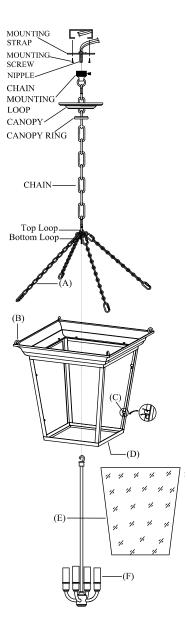

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Hook candelabra assembly onto bottom loop. Attach chain to top loop by using side cut link on the end of chain.
- 2. Attach chain to chain mounting loop at desired height by opening/closing the side cut link on the other end.
- Feed wire through chain and mounting loop. Step 5 Slide canopy on chain. Attach mounting strap to ceiling outlet box and secure with mounting screws.
- 4. Attach nipple into mounting strap and lock into place using included nut. Step 8 Attach chain mounting loop to thread nipple using screws provided.
- 5. Attach ground (silver or copper in color) fixture wire to ground wire from
- 6. ceiling outlet box (usually green or copper in color), and fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUND.

- 7. Connect the neutral (RIBBED, without any marking) fixture wire to the neutral (usually white) wire from ceiling outlet box. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
- 8. Repeat the procedure with the hot (ROUND, with UL marking on) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

- 9. Tuck wire connection neatly into ceiling outlet box. Slip canopy to ceiling and secure with threaded canopy ring.
- 10. Insert light bulb into the socket.
- 11. To install glass panels (E) provided to each frame, make sure metal tab (C) make sure metal tab (C) is flipped up. Place four glass panels to each frame, secure the glass panels by bending back the metal tabs (C) downwards.
- 12. Attach top loops (B) on latern box to side chain (A) by using end cut links on lower end of side chain (A).

VISUAL COMFORT & CO. Est. 1987