




DOOR CART ASSEMBLY MANUAL

<i>North America</i>	Florida (Main Office)	+1(321) 425-4336	www.topliftpros.com
<i>Middle East</i>	Dubai (Main Office)	+971 50 5144412	www.topliftpros.ae
<i>Asia</i>	Shanghai (Main Office)		www.topliftpros.cn

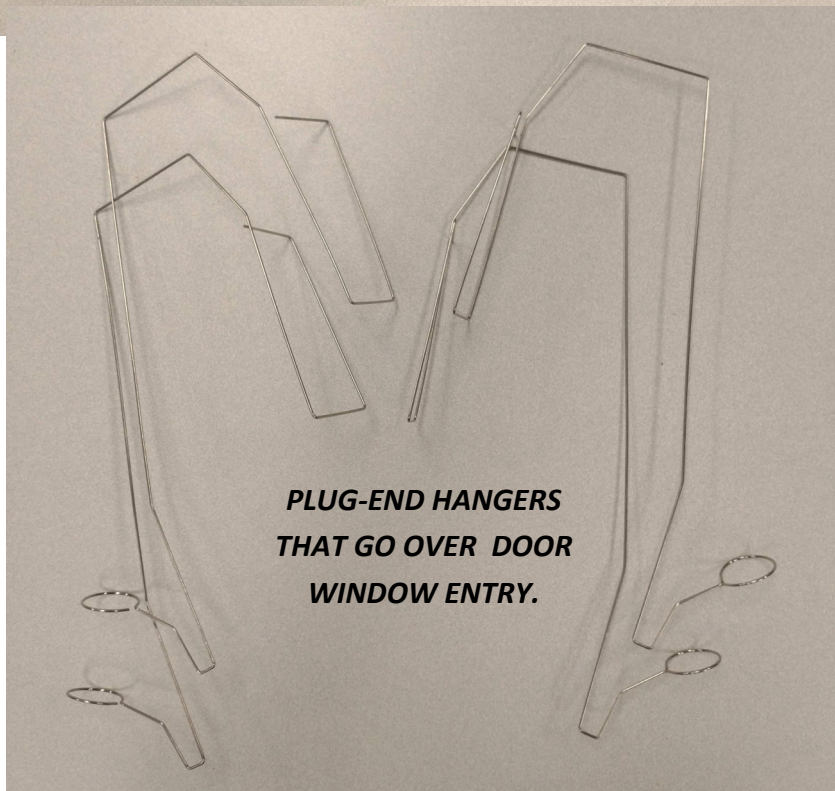

**PLUG-END HANGERS
THAT GO OVER DOOR
WINDOW ENTRY.**

1. What to expect once opened.
Snip any zip ties holding parts in place.




2. Un screw C-Channel, save screws (1-A).
Going to install C-Channel cross member as
shown. Press down after lining up center
hole on Base (1-B).



3. Place screws into each side once centered
into place.



4. Layout your parts as such . Screw the Main
Legs into place as shown.

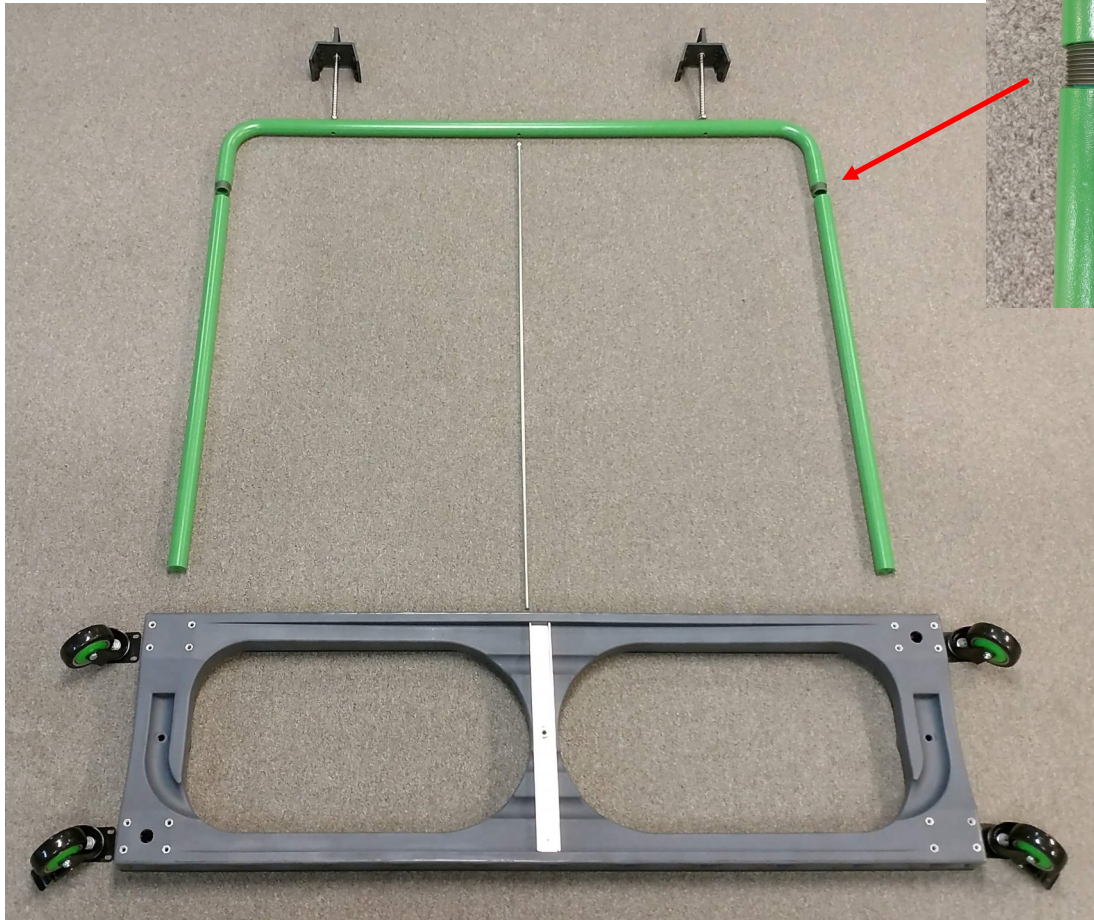

5. Install Casters as shown. Place Caster with Brake (long side each corner) and Caster without Brake opposite.



6. Install green Handle into base with Center Rod going through center (place the nut on the end of the Center Rod once through the Green Handle)(2-A) **Twist with your fingers to thread the Center Rod into the Base (2-B)**. Then tighten the nuts on Handle end. (THE CENTER ROD WILL ADJUST YOUR DOOR WEIGHT PULLING THE CENTER OF THE BASE UP WHEN YOU FIRST PLACE YOUR DOORS ON BY TURNING THE NUTS ATOP THE HANDLE AS SHOWN).

6. Install Bolts as shown with washer into Base of Handle through the Door Cart base (No need to over tighten).



7. Remove nut from Handle as shown (3-A).

Install Handles with Long Bolt, Spring and Washers as shown(1-2-3)

8. Tighten nut on the top of the Handle where Bolt end is flush to the top of the nut. (Use TWO 17mm wrenches to do complete) (4-A)

