


Concept7 Rocker Panels P/N NAD-CFRP & NAD-CFRPZ06 Installation Instructions

PROFESSIONAL INSTALLATION RECOMMENDED

1. Remove the four 7mm screws that hold on the front fender liner and rear brake ducts. Do not discard the fasteners. They will be re-used.
2. Fit one of the carbon rockers to the bottom of the car, lining it up visually with the edge of the front fender. You should see the corresponding holes in the new panel that line up with the previously removed screws (see arrows at left) .

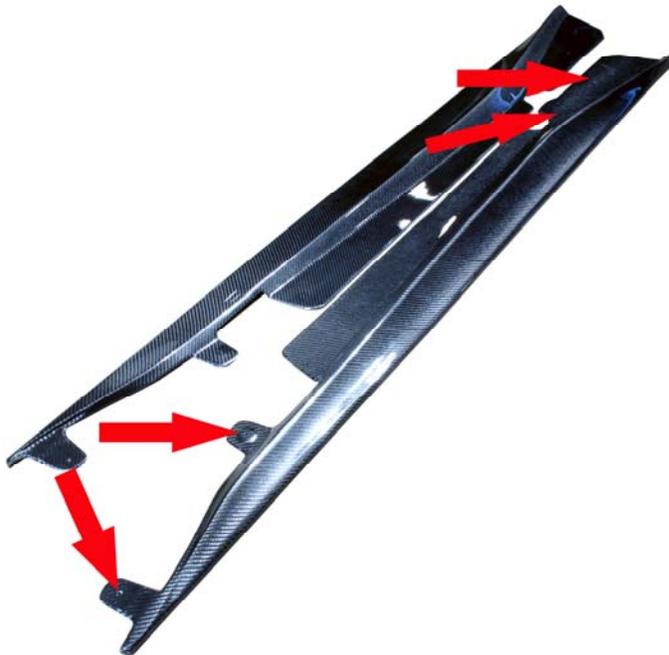

3. Re-install the previously removed 7mm screws and tighten them.
4. Evenly space out the four supplied 3/16 rivets between the 7mm screws and drill 1/8 pilot holes. Follow the pilot holes with a 3/16 bit to enlarge them.
5. Rivet the bottom of rockers to the bottom of vehicle via the 3/16 holes.
6. Repeat the process for the opposite side of the vehicle.

For photos & additional information, please see our [web site](#). For technical support with this product, please email us at info@nowickiautosport.com