









Instructions for 'Beaded Centerline Bracelet and Ring Set - Evening Gala' Kit

Project KB-SP-060JS [Skill Level: Intermediate]

Designer: Julie Bean

Project Components | NOTE: To account for potential mistakes, there may be extra pieces of some types of findings.

	1 - silver plated centerline ring		1 - matte white seed beads
	1 - silver plated centerline cuff		1 - big eye needle
	1 - black seed beads		1 - black nymo thread
	1 - silver lined grey seed beads		1 - tube of glue

Recommended Tools (not included)

Scissors

Techniques Taught:

How to Add Beads to a Centerline Ring and Cuff, How to tie a surgeon's knot, How to tie an overhand knot

Instructions: For video instructions, go to www.beadaholique.com/how-to-make-the-beaded-centerline-bracelet-and-ring-set-an-exclusive-beadaholique-kit.html

1. Bracelet:

- The cuff bracelet's beaded interior section will be 23 beads long by 7 beads tall when the bracelet is finished. To start, cut two lengths of thread that are 45 - 50 inches long each. Line up their ends and place them through a big eye needle, leaving a tail of 6 inches on one end and the remainder of the thread on the other. Do not tie a knot.
- Note all the holes on either side of the cutout on the cuff. They are all evenly spaced except for on one side there is a larger gap between two of the holes. Find that spot. Your starting hole will be the hole diagonally across from the area with the gap. Please see the included diagram*. The diagram shows a gap section on the bottom right side, your gap may be on the bottom right or the top right. If yours is the top right, follow all the instructions the same, starting at the hole diagonally across from your gap but it will be on the bottom now instead of the top. All the thread paths stay the same regardless of if you start on the top or the bottom as long as you start diagonally from the gap. For additional clarification, please view the complete video which shows the cuff bracelet with the gap on the top right and the ring with the gap on the bottom right. Both ways are fully demonstrated.
- Once you have found your starting hole, take your needle and go from the back to the front through the hole, leaving a tail on the backside that is about 9 or 10 inches long (long enough to restring a needle onto later).
- Follow your bead pattern starting with row 1 on the included bead graph. String all the beads from row 1 on a needle, slide them down so they rest in the center of the cuff. Take your needle and go from the back to the front through the hole across from your starting hole. Pull your thread slowly and carefully to prevent accidental knotting. You should now have your needle and thread on the topside of the bracelet. Go back through your entire row of beads. Pull your needle to the backside of your bracelet (you can just go through the center opening). Now go back through the starting hole, going from back to front. Go through your bead row again. Row 1 is complete.
- For row two, you will take your needle and go through the hole next to your first row (from the backside to the frontside). This is the second hole over from the edge of the bracelet. Once on the front side of the bracelet (exiting the second hole), string on the beads for row 2 of your pattern. Slide the beads down so they rest in the center of the cuff. Going from back to front, go through the second hole on this side of the bracelet. Go back down through your beads. Row 2 is complete.
- Repeat the instructions for row 2 to complete all the remaining rows of your bracelet. When you get to the end row, go through your beads on this row one more time, just as you did for row 1. Whereas you would normally pull your needle to the back and go back to front, this time since it's the last pass through on the last row, just pull your needle from the front of the hole to the backside so you will be ready to tie a knot in the next step.

8. To Tie Off Threads:

9. Your needle and thread should be on the backside of the bracelet. Slip your needle under the thread bridge next to the last row. Pull almost all the way through/under leaving just little bit of thread that forms a loop. Slip your needle through that loop and pull. You just made a little knot. Run your needle and thread down the row of beads next to it (staying on the backside).
10. Remove your needle and rethread it onto the tail of thread on the other side of the bracelet where you started from. Repeat the knot tying process as well as running your needle and thread down through the row of beads next to it.
11. Add a very small dab of E6000 glue over both knots. Trim any excess threads exiting the beads.
12. Ring:
13. To make the ring you will be repeating all the exact same steps as you did to make the bracelet. The only difference is that you will be starting with two lengths of thread, 30 inches long each this time and your finished ring will be 11 beads wide by 3 beads tall.


*To see how to do this technique, please refer to the included techniques guide. Thank you!

All designs © Beadaholique Inc.


You may use our designs to make items for personal use or gifts.

Sale of our designs, whether in written form or assembled, is prohibited.


3 Beads (ring)

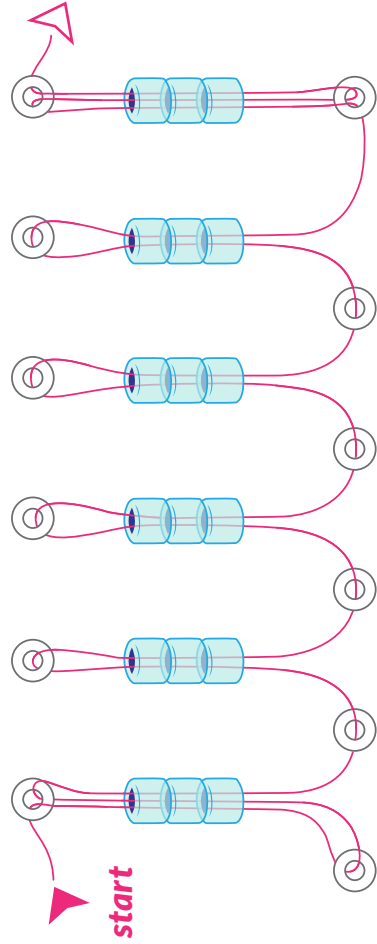

7 Beads (cuff)

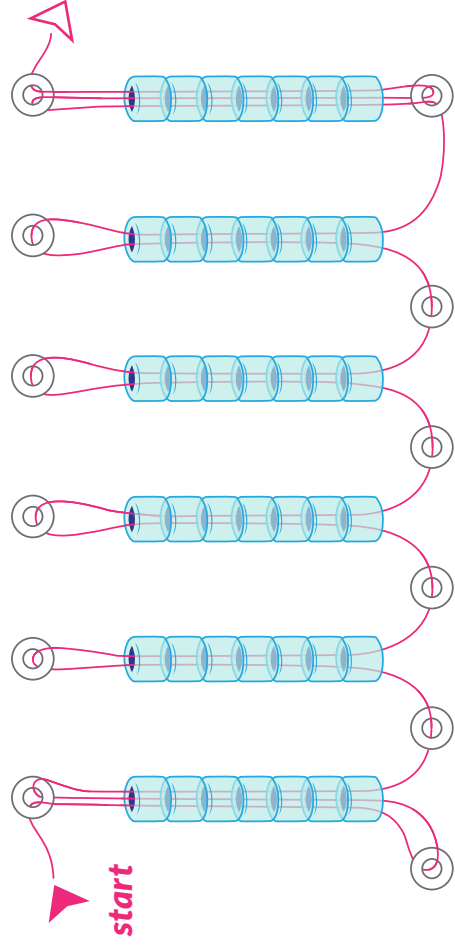

Start from here

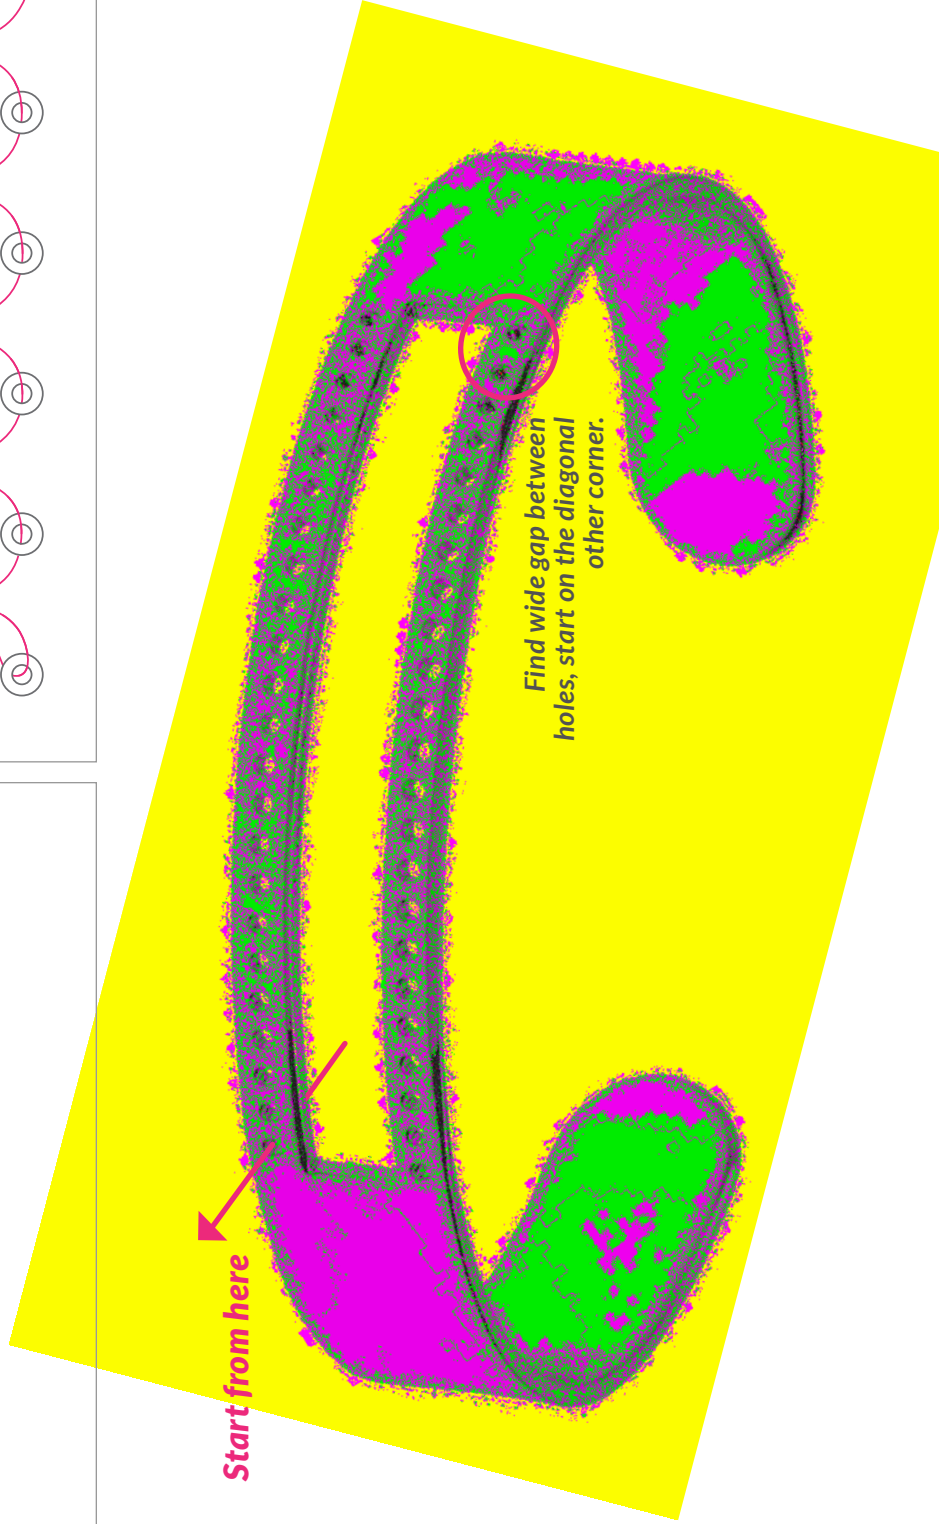

Find wide gap between holes, start on the diagonal other corner.

