FERRO CONCEPTS - SLICKSTER CHEST PANEL INSTALLATION


ALSO APPLIES TO ADAPT ADMIN PANEL. ONLY COMPATABLE WITH THE SLICKSTER VARIENTS AND FCPC V5 CARRIERS.




1. REMOVE ARMOR PLATE TO EASE INSTALLTION. FULLY INSERT ONE OF THE UPPER TUCK TAB OF CHEST PANEL INTO UPPER VERTICAL MOLLE SLOT ON CARRIER.



3. FULLY INSERT ONE OF THE LOWER TUCK TABS INTO LOWER VERTICAL MOLLE SLOT. FITMENT IS TIGHT, MANIPULATE CARRIER FABRIC IF NECESSARY TO FASE INSTALLATION

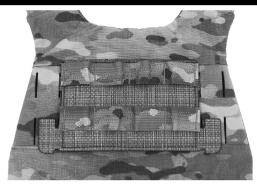

2. REPEAT STEP 1 FOR OPPOSING UPPER TUCK TAB. BOTH UPPER TUCK TABS SHOULD NOW BE FULLY SEATED.

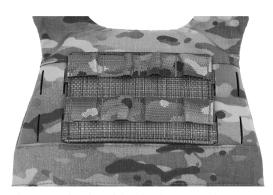

4. REPEAT STEP 3 FOR OPPOSING LOWER TUCK TAB. ALL FOUR TUCK TABS SHOULD NOW BE FULL SEATED. PRESS DOWN ON CHEST PANEL TO FULLY SECURE HOOK AND LOOP RETENTION.