


FERRO CONCEPTS - 3AC FIRSTSPEAR TUBES® BUCKLE KIT - INSTRUCTIONS




1. TO AID IN THE INSTALL, GENTLY FOLD DOWN THE TABS OF THE FEMALE/CUMMERBUND SIDE OF THE KIT LIKE SHOWN IN THE PHOTO ABOVE.



2. START THE TUCKING PROCESS OF ALL 4 TABS INTO THE FRONT MOST MOLLE WEBBING COLUMNS OF THE 3AC CUMMERBUND. YOU CAN FOLD THE CUMMERBUND TO AID IN THIS PROCEDURE.

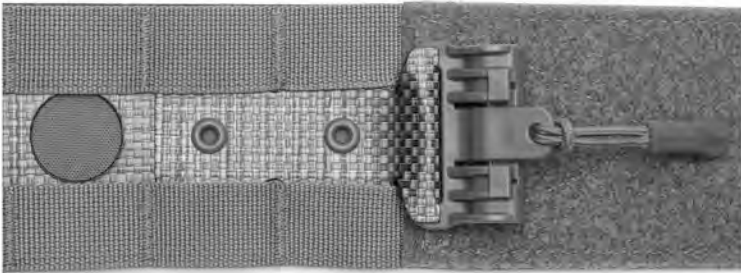

3. FOLD THE CUMMERBUND SLIGHTLY AND PUSH DOWN ON THE ADAPTER TO SEAT THE TABS FULLY INTO THE MOLLE. THE BUCKLE ADAPTER SHOULD SIT FLUSH AND FLAT WITH THE CUMMERBUND.

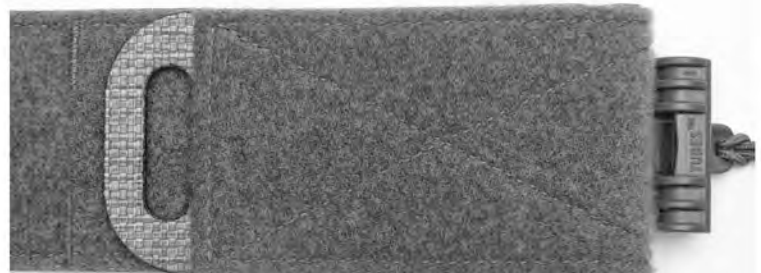

4. FOLD THE FRONT VELCRO® SECTION OF THE 3AC CUMMERBUND INWARDS AND SECURELY FASTEN THE HOOK VELCRO® TO THE LOOP VELCRO® INSIDE THE CUMMERBUND.

FERRO CONCEPTS - 3AC FIRSTSPEAR TUBES® BUCKLE KIT - INSTRUCTIONS



5. FASTEN THE PLATE POCKET SIDE OF THE KIT ON THE PREFERRED LOCATION ON THE FRONT PLATE POCKET OF THE PLATE CARRIER. ALIGNING WITH THE SIDES OF YOUR FRONT FLAP IS OPTIMAL.



6. ATTACH CUMMERBUND IN EITHER DIRECTION BY SLIDING THE FEMALE SPLIT BAR INTO THE MALE SPLIT BAR UNTIL AN AUDIBLE CLICK IS HEARD.



7. DETACH CUMMERBUND IN EITHER DIRECTION BY ENGAGING LIFT GATE AND SLIDING FEMALE SPLIT BAR AWAY FROM MALE SPLIT BAR.



8. REPEAT FOR THE OPPOSITE SIDE AND INSTALL YOUR FRONT FLAP. YOU CAN NOW ENJOY EASY DON/DOFFING OF YOUR PLATE CARRIER WITH THE 3AC CUMMERBUND.