


# FERRO CONCEPTS - BACK PANEL MOLLE - INSTRUCTIONS

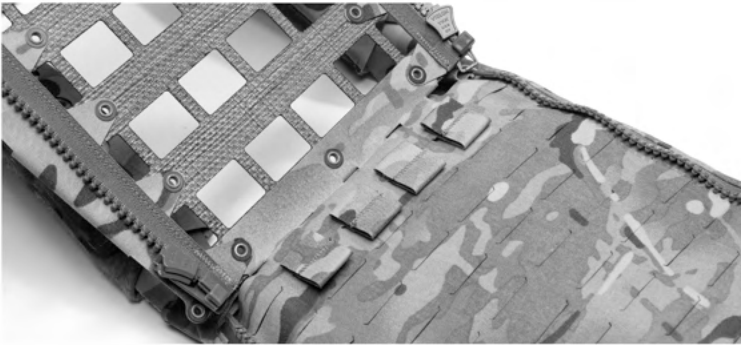

1. WEAVE TUCK TABS OF BACK PANEL INTO THE TOP CENTERED MOLLE SLOTS AND FULLY OUT OF THE SECOND SLOTS OF CARRIER.



2. INSERT BOTTOM TUCK TABS OF BACK PANEL FULLY INTO THE BOTTOM MOLLE SLOTS OF CARRIER.



3. FASTEN SIDE ZIPPER OF BACK PANEL TO THE CARRIER SIDE ZIPPER. REPEAT FOR OPPOSING SIDE.



4. TUCK METAL ZIPPER PULL INTO ELASTIC RETENTION LOOP OF BACK PANEL. REPEAT FOR OPPOSING SIDE.