

FERRO CONCEPTS - GENERAL PURPOSE POCKET 12x5




1. WEAVE SHOCK CORD THROUGH THE TOP LOOPS ON EACH SIDE.



2. CROSS SHOCK CORD OVER THE FRONT OF THE POUCH THEN CROSS THE SHOCK CORD OVER TOP OF ITSELF.



1. WEAVE SHOCK CORD THROUGH THE BOTTOM LOOPS ON EACH SIDE.

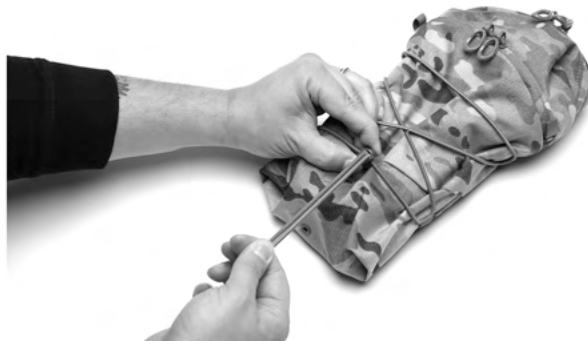

2. MAKE SURE SHOCK CORD IS EVEN ON EACH SIDE. PULL SHOCK CORD ENDS THROUGH CORD LOCK.