


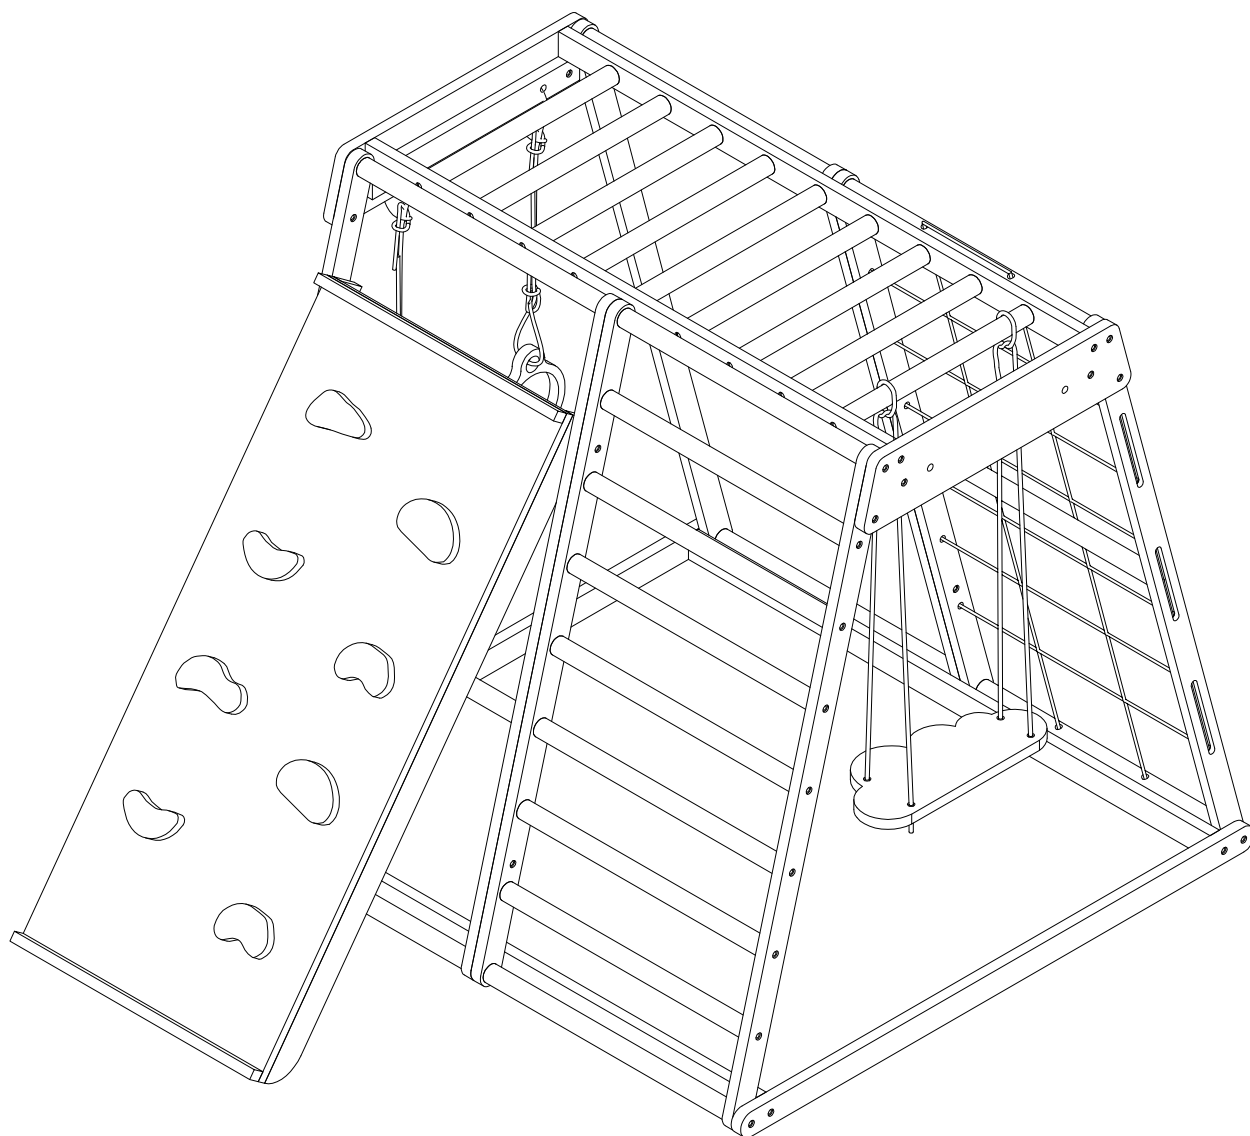


MEMAX

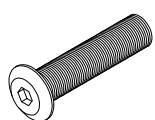


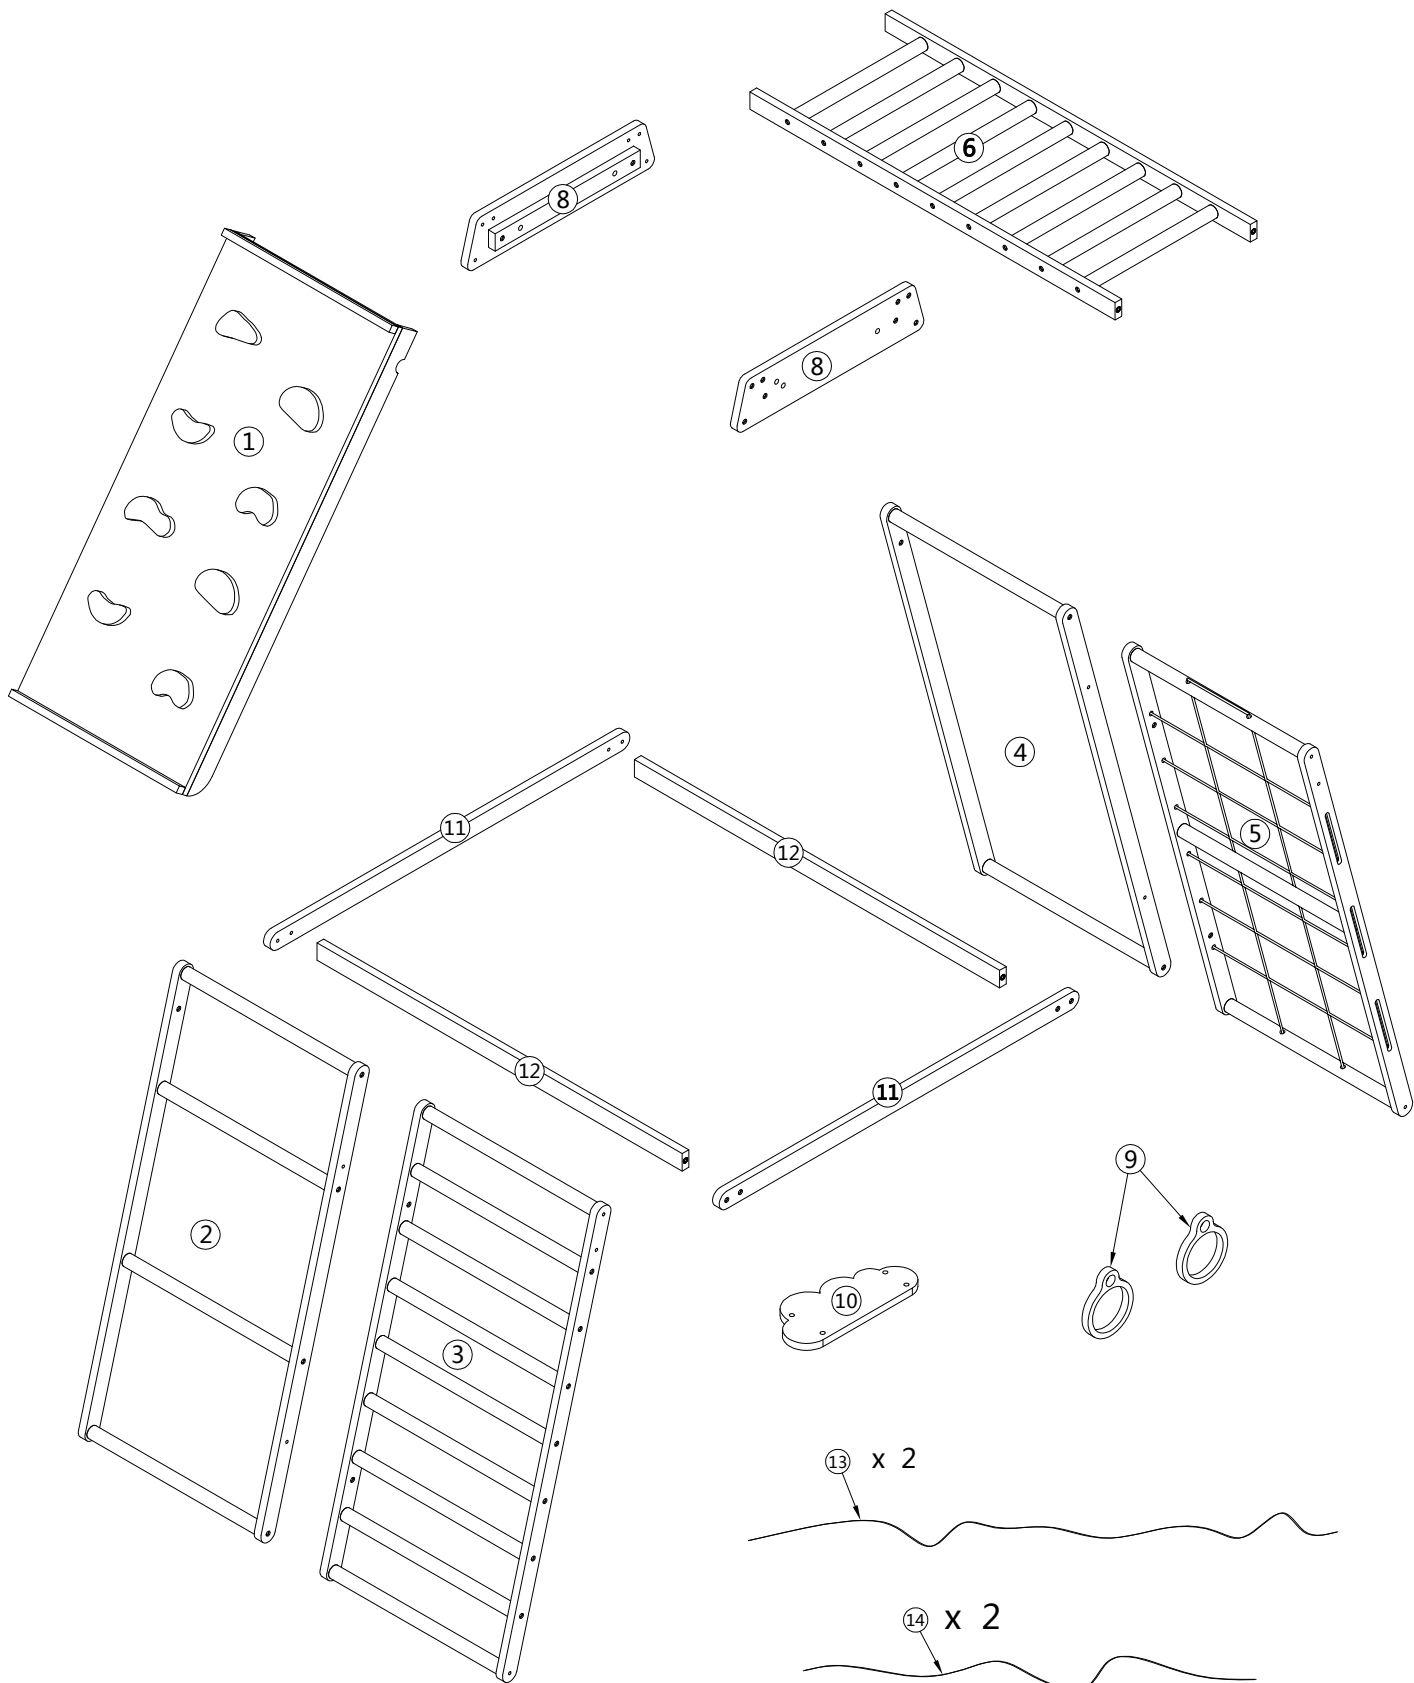


M6 x 35
A x 12pcs

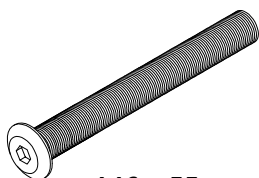




M6 x 55
B x 8pcs



C x 8pcs

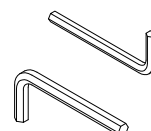




step1 A x 8 C x 4

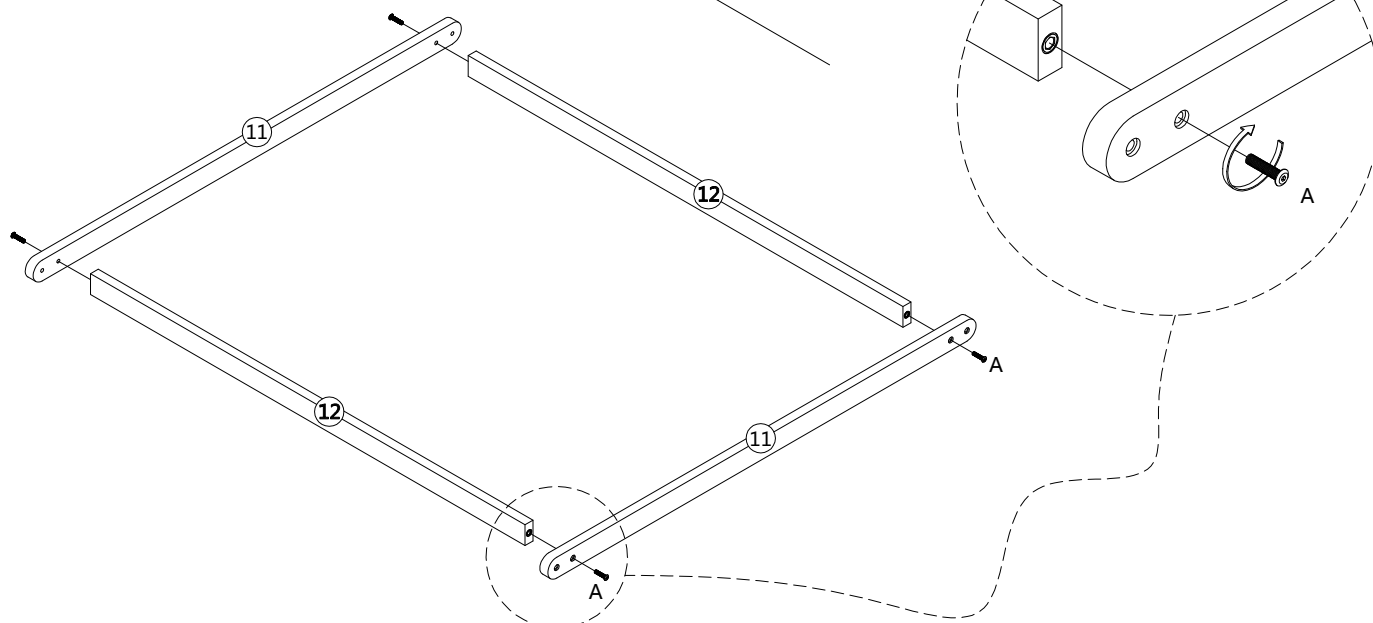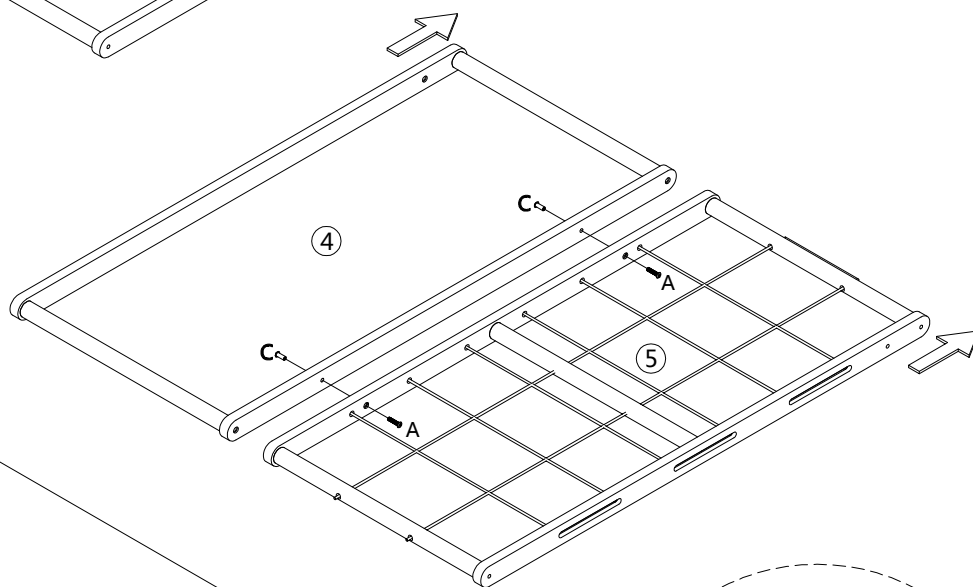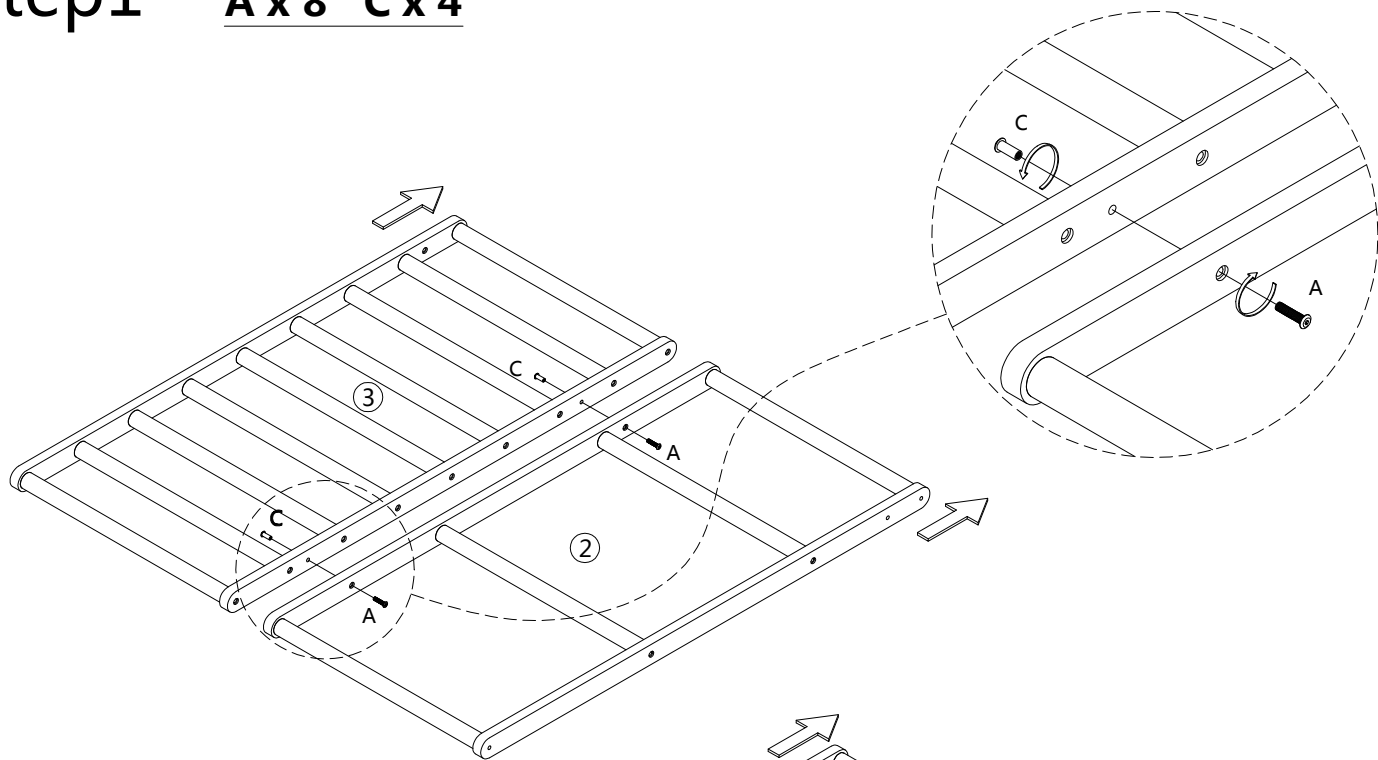

step2


B x 4

Remove hardware A here first

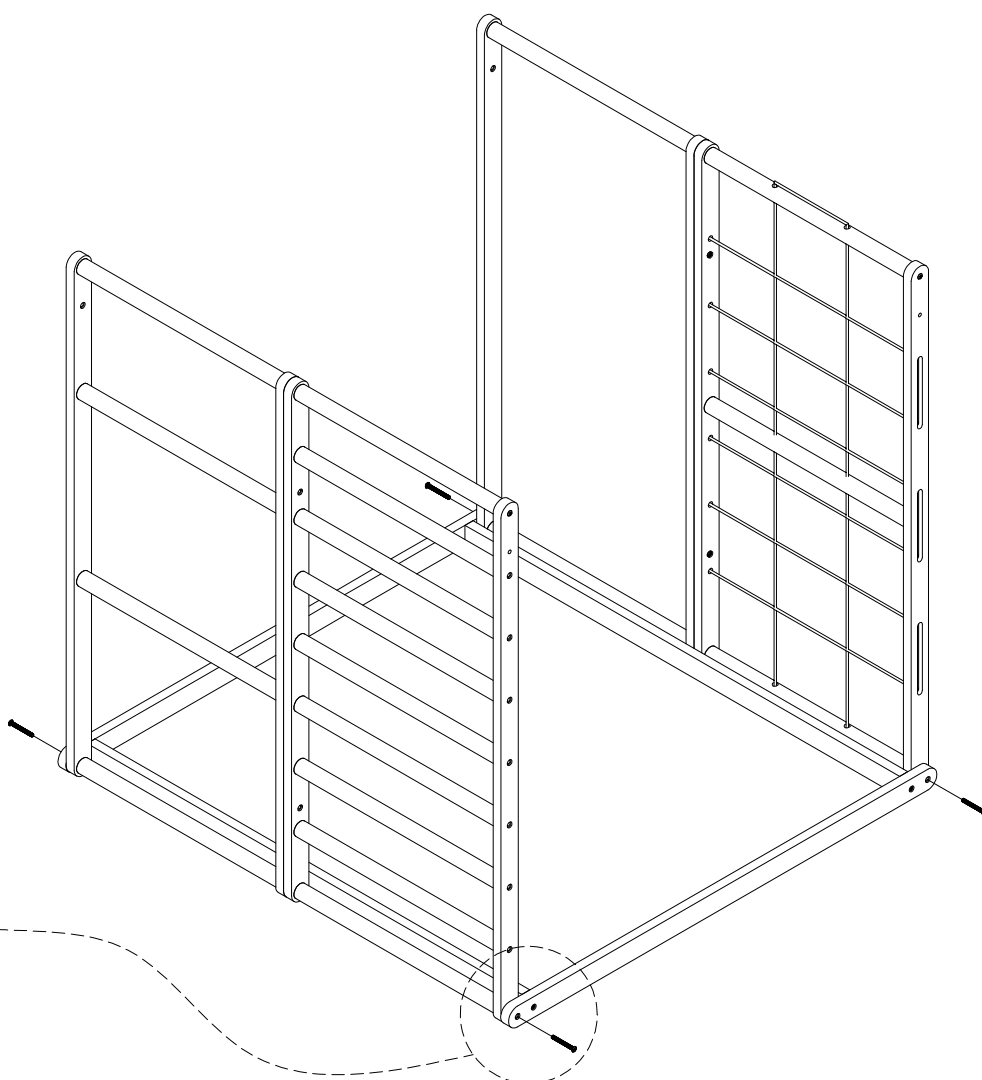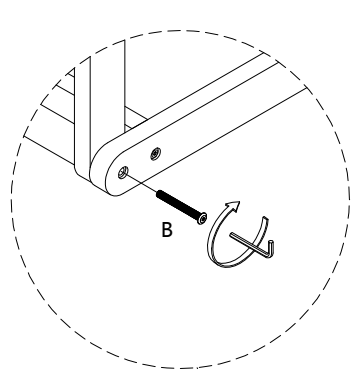
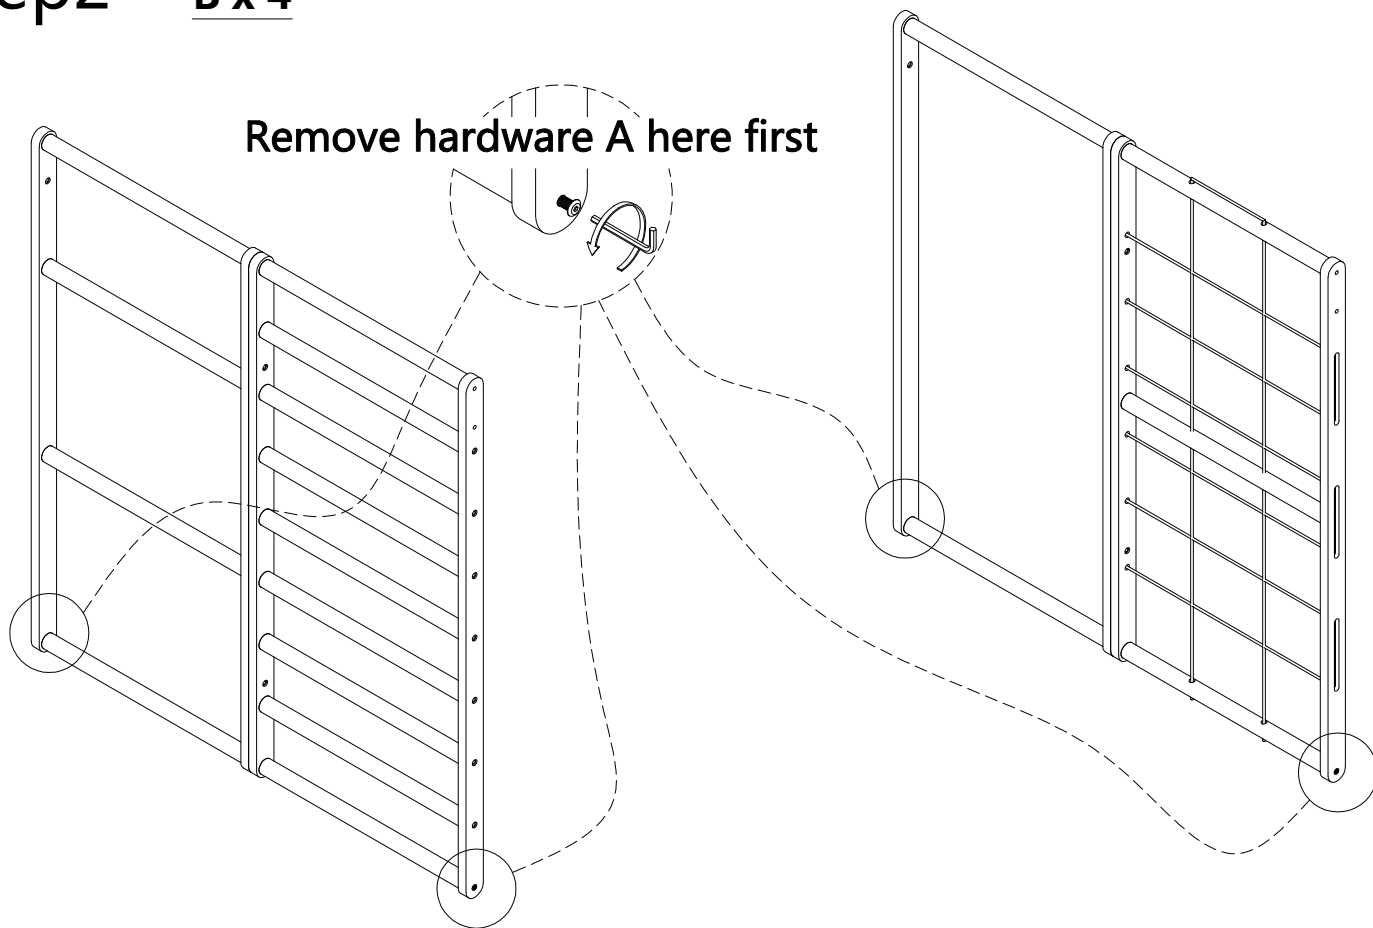


step3

A x 4 B x 4 C x 4

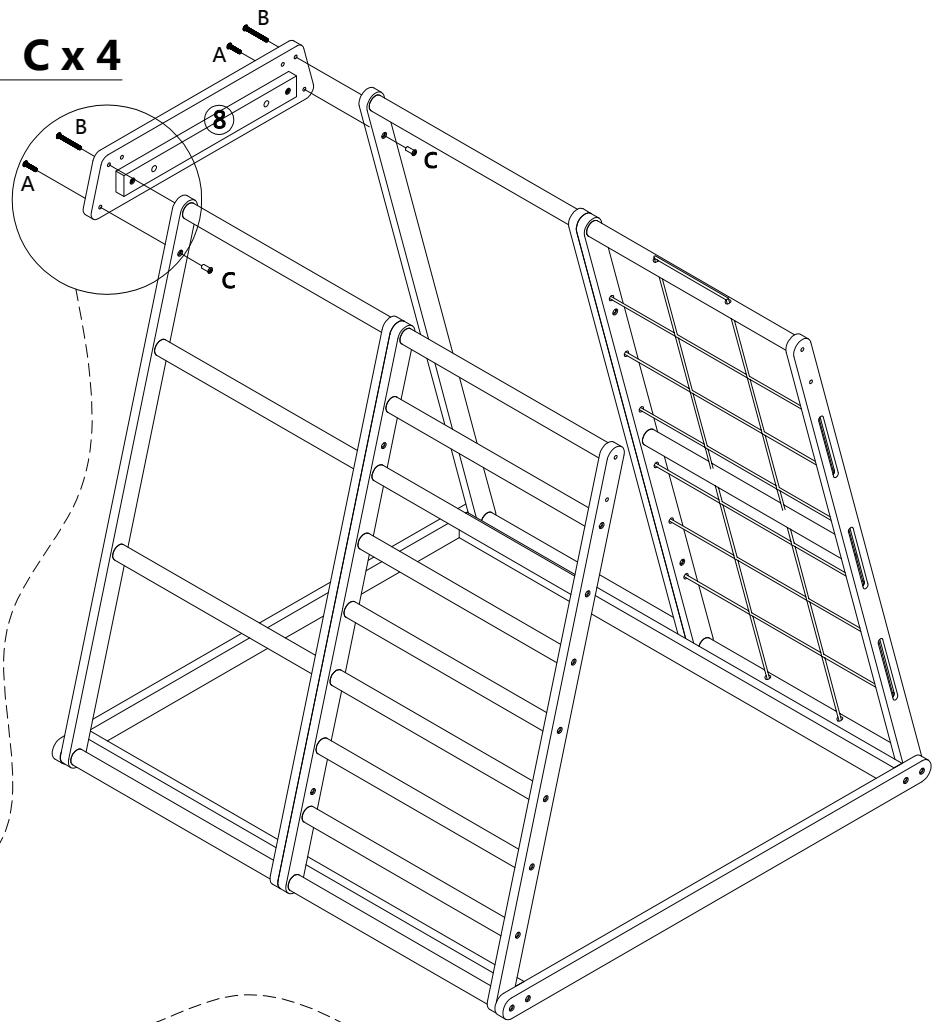


Remove hardware A here first

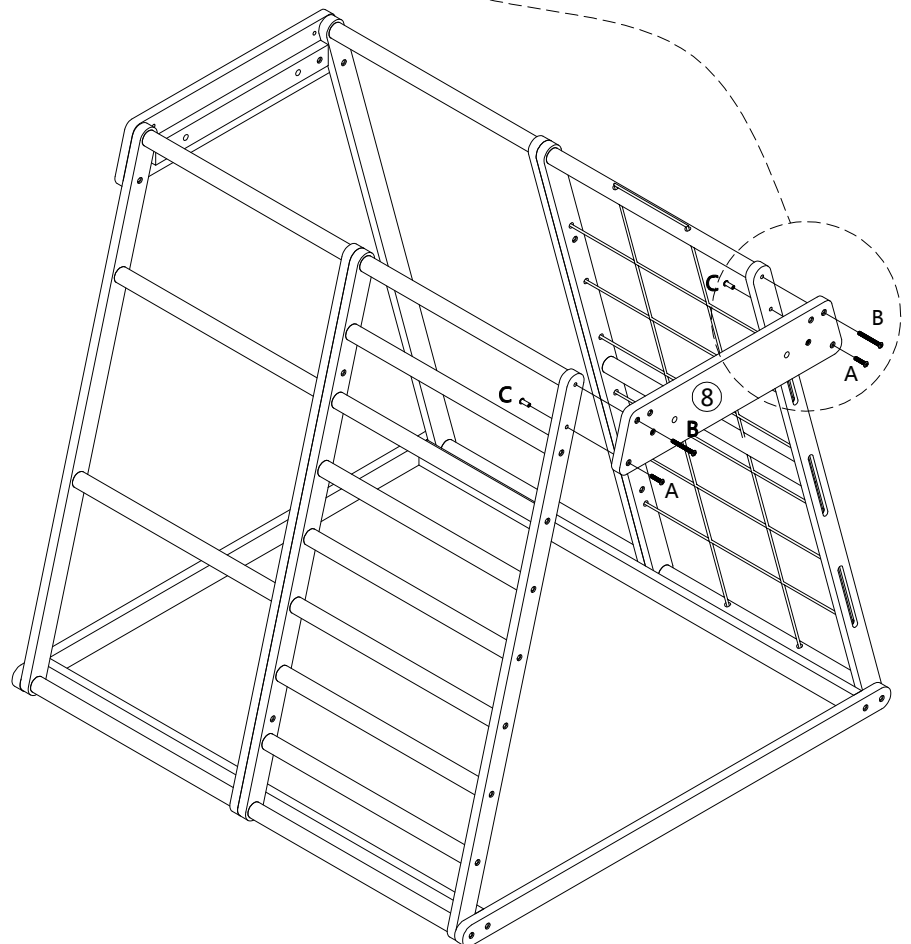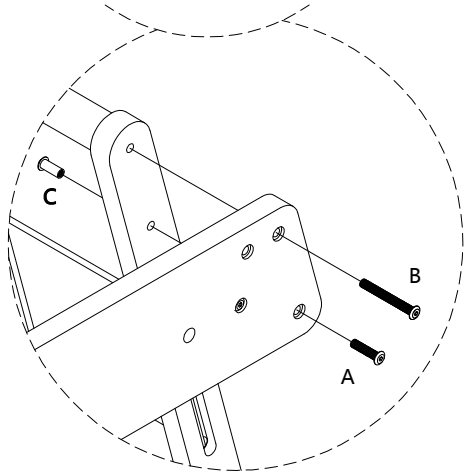


step4 A x 4

Install with hardware A
removed in steps 2 and 3.

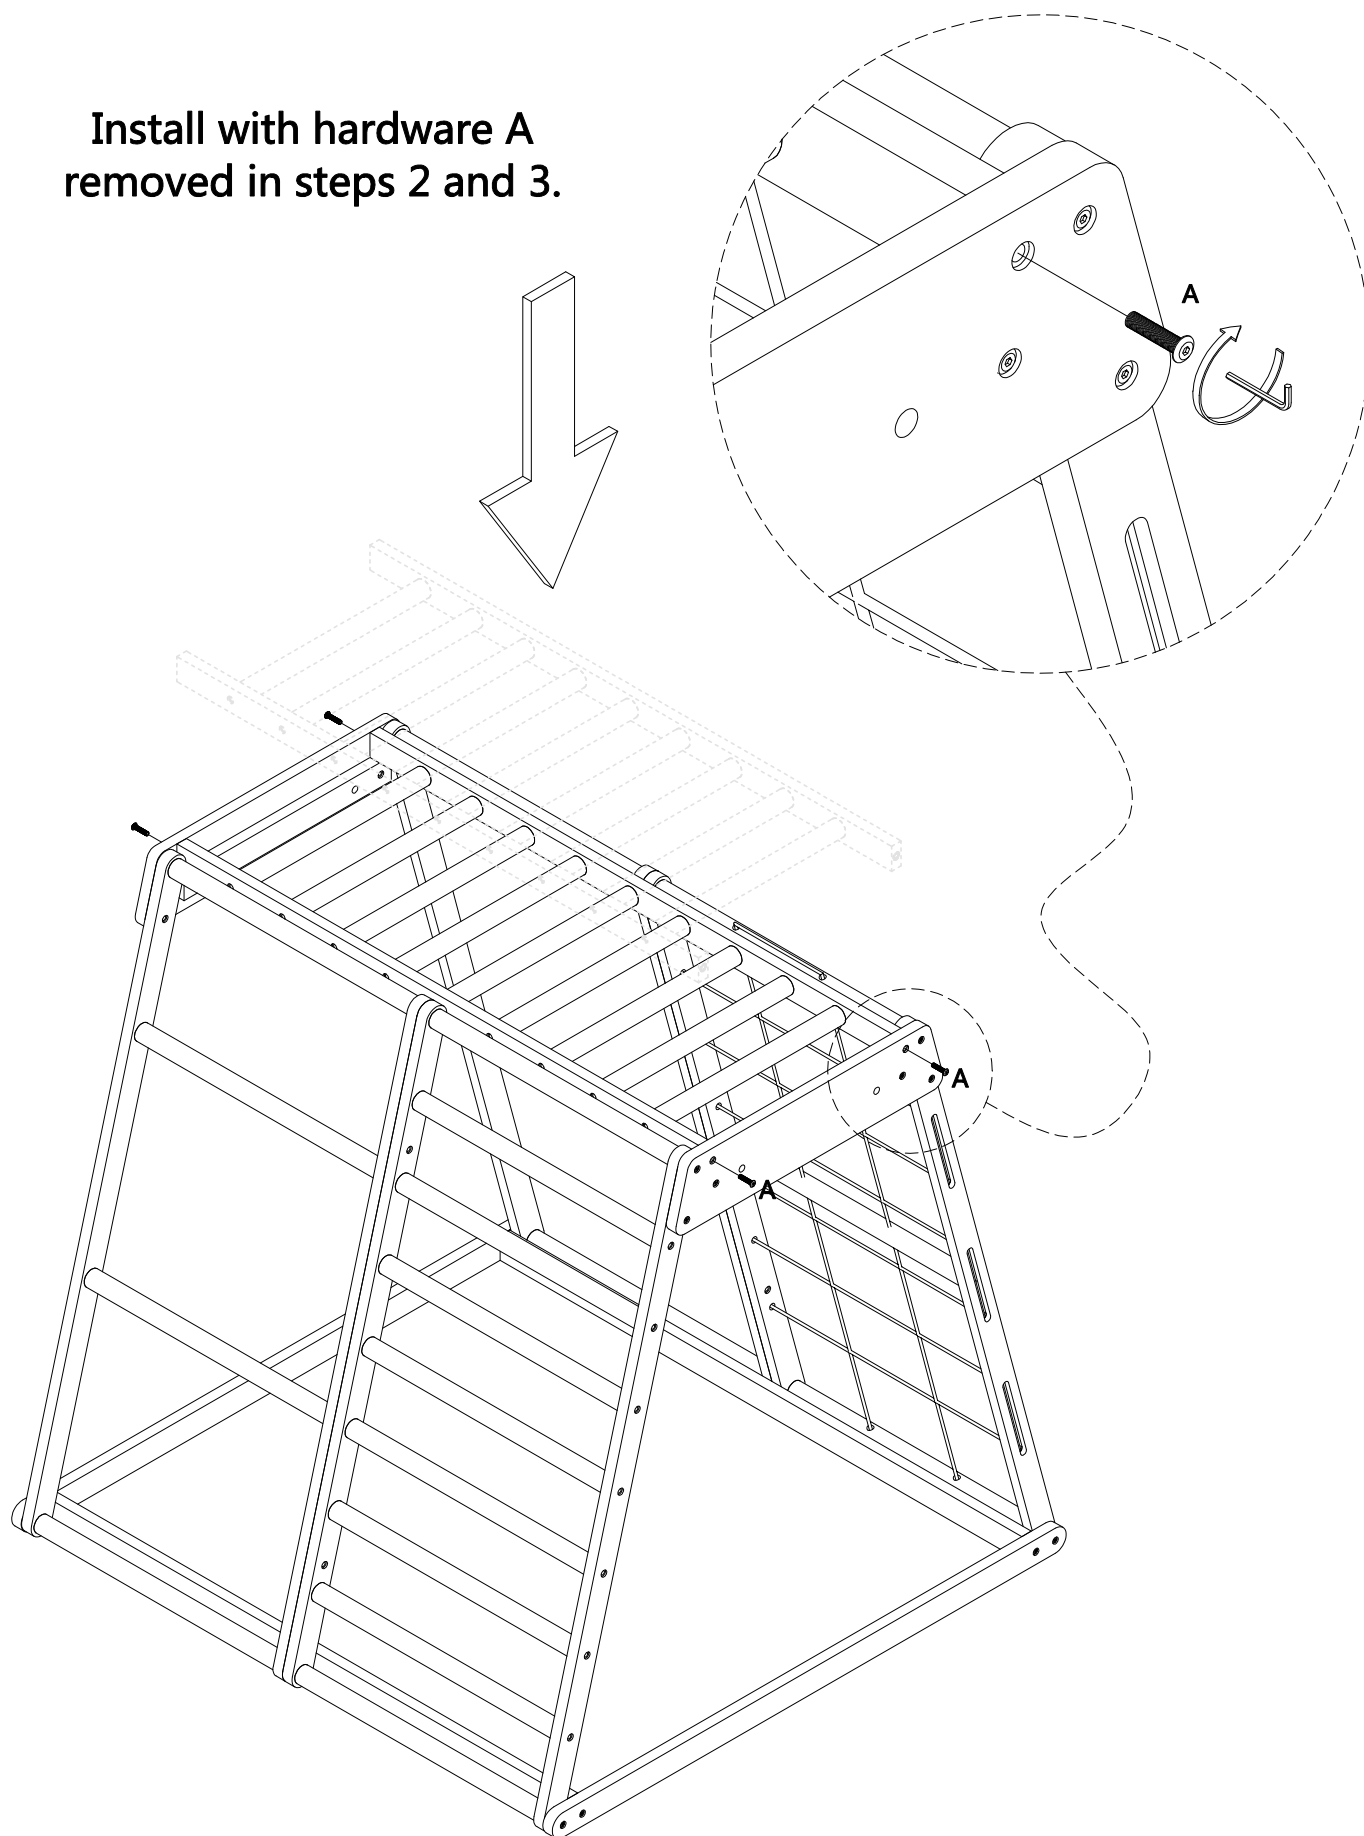

step5

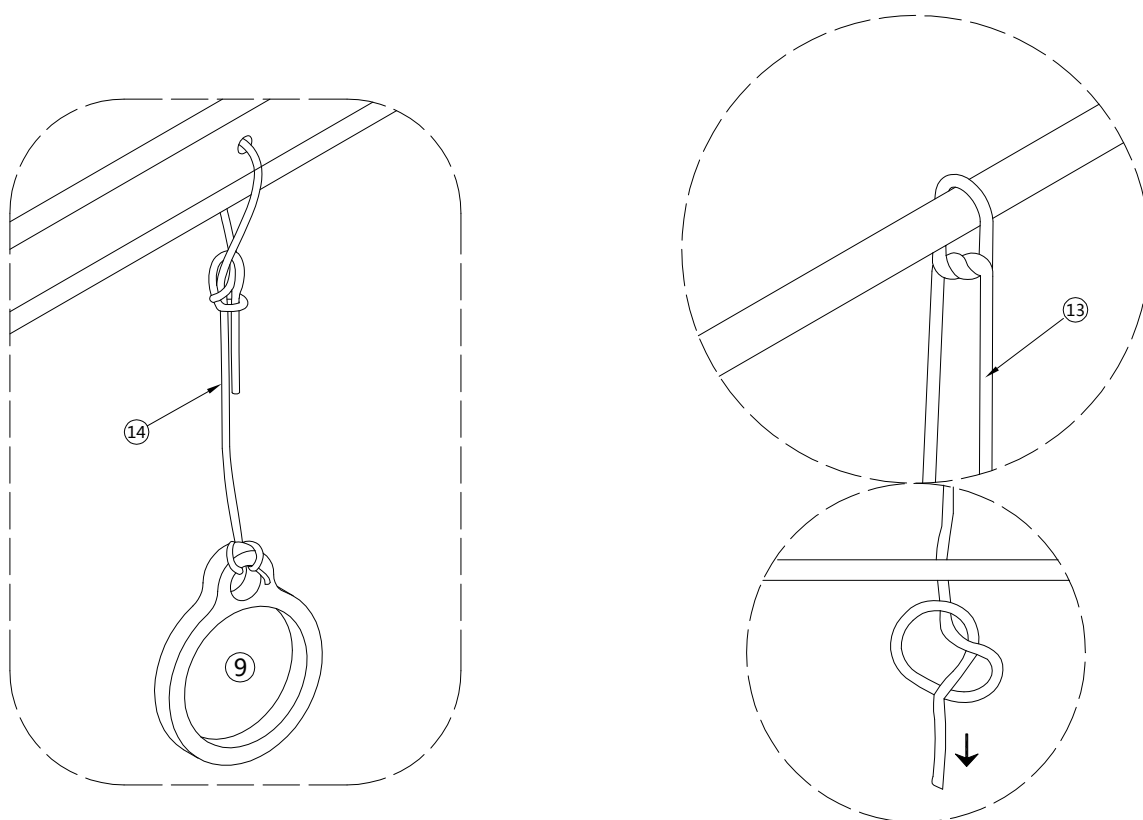

Fasten ropes 13 and 14 to the proper position of the climbing frame as shown in the figure.

