



breezesta™

BB-200 ADIRONDACK


BB-200

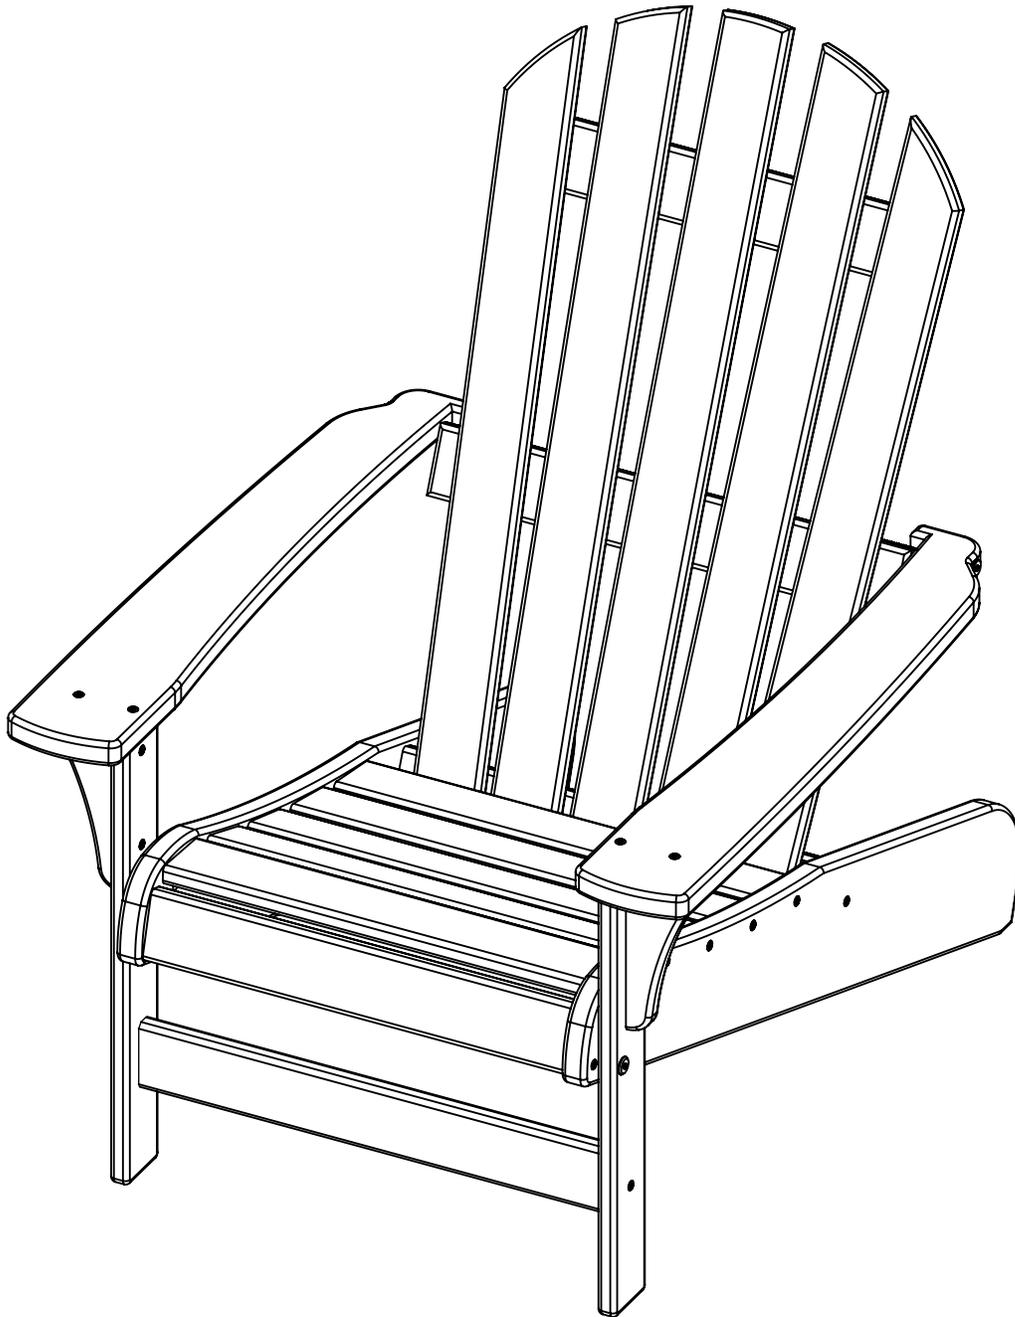

REV00-1/19

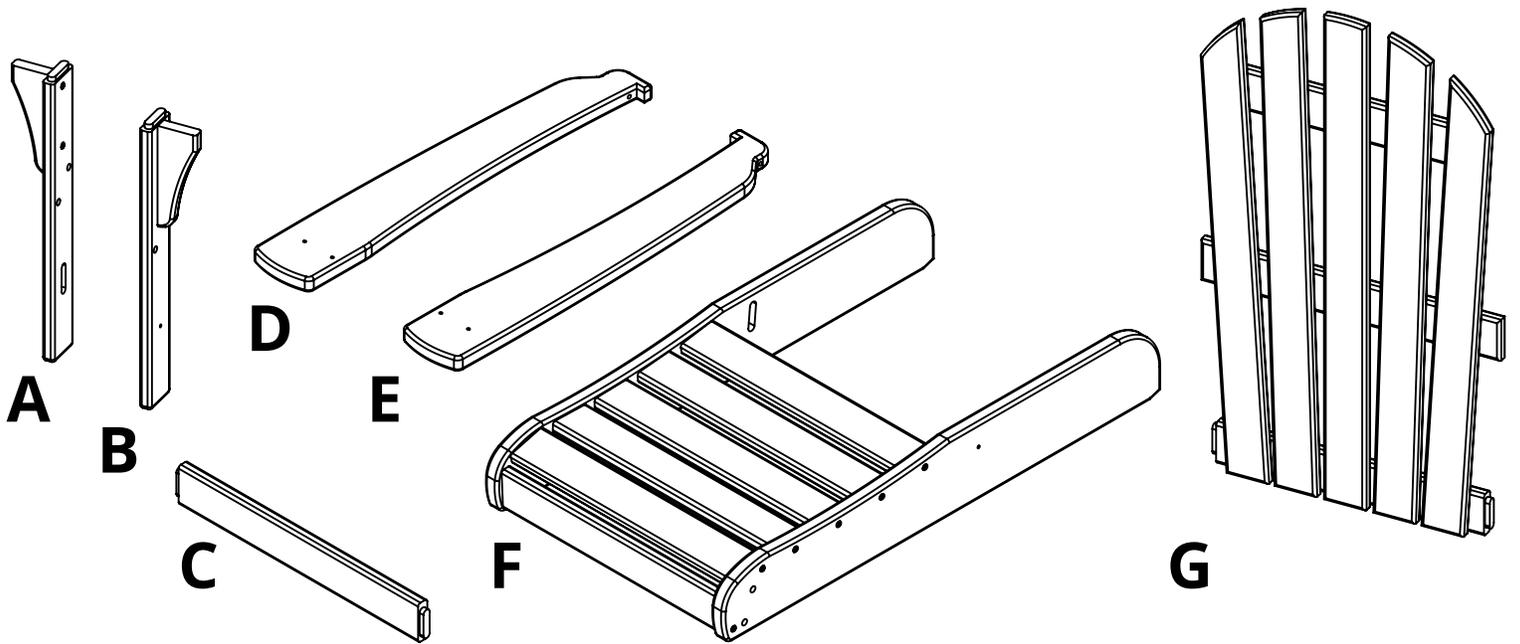


PARTS			
PART	DESCRIPTION	PART NO.	QTY
A	LEFT FRONT LEG ASSEMBLY	SA-00025	1
B	RIGHT FRONT LEG ASSEMBLY	SA-00026	1
C	BB SPREADER	SS-19.5	1
D	LEFT ARM	PRT-00063	1
E	RIGHT ARM	PRT-00064	1
F	BASE ASSEMBLY	SA-00024	1
G	BACK ASSEMBLY	SA-00029	1

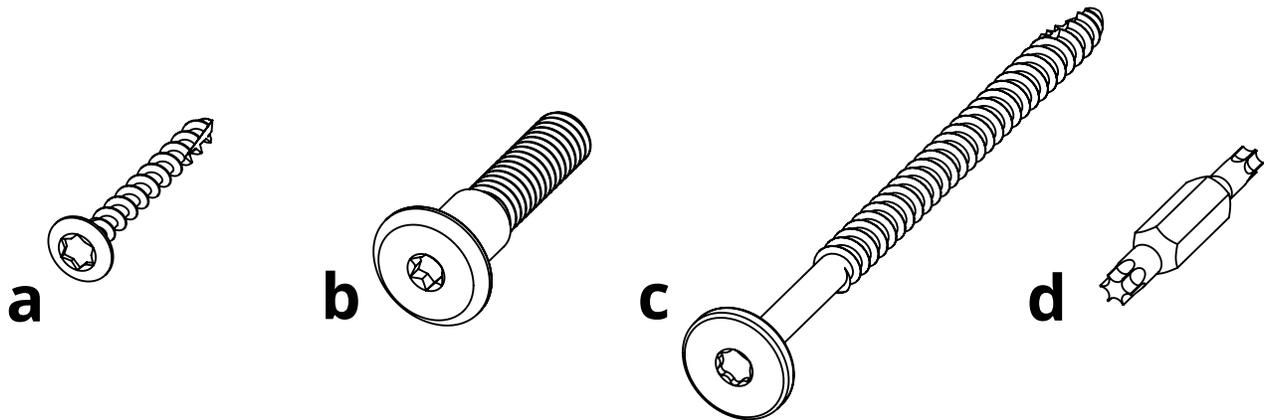


HARDWARE			
PART	DESCRIPTION	PART NO.	QTY
a	#8 X 1-1/2" TORX SCREW	H-0000-S815	8
b	5/16" X 1-1/2" CHAIR BOLT	H-0000-CB51615	4
c	1/4"-10 X 4" LAG SCREW	H-0000-S104	2
d	T20 & T25 TORX BIT	H-0000-CTD	1

Suggested Tools: Drill, Plastic Mallet


Please read entire instructions before beginning

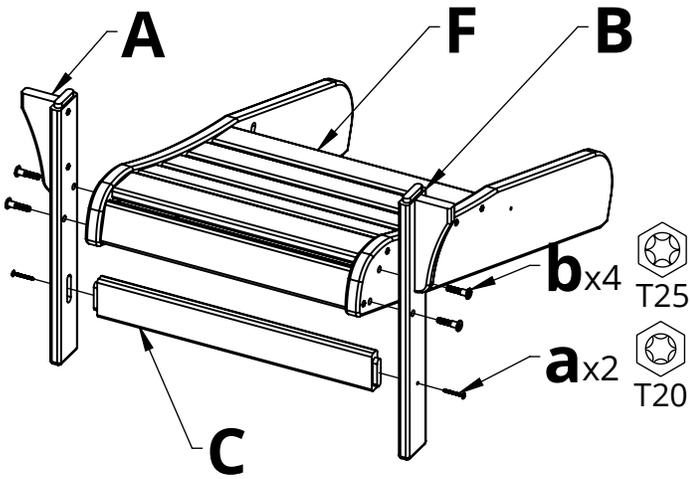

1. Attach Parts F & C between Parts A & B as shown

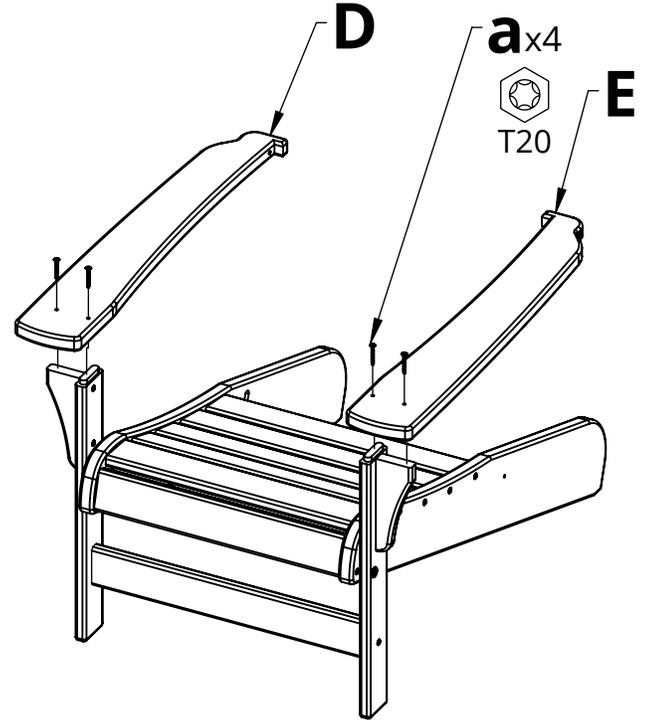

2. Connect Parts D & E to the the previous assembly

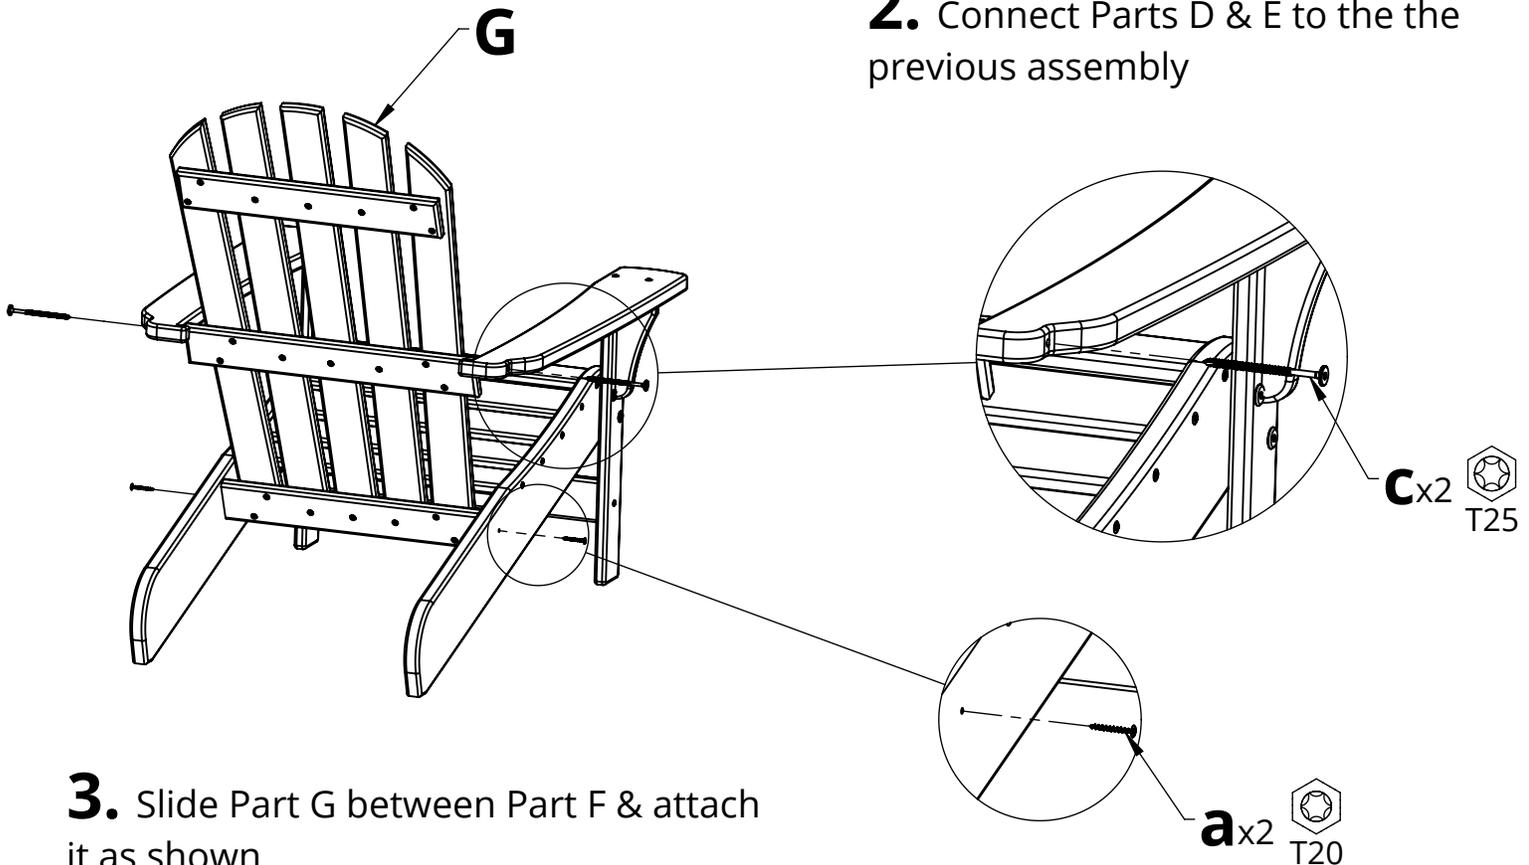

3. Slide Part G between Part F & attach it as shown