


Walnut combines thoughtful modern design with old-world craft.

🌐 walnutstudiolo.com  
📞 503.447.6889

## “The Tilikum” Leather Drawer Pull (Small, Medium, Large) Installation Instructions

- Gather your tools: ruler, drill, screwdriver, pencil.
- Take the leather strap, and fold both ends inward so that the rough backsides of the leather are facing each other to form the handle. Holding the handle up to the drawer or door face, mock up where you want the handle to go and mark the spot where the hardware will go with a pencil. Each mark should be 4" / 5" / 6" apart for Small / Medium, / Large.
- Drill two pilot hole at the marks using a 1/8" drill bit. Using the pilot hole as the center, next drill the full-size holes using a 7/32" drill bit.
- Thread the Chicago screws (surfaceless head) through the leather straps and into the holes you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fits your project the best.
- Secure the pull by inserting and tightening the chosen back screws into the Chicago screws on the backside of the door/drawer. Nicely done!

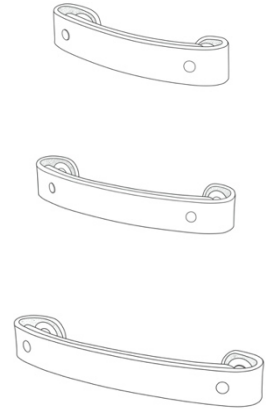

We'd love to see pictures of your installations! Share them with us at [walnutstudiolo@gmail.com](mailto:walnutstudiolo@gmail.com), or find us on social media as @walnutstudiolo.

### What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could:  
a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or  
c) mail it back to us for re-use: Walnut Studiolo - Reuse Program, 36005 Hwy 53, Nehalem OR 97131.



walnut




Walnut combines thoughtful modern design with old-world craft.

🌐 walnutstudiolo.com  
📞 503.447.6889

## “The Tilikum” Leather Drawer Pull (Small, Medium, Large) Installation Instructions

- Gather your tools: ruler, drill, screwdriver, pencil.
- Take the leather strap, and fold both ends inward so that the rough backsides of the leather are facing each other to form the handle. Holding the handle up to the drawer or door face, mock up where you want the handle to go and mark the spot where the hardware will go with a pencil. Each mark should be 4" / 5" / 6" apart for Small / Medium, / Large.
- Drill two pilot hole at the marks using a 1/8" drill bit. Using the pilot hole as the center, next drill the full-size holes using a 7/32" drill bit.
- Thread the Chicago screws (surfaceless head) through the leather straps and into the holes you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fits your project the best.
- Secure the pull by inserting and tightening the chosen back screws into the Chicago screws on the backside of the door/drawer. Nicely done!

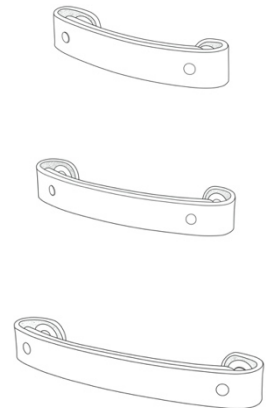

We'd love to see pictures of your installations! Share them with us at [walnutstudiolo@gmail.com](mailto:walnutstudiolo@gmail.com), or find us on social media as @walnutstudiolo.

### What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could:  
a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or  
c) mail it back to us for re-use: Walnut Studiolo - Reuse Program, 36005 Hwy 53, Nehalem OR 97131.



walnut



