




Step 1) Choose the correct size nylon spacer and attach it on the handle.



Step 3) Attach the ring base collar to the handlebar.

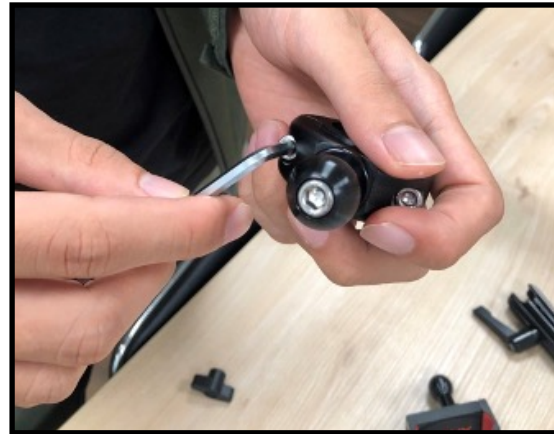

Step 2) Loosen the 2 hex screws on the ring base collar.



Step 4) With the nylon spacer inserted, tighten the 2 hex screws on the ring base collar.



Step 5) Open the center link bar by loosening the handle.



Step 6) Insert the center link bar onto the ring base collar and insert the smartphone top clamp.



Step 7) Find the optimal position angles and tighten down the handle.



Step 8) All done, great job!