


INSTALLING YOUR LEMON DROP MURAL SHOP ARTWORK!

YOU WILL NEED:

- 2 people (recommended)
- Isopropyl/rubbing alcohol
- a cloth
- a soft rubber squeegee or a card (a credit card works fine)
- a pencil
- a tape measure
- a level
- a knife

Please take note of the different layers that will help you to easily install your decal:

- Transfer Tape (translucent top layer)
- Design
- Backing paper (opaque white layer)

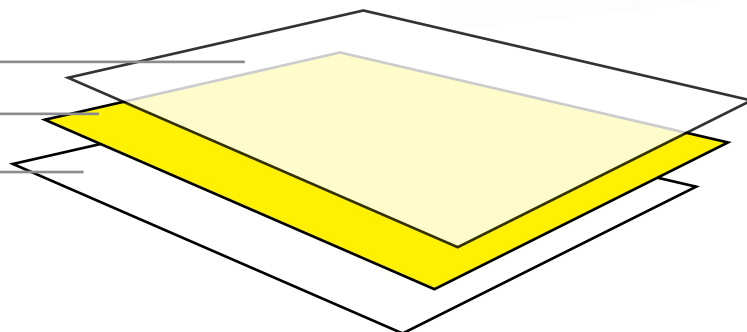

PRIOR TO INSTALLATION:

Unroll your Lemon Drop decal

Lay your decal flat, at room temperature, for up to 90 minutes, or until it stops curling.

Prep your wall (important!)

We strongly recommend using a cloth saturated with alcohol to remove any dirt, dust, grease and residue, as any of these substances can prevent your decal from properly adhering to the wall.

Do not install your decal onto cold or damp surfaces.

Note:

Installing on top of new paint

Please wait at least one week for the fresh paint to fully cure. Dark coloured paints typically require even more time to fully cure, sometimes up to 3 months. Check cure times with the paint manufacturer if you are unsure.

INSTALLATION:

Alignment

- Measure the surface where the decal is to be installed.
- Use a tape measure, level and pencil to measure the surface and create any registration marks that may be useful. A level line and center mark are often helpful. Marking the edges of where the decal will be placed is also recommended.
- Determine the center of your decal, and any other registration references that will help you to correctly position your decal straight and level on the first attempt.

Application

- Carefully peel off the entire backing paper from the decal.
- Align the top edge of the decal and transfer tape to the ceiling or your level line.
- Gently stick the top edge (1-2 inches) of the **transfer tape only**, allowing the rest of the decal to hang unadhered.
- Stand back and verify that the decal is straight and correctly positioned. If not, unstick the top edge of the transfer tape, and attempt to correctly position the decal once again.
- Once you are satisfied with the decal's positioning, press firmly, either with hands, card or squeegee, over all portions of the decal to ensure good adhesion with the wall. Start at the top, in the center and work your way toward the edges, forcing out any air bubbles as you work your way toward the bottom of the design.
- Beginning at one of the corners, carefully start to peel off the transfer tape. *Do not pull the transfer tape perpendicularly away from the wall. This will make the decal more likely to lift.* Instead, pull the tape back over itself, along the wall. (figure 5)
- Use caution, especially with thin or complex designs, to ensure that every portion of the decal remains adhered to the wall, as you continue to remove the transfer tape.

INSPECT

Inspect the installation and squeegee out any remaining air bubbles. Press down firmly along all edges to ensure that the entire decal is well adhered.