




ASSEMBLY INSTRUCTION

SIDEBOARD PIX 2X4

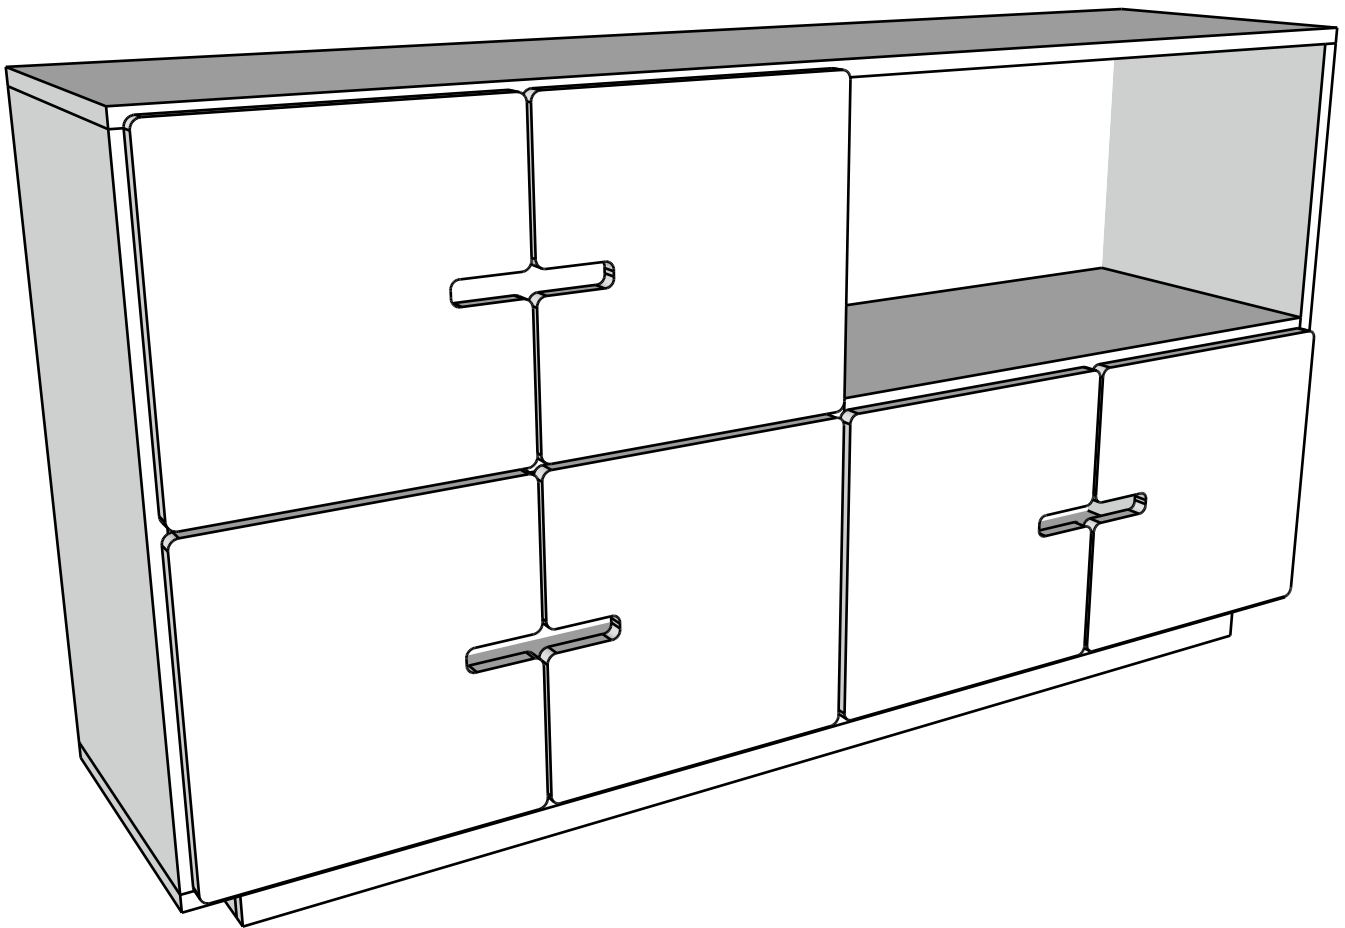



X12



X12




X8



X12




X12

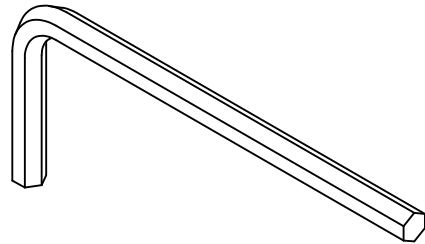


X1

1

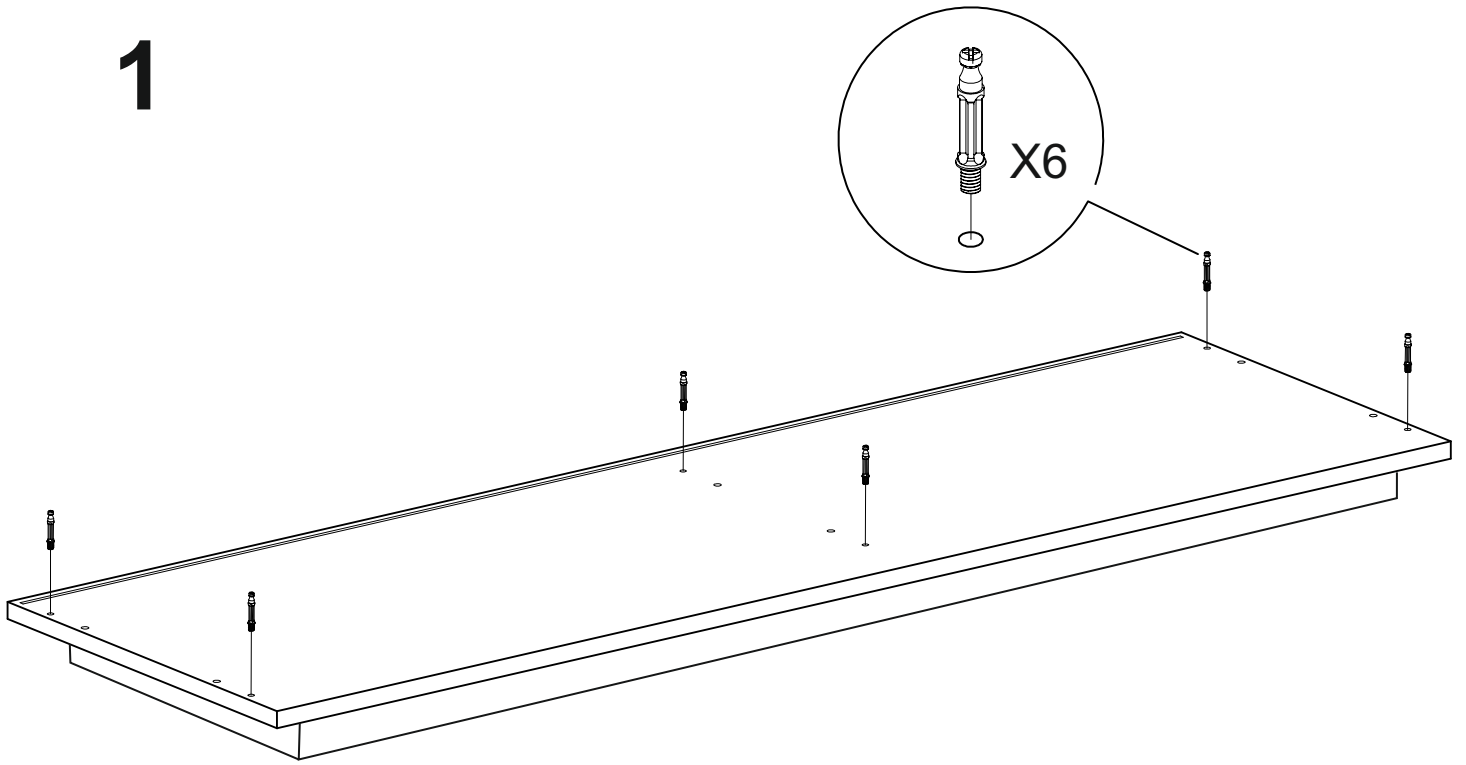


2

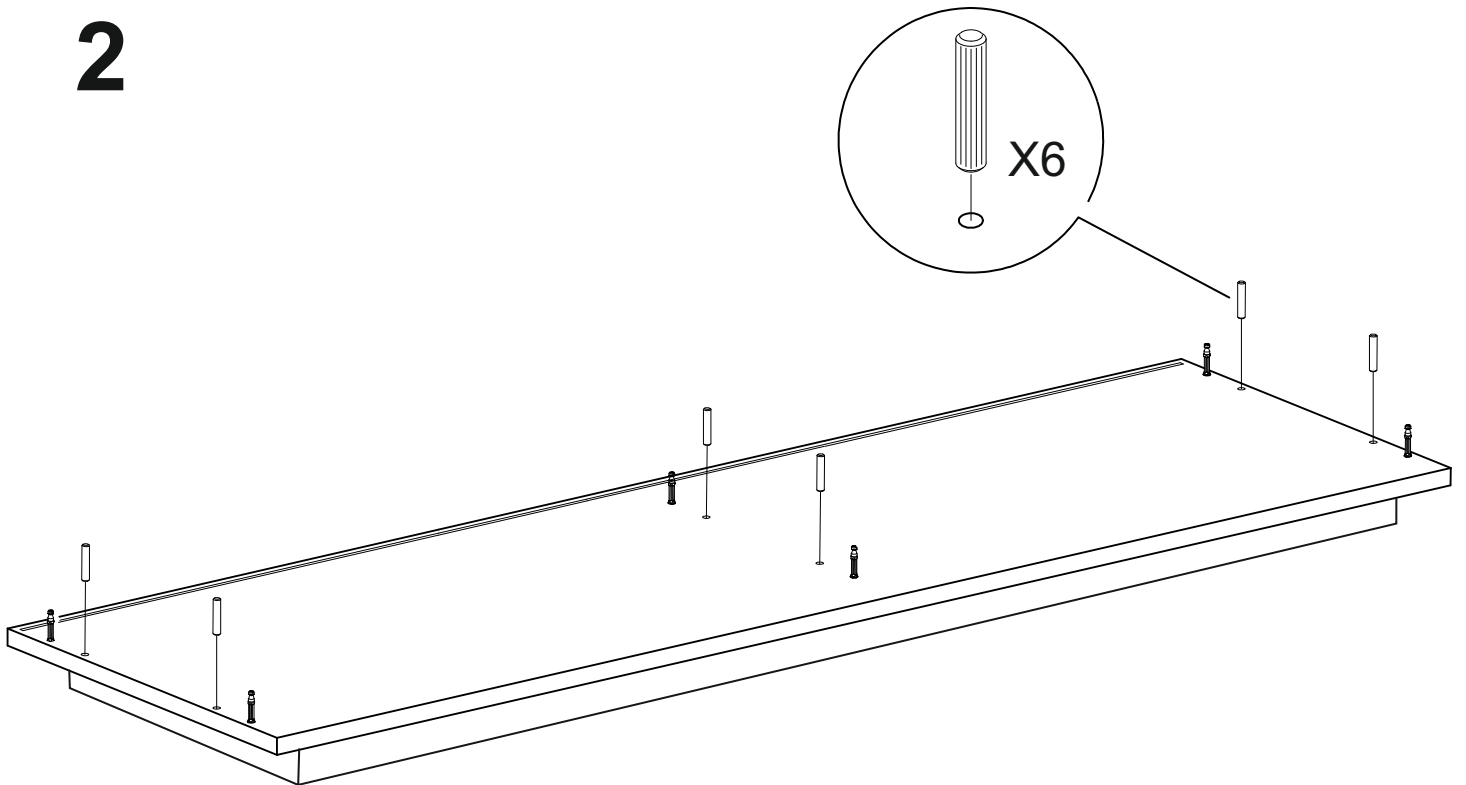


IMPORTANT!
NO DOOR HINGES HOLES.


3

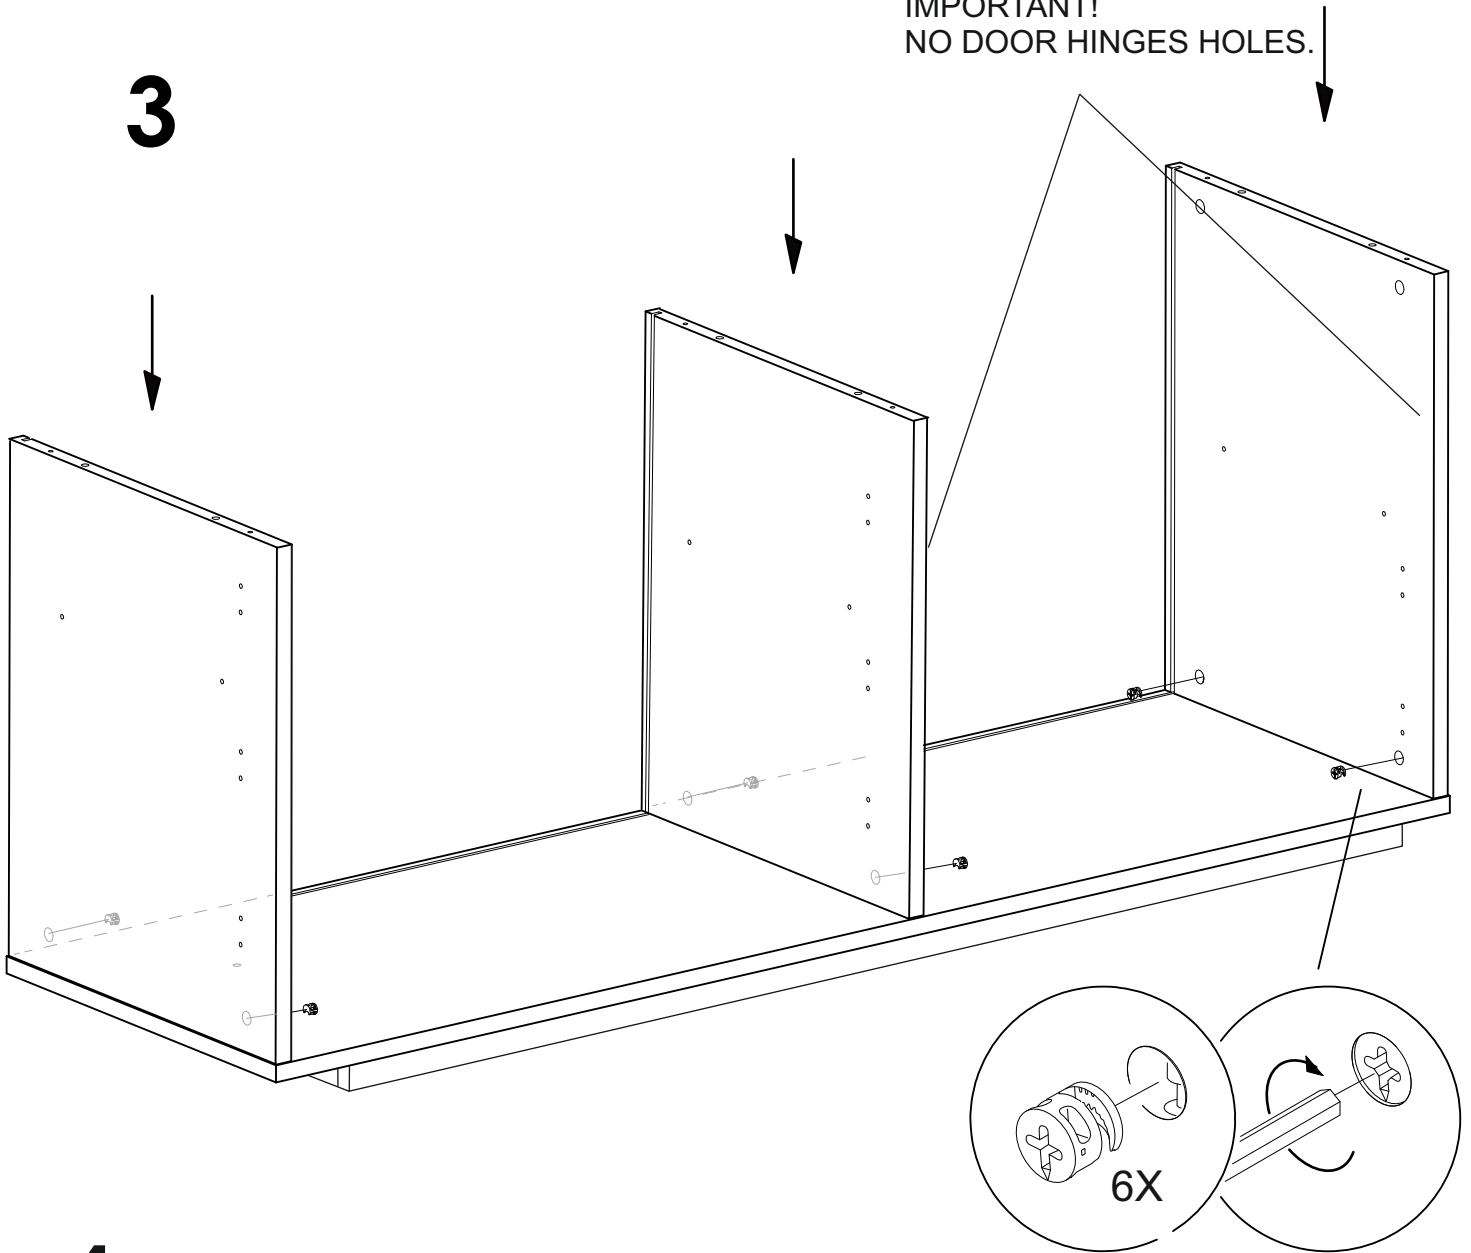


4

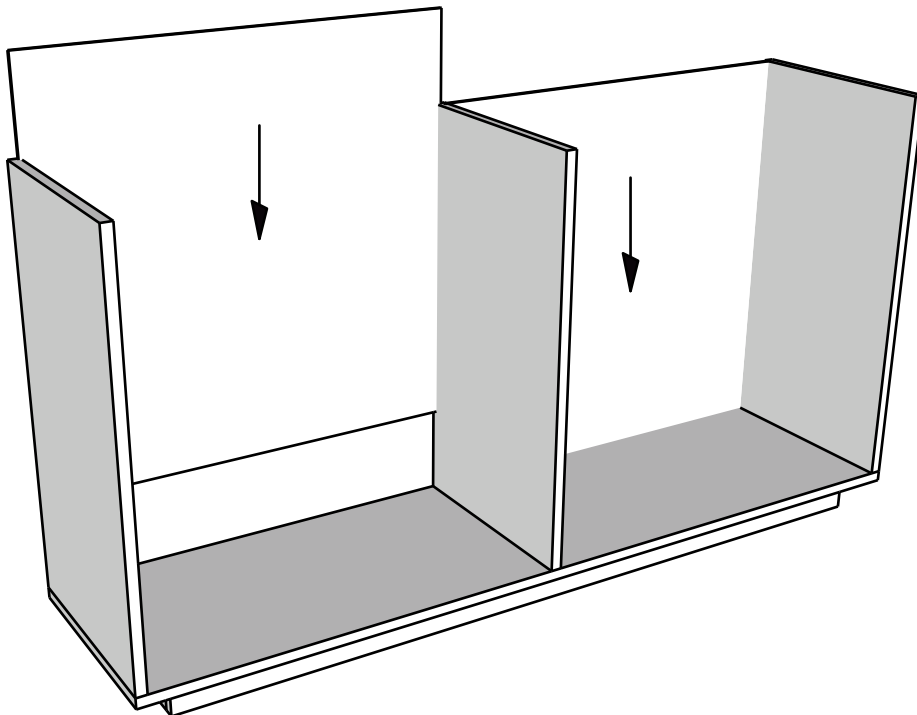


5

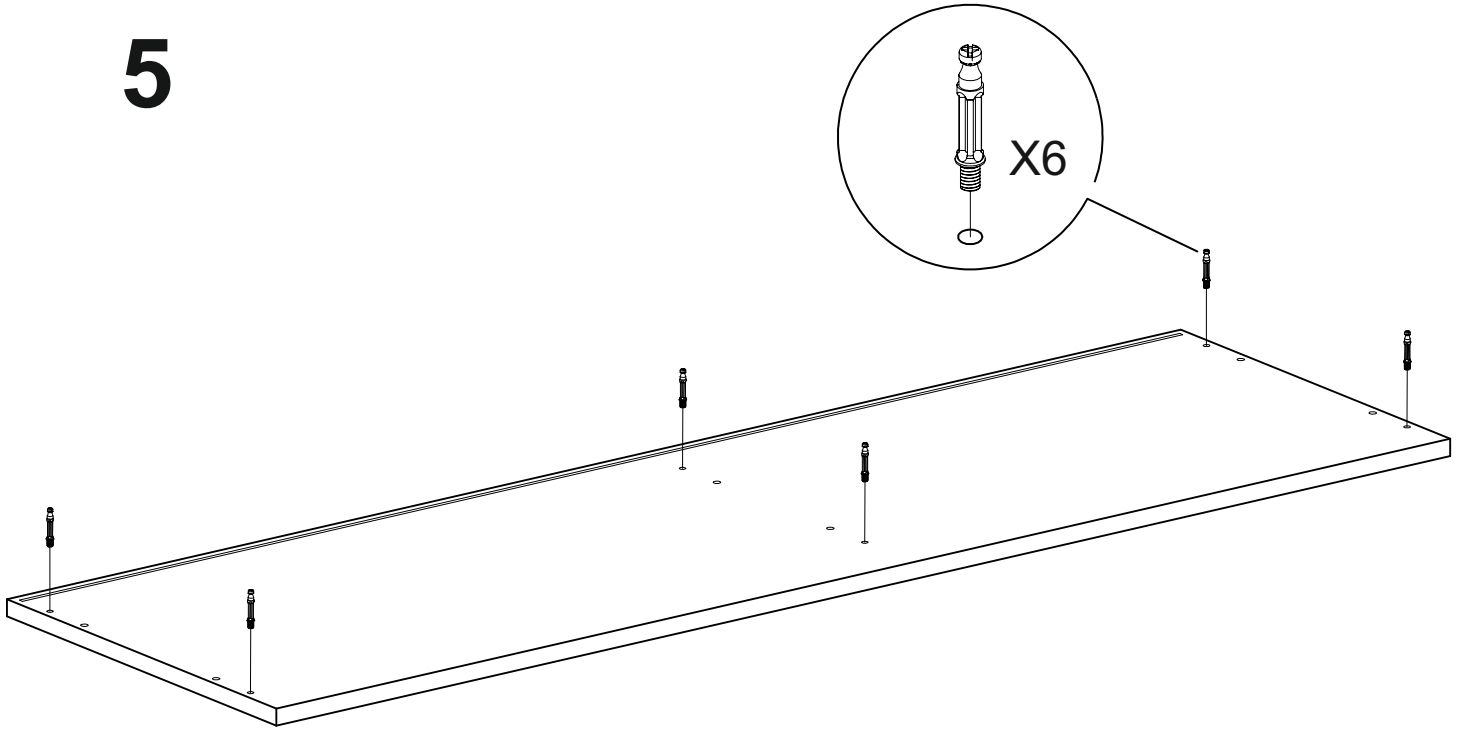




6

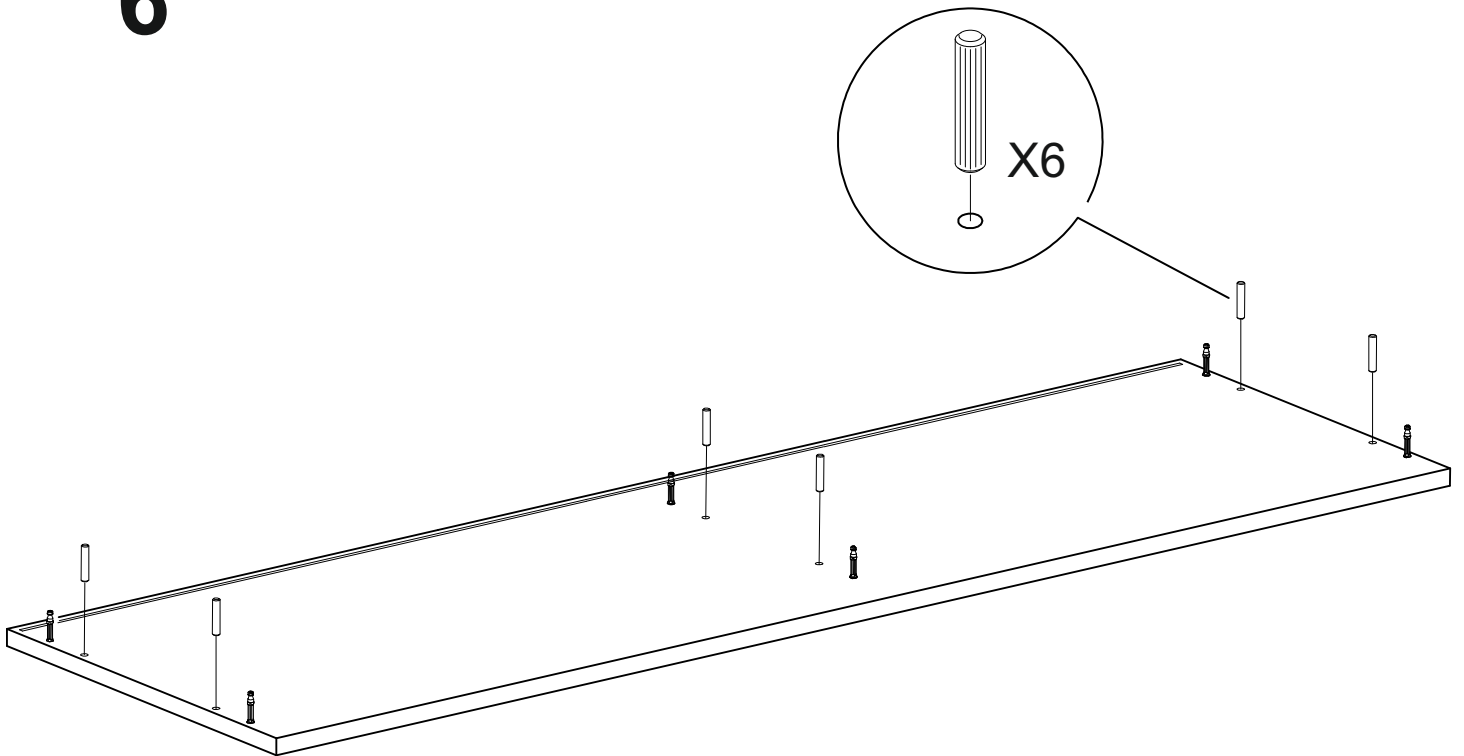


7

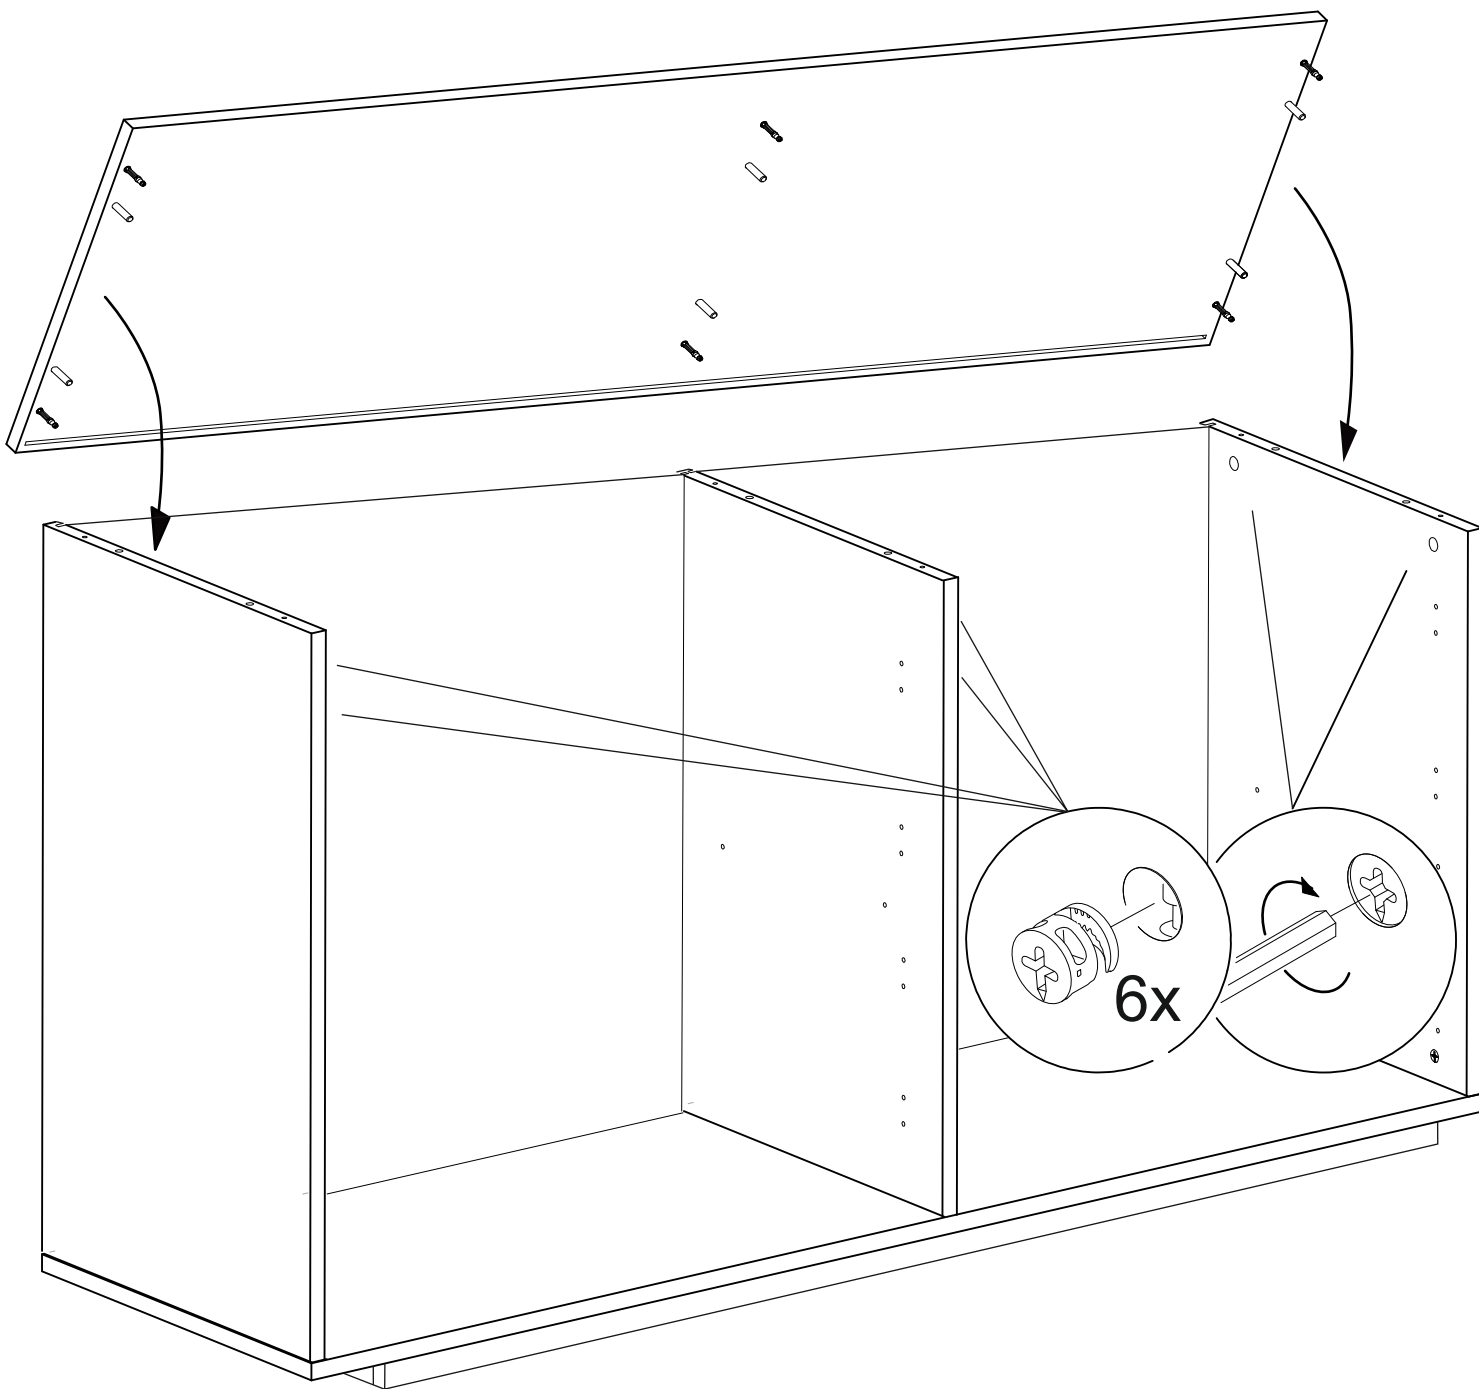

8

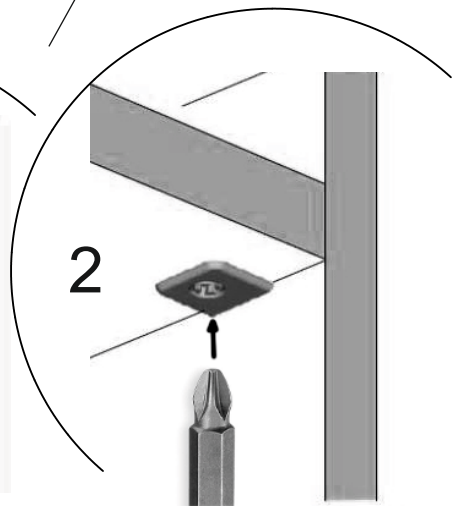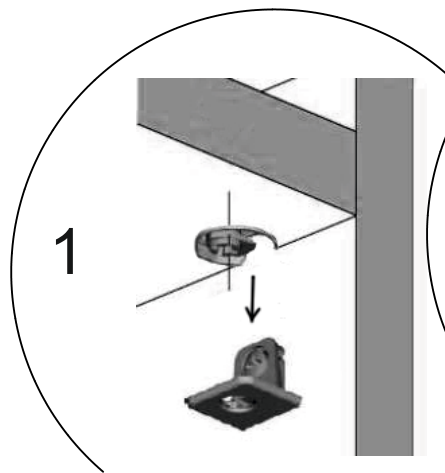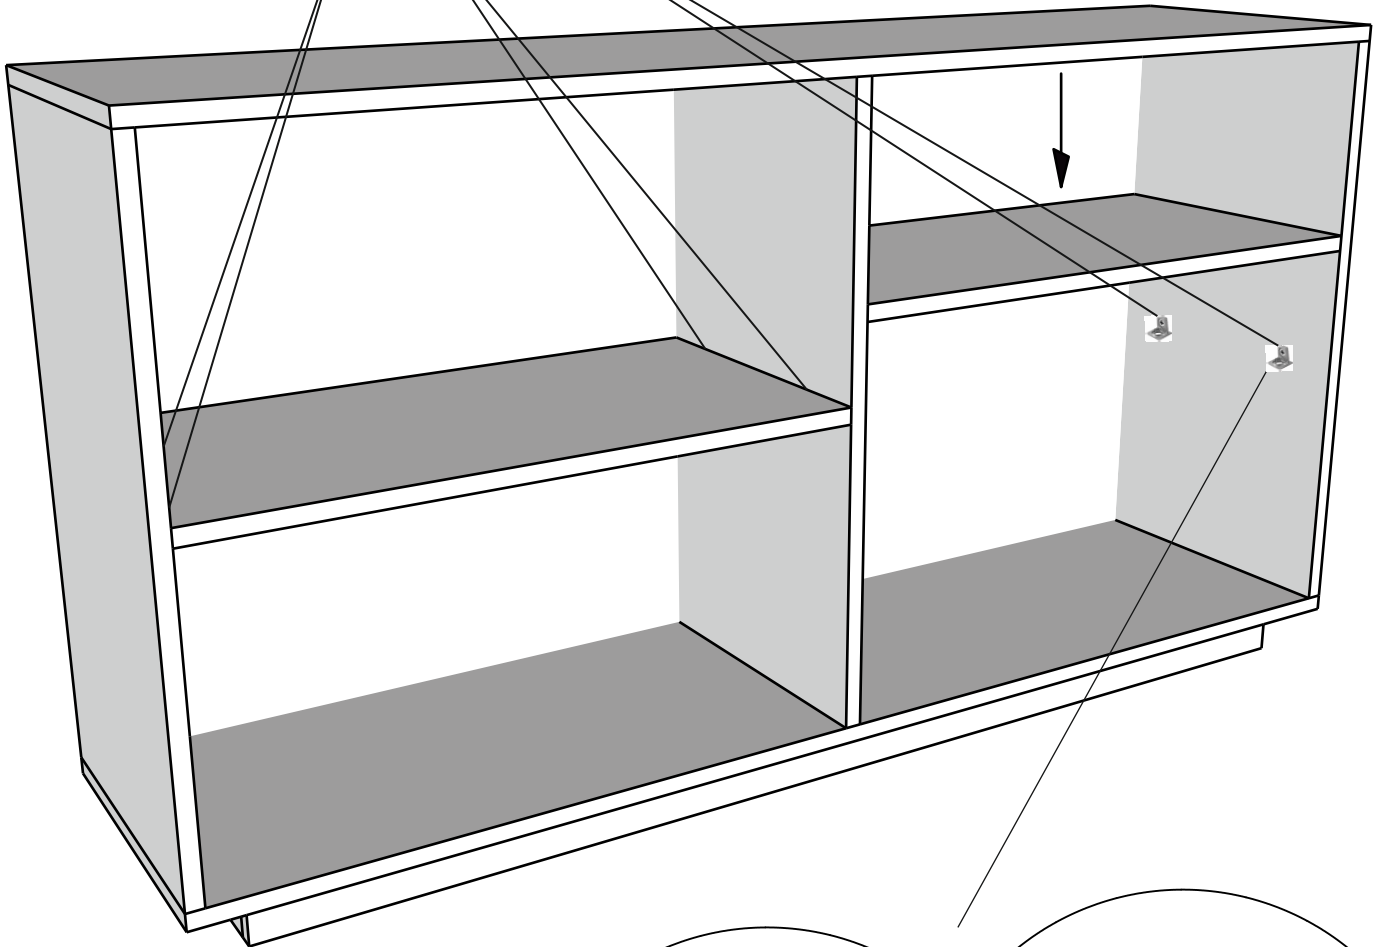

9

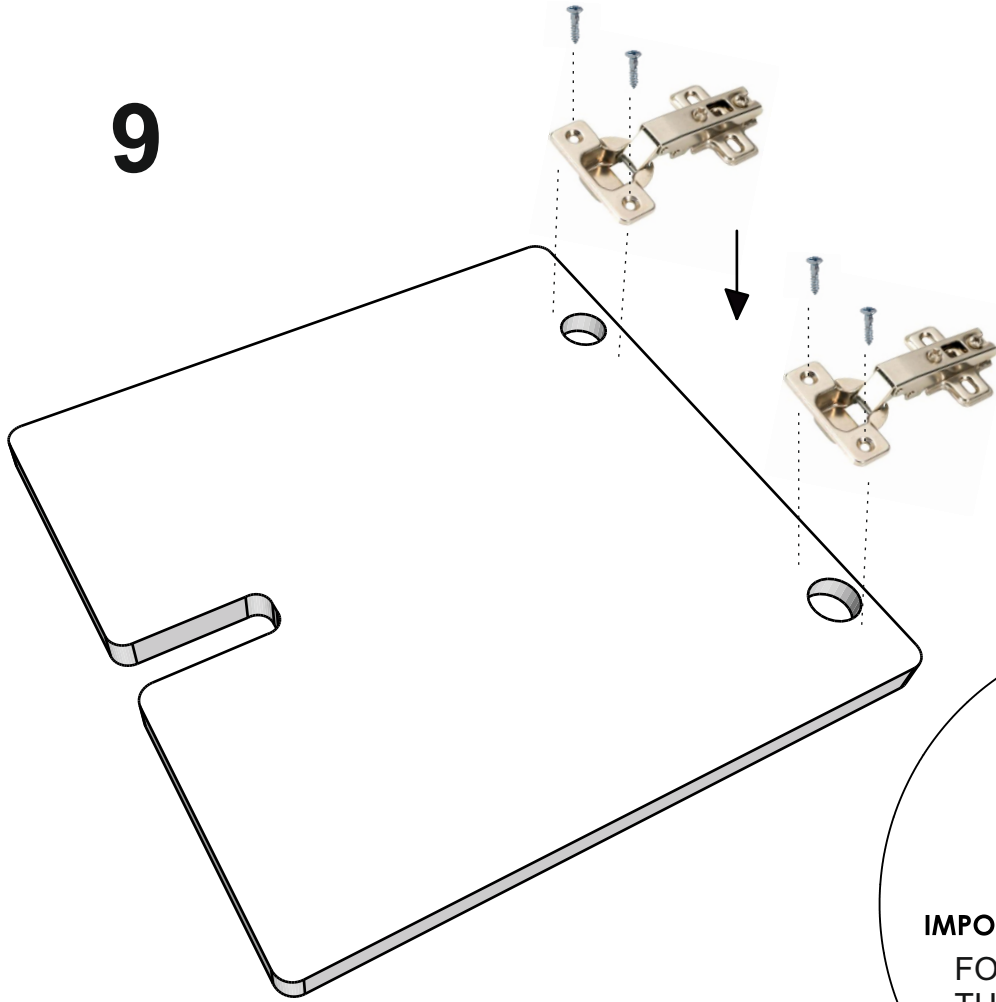

IMPORTANT:
FOR CENTER DOORS USE HINGES
THAT HAVE SMALL 11MM SCREWS



10

