



1. Measure the size of the place to be attached.



2. Cut the film so they measure about 2-3cm larger than the window panes being covered.




3. Generously spray enough water mix with a little bit dish washing liquid onto the window surface.



4. Peel off the clear backing of the film. Please spray a lot of water on the back side of the film when peeling off.



5. Use squeegee to push the bubbles out, from center to edges.

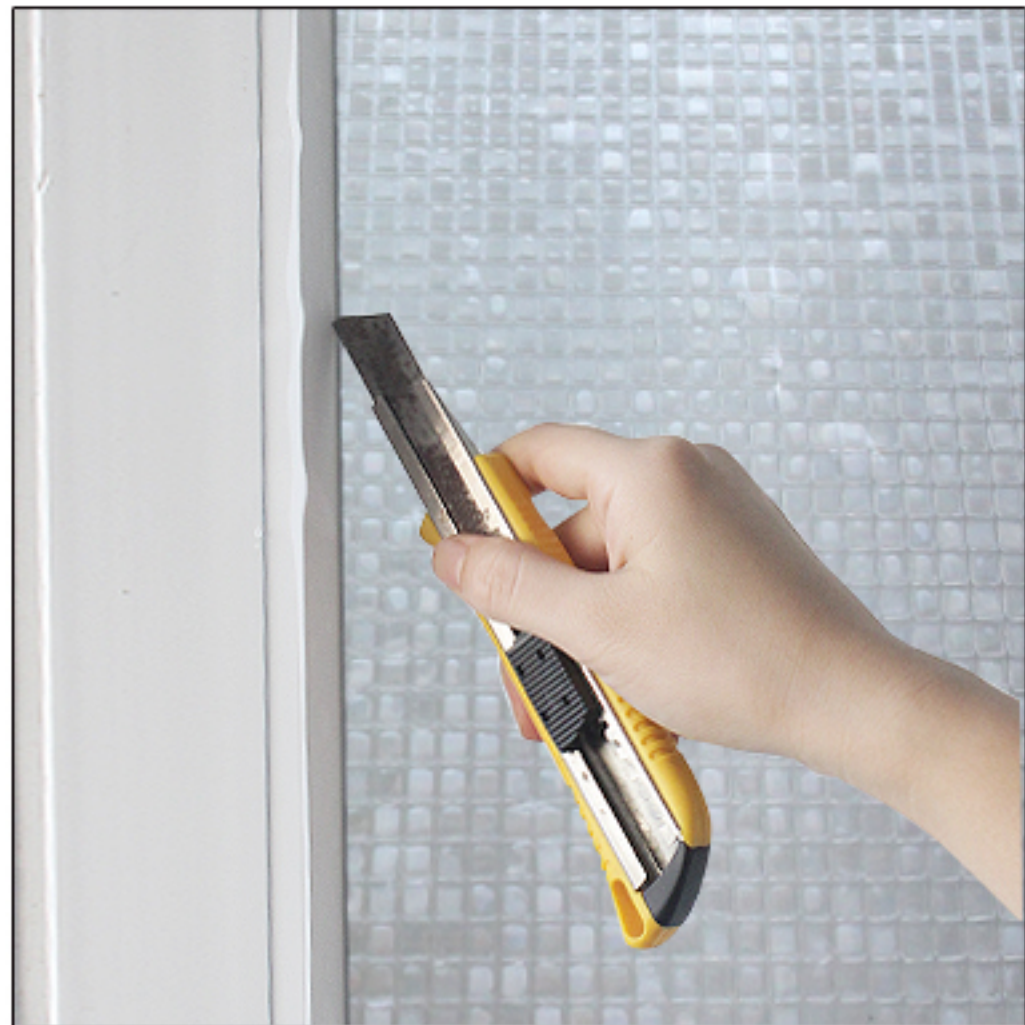

6. Trim the extra film. Make sure to leave about 2mm gap between the film and the edge of the window.

Required tools



Tape measure



Squeegee



Utility knife



Sprary bottle



Towel