


# Wiring guide for Volume and Jack Harness

1. Position volume pot as shown (indicated by black dot).
2. Solder ground/earth wire of pickup (generally bare OR black insulated) to back of pot at position (a).
3. Solder hot/active wire of pickup (generally white OR red insulated wire) to centre lug at position (b).
4. If required, you can also solder an earth/ground wire to back of volume pot then connect it to underside of your bridge.
5. You're now ready to install the pickup and harness.

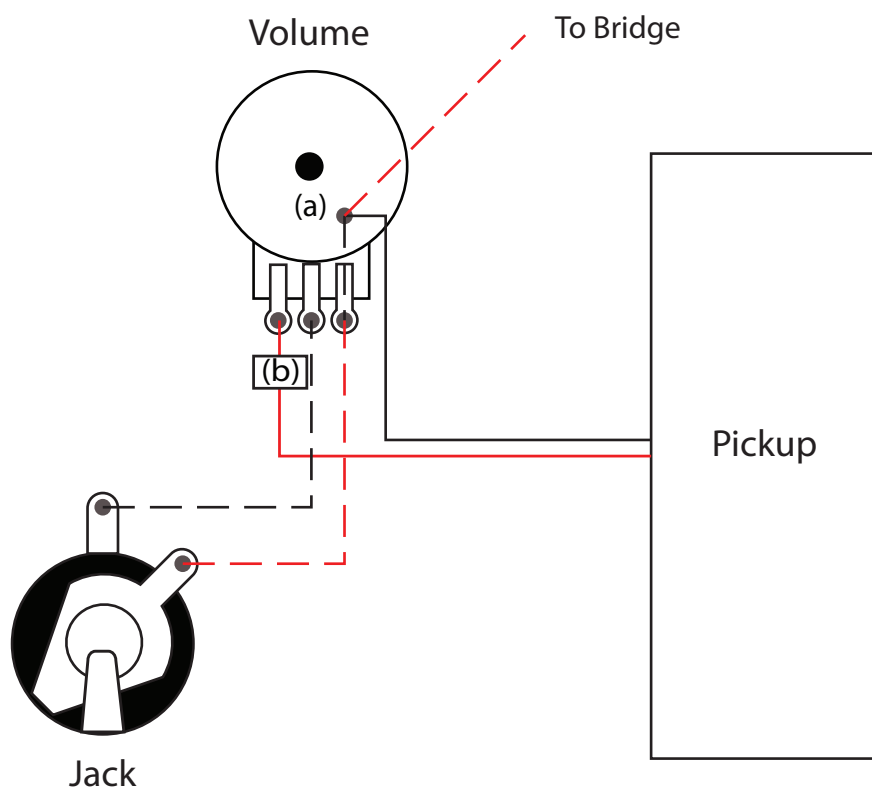

\* Dashed lines indicate pre-installed/soldered wires