


**For ease of installation:  
Install LSD + Ring Gear into the  
cover first. Then place cover  
and LSD into the rear end.**

**With the vehicle level, fill the  
differential per OEM  
directions. Total capacity is  
1.2L**

**Reuse OEM 14mm  
Cover Bolts**

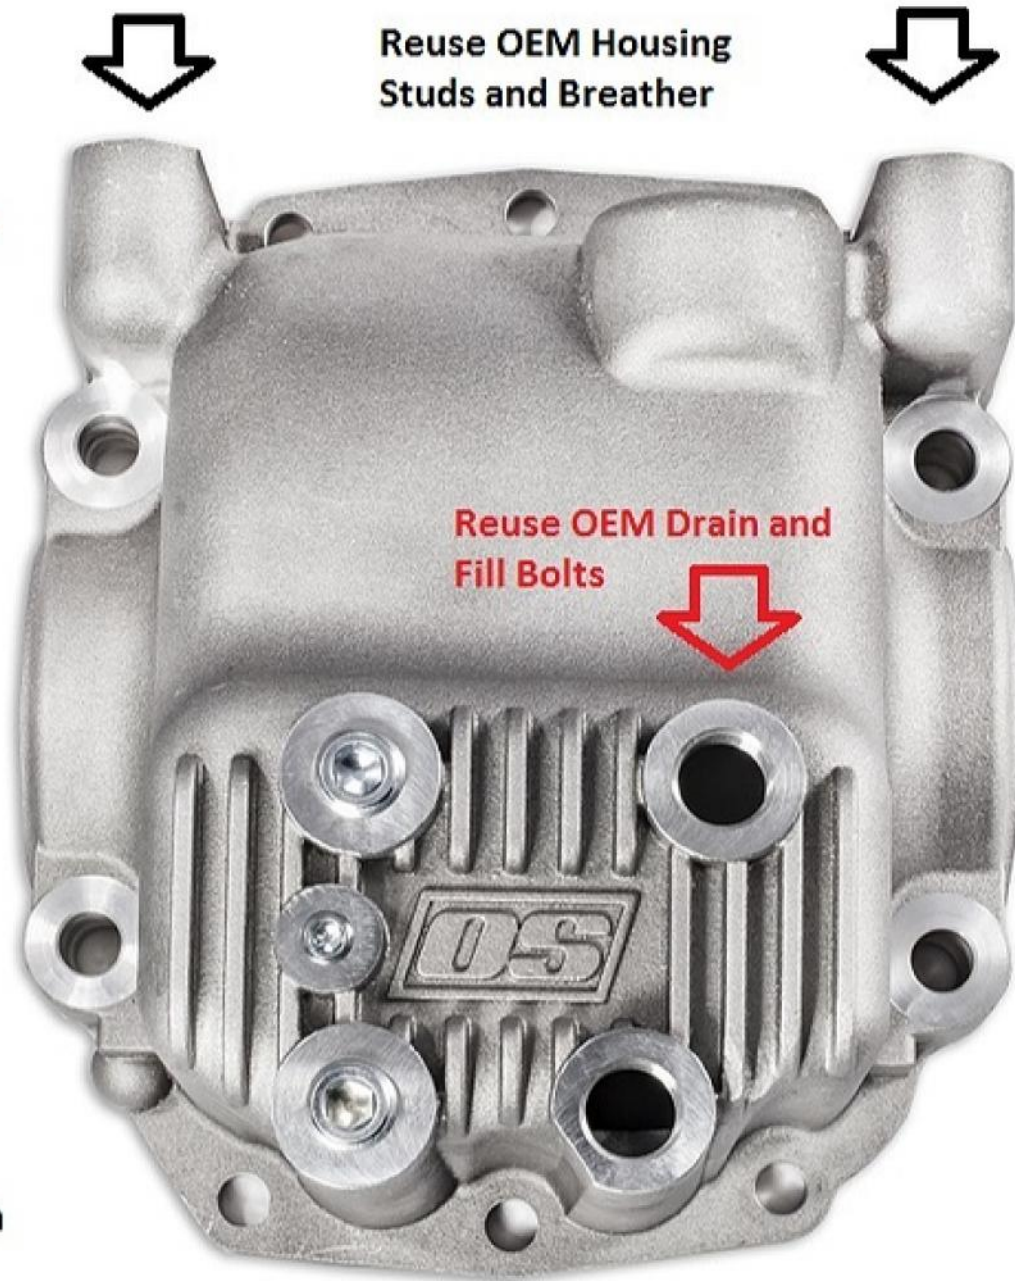

**Reuse OEM Housing  
Studs and Breather**

**Reuse OEM Drain and  
Fill Bolts**

**Reuse OEM Bearing  
Cap Bolts (17mm)**