

# Gladiator A-Pillar Mirror with 1" or 20mm Ball OR Ball Mount Delete



## Base Installation Mount Instructions

*Thank you for purchasing the CMM Offroad Gladiator A-Pillar Mirror Base Solution*

**You will need:** 10mm socket and ratchet, 5mm and 8mm Allen Wrenches, Flat Blade Screwdriver or Trim removal Tool

**Step 1** Begin on the driver's side. Remove the upper or lower cover plate from the A Pillar Handle with the flat Blade Screwdriver or Trim Removal Tool.



**Step 2** Use an 10mm Socket to remove the bolt inside the handle.



**Step 3** Install the mirror base into the handle and tighten the provided bolt with a 5mm Allen.



**Step 4** Carefully re-install the 1" or 20mm Ball OR Delete mount and tighten with an 8 mm allen wrench.  
Do not exceed 180 in/lbs




**Step 5** Repeat this process on the passengers side.

**Step 6** Assemble Mirror

# JL A-Pillar Mirror Base Ball Mount Installation Instructions



## Step 7 Install Mirror

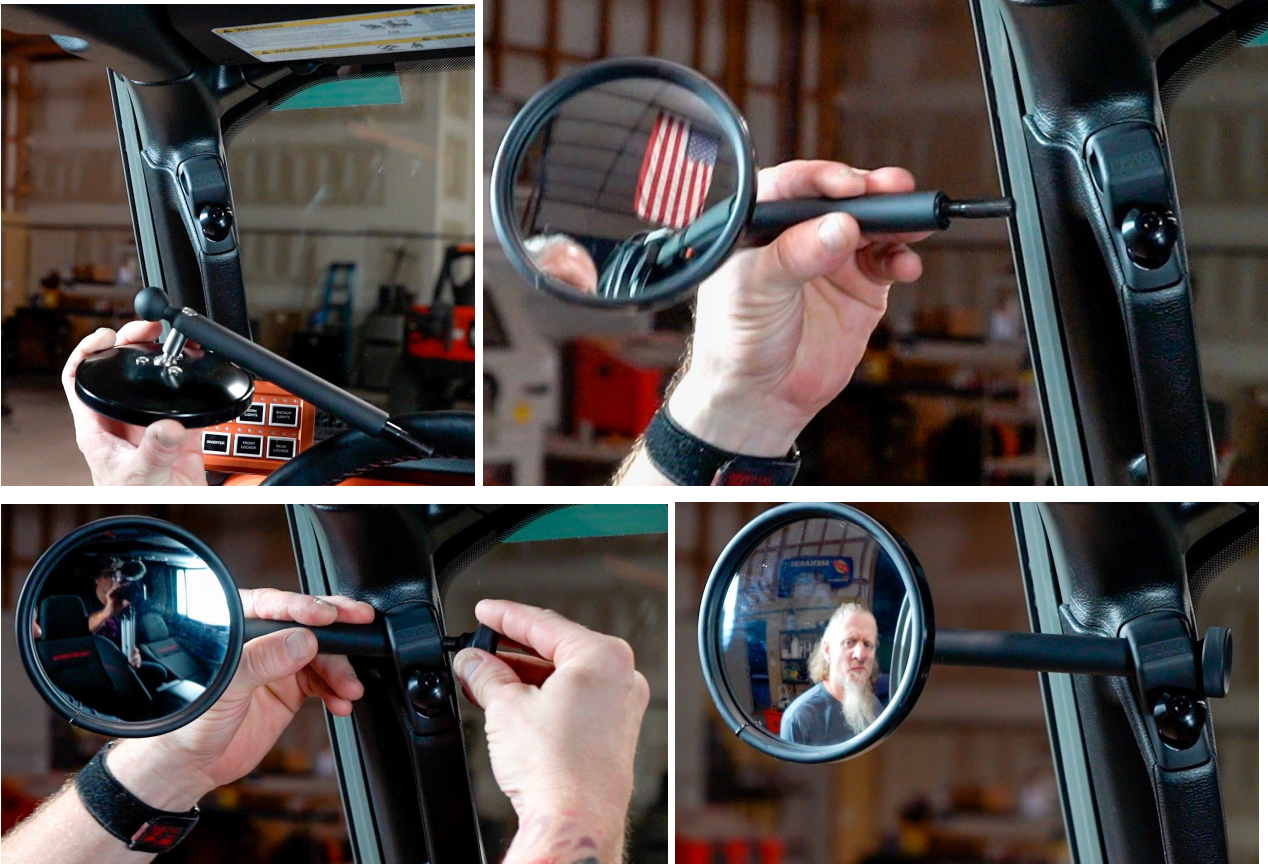

## TIPS N TRICKS

Adjusting mirror once installed

The three screws on the back of mirror adjust tension, if over time the mirror seems to "loosen"

