

CMM JK ACCESSORY MOUNT

Installation Instructions

Thank you for purchasing the CMM JK Accessory Mount


You will need: 18mm socket and ratchet
1/4" and 3/16" Allen Wrenches
1/2" and 7/16" Wrenches
1/4" Drill bit and Drill

Step1 Mount the handle to the mount plate with the 2 countersunk 5/16" bolts. The handle goes to the outboard side of the seat mount. There are options for where the handle can be mounted to fit your preference.



Step 2 Use an 18mm Socket to remove the drivers seat. Use caution while unplugging the electrical connectors. Once the connectors have been unplugged, **DO NOT** turn on the ignition key until they have been reconnected.

Step 3 Pull up the seat cover to expose the four holes that the Accessory Mount will bolt to.

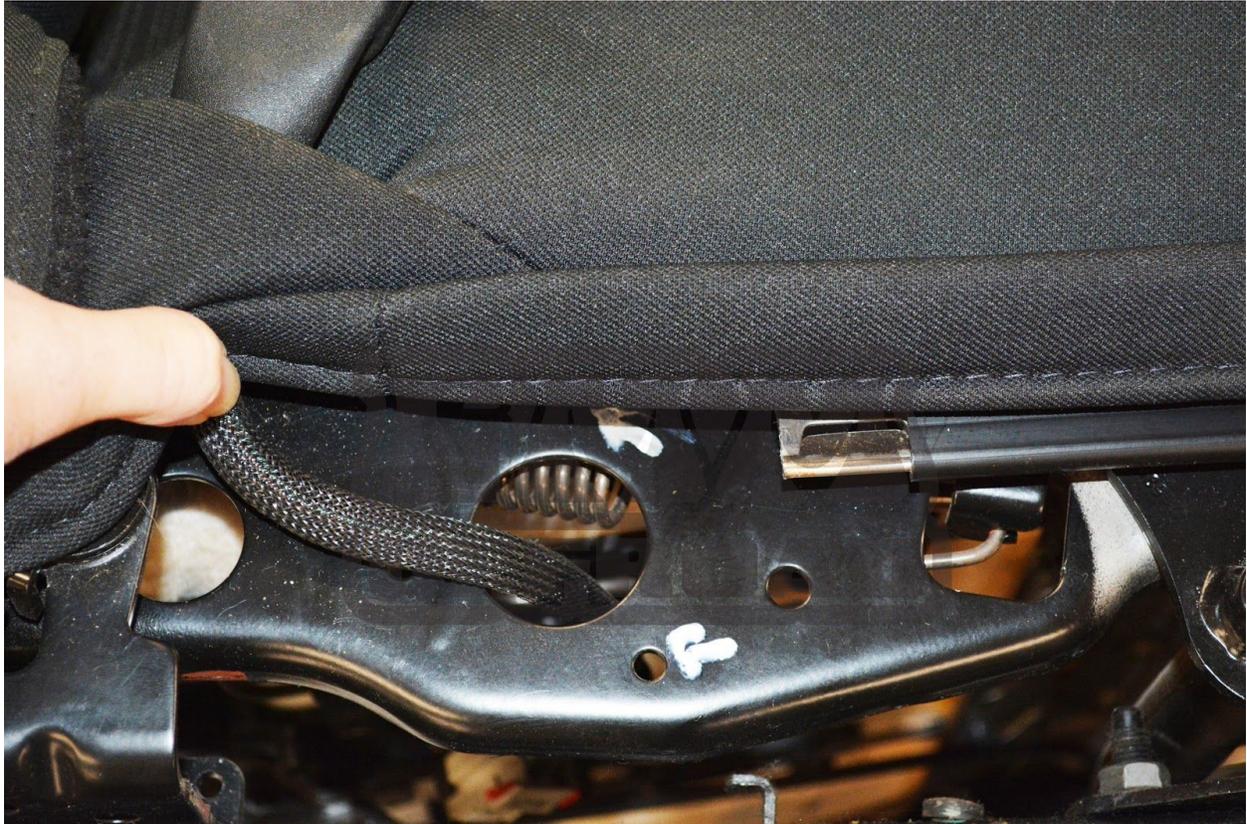

Step 4 Use the two 5/16" socket head cap screws and install the handle to the seat frame. Install the nuts and tighten.

Step 5 The two rearward holes in the seat frame need to be drilled open to 1/4". Use a 1/4" drill to do this using the Accessory mount as a drill guide.



Step 6 Install the two ¼” socket head cap screws and nuts and tighten.

Step 7 The seat is now ready to be reinstalled in the Jeep.

We have provided an array of 8-32 tapped holes in the plate to be able to mount a wide variety of accessories. If you choose to use a weapons holster on this mount, you do so at your own risk. Please check your local and state laws. CMM Offroad/Carolina Metal Masters takes no liability in this mount and for how it may be used by the customer.