


Installation Guide: Model 3 Multi-layer 3D floor mats

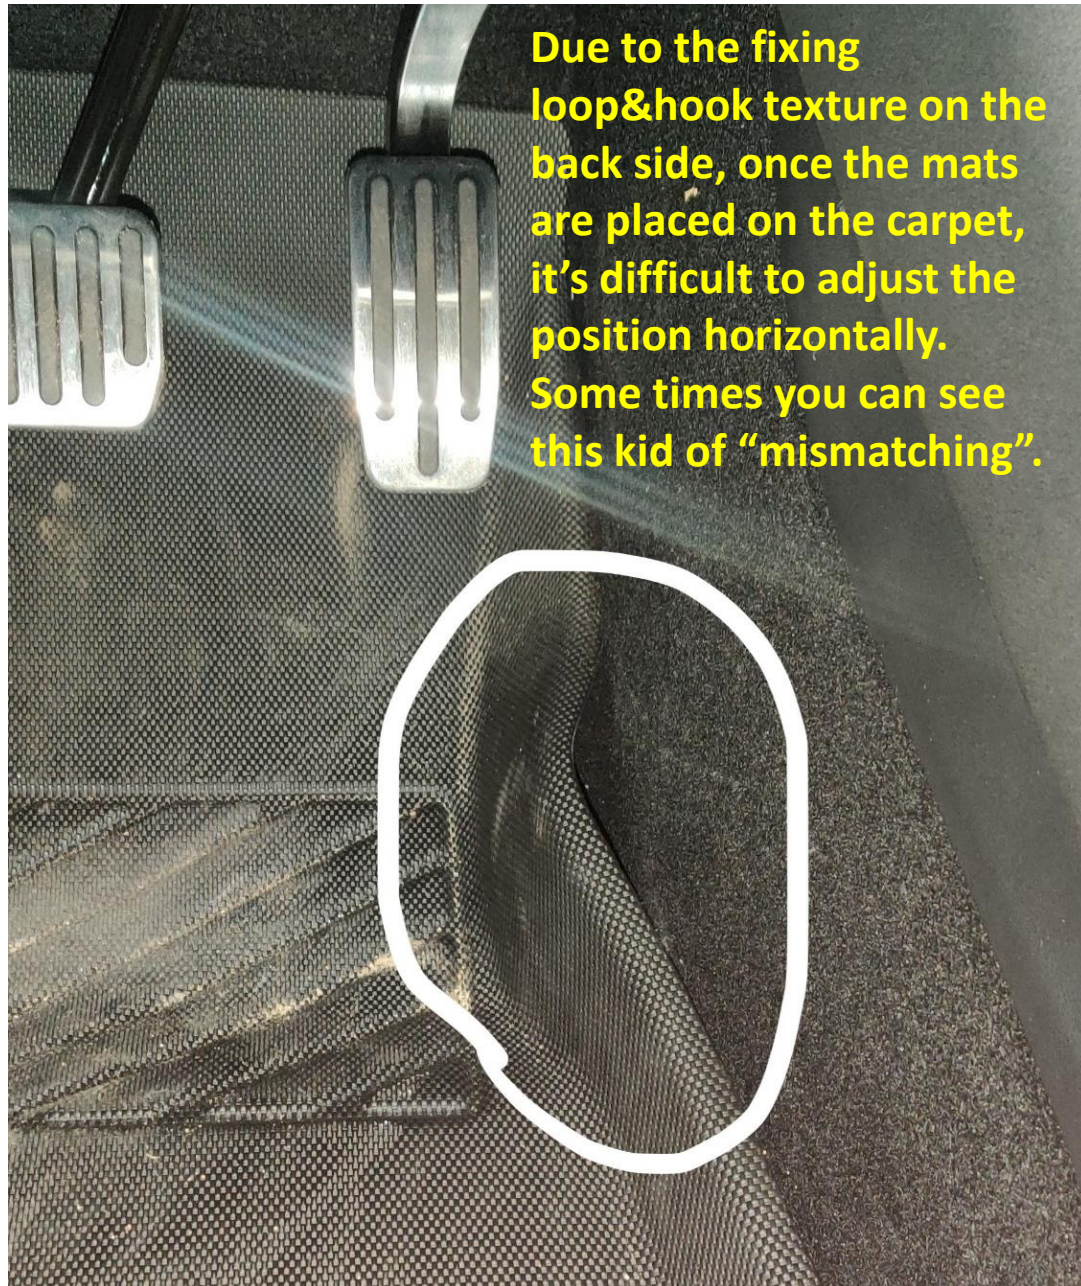

Recommended installation steps:

1. Begin the alignment with ①, then follow ②③④.
2. If you see any part is not well aligned, lift the whole mat upwards, then adjust horizontally, then put the mat down. It can take about 5 adjustments till a ideal match.
3. When the mat is at proper location, press the mat firmly downwards, from the centre to the edges.