



SADDLEBAG SIDE LIGHTS

WARNING This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.


ATTENTION This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for easy assembly and/or plug and play. We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Goldstrike3d.com for our complete warranty policy.

Installation Instructions:

- Step 1 Park on a level surface, allow the vehicle to cool. Lift the motorcycle onto its center stand if available.
- Step 2 Open the saddlebags and remove side covers below the seat by pulling away from the motorcycle with steady pressure.
- Step 3 Remove the seat by removing the socket head screws under the front of the seat shown in Fig.1. Pull up on the front of the seat and slide forward.
- Step 4 Install Goldstrike™ P/N 48000 (sold separately). Plug in both Goldstrike Saddlebag Side Lights to familiarize yourself with connector locations, the lights, and how they function. Unplug the lights and set them aside.
- Step 5 Starting with one side of the motorcycle at a time, remove the saddlebag latch hooks, Fig.2 (A). Set them aside for re-installation.
- Step 6 Remove the bottom fastener from the support cable, Fig.2(B). Use a small flathead screwdriver to undo the bottom pivot on the gas shock. Set them aside for re-installation.
- Step 7 Place a blanket on a work surface so you have a place to set the panel. Remove the painted outer panel by removing the 10 Phillips head screws, Fig.2(C). Set the screws aside for re-installation. Set the panel on the blanket.
- Step 8 Remove the black plastic panel from the painted panel. Start at the front of the part and push out the screw bosses, then pop out the rear screw bosses. Now pull the two panels apart. It will take some force.
- Step 9 Remove the reflector. Set the nut aside for re-installation.
- Step 10 Use a "step drill" to create a 5/8" (16mm) hole through the black panel. Use the reflector alignment pin hole as a guide. Fig.3 (A) and Fig.4.
- Step 11 Use a "step drill" to create a 5/8" (16mm) hole through the painted panel, using the rear dimple as a guide. Fig.5 and Fig.6. Clean off any excess flashing from drilling by inspecting the backside of the panel. Lightly run the "step drill" over it to remove sharp edges.

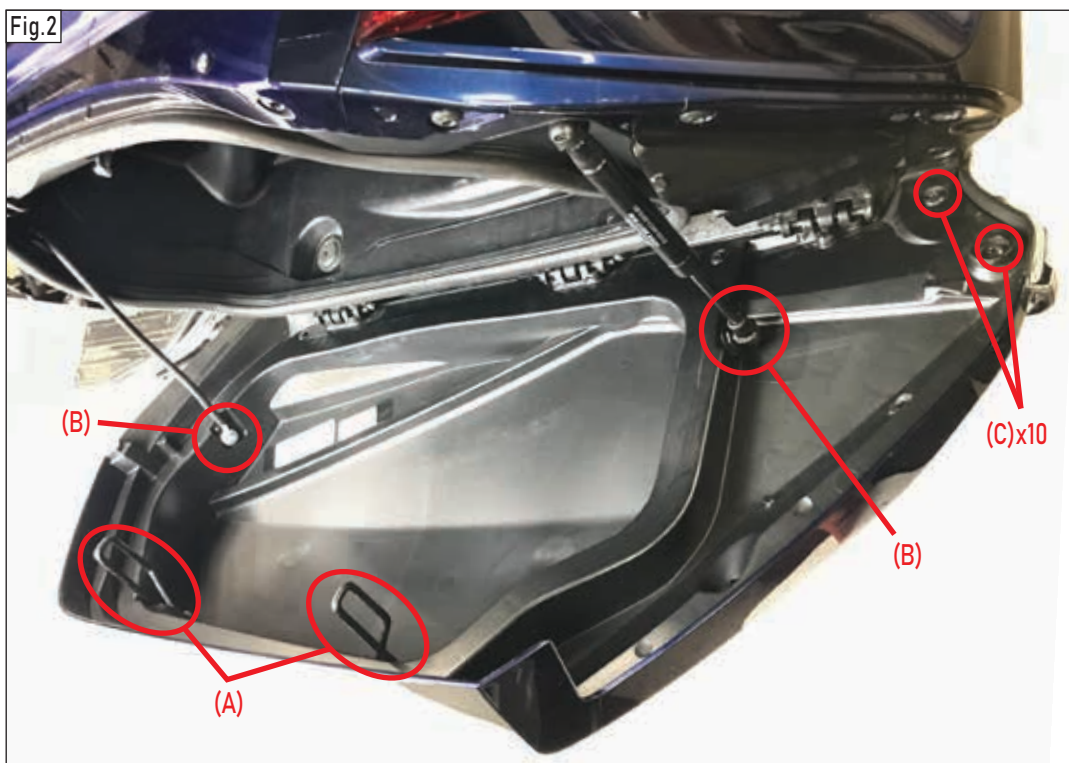

Step 12 Install the Goldstrike Saddlebag Side Light onto the black panel using the nut from Step 9, Fig.3(B), and route the wire through the drilled hole, Fig.3(A).

Step 13 Assemble the black panel and painted panel, routing the wire through the drilled hole. Reinstall the assembly on the motorcycle.

Step 14 Route the wire under the saddlebag and over the top of the muffler. Clean the mounting surface with an ammonia based cleaner and install a cable tie mount. Capture the wire with a cable tie. Do not over tighten the cable tie. Fig.8

Step 15 Push the wire up along the saddlebag frame, between the saddle bag and the inner fender. The wire will come out under the seat, between the sub frame and inner fender. Fig.9

Step 16 Repeat steps 5 - 15 on the other side.

Step 17 Plug the connectors into the Goldstrike™ Rear Lighting Harness, matching the color of the wires to the correct side. Fig.10

Step 18 Test the lights for run and turn functions.

Step 19 Tuck the wires towards the rear fender so they will not be pinched by the seat.

Step 20 Re-install the side covers, seat, and any other parts removed during installation.

