



## GOLDSTRIKE™ REAR FENDER FILLER STRIPS

Parts Included:	1	Left fender filler strip
	1	Right fender filler strip
	1	Fender filler strip hardware kit

### INSTALLATION INSTRUCTIONS:

1. Park on a level surface and shut off the motorcycle. Ensure the engine has time to cool before installation.
2. Remove rear fender by removing the screws next to the license plate light with a 5mm allen (Fig 1.), and pull the fender from the motorcycle. Carefully unplug the license light electrical connector near the top of the fender.
3. Remove license plate from fender.



Note: It may be easiest to work on a bench or table for steps 4-9.

4. Determine the left and right filler strips then slide them onto the edge of the fender panel. The holes go to the front of the bike inside the fender with the notches at the top. (Fig.2)



### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact that if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:


Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.


Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.

Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

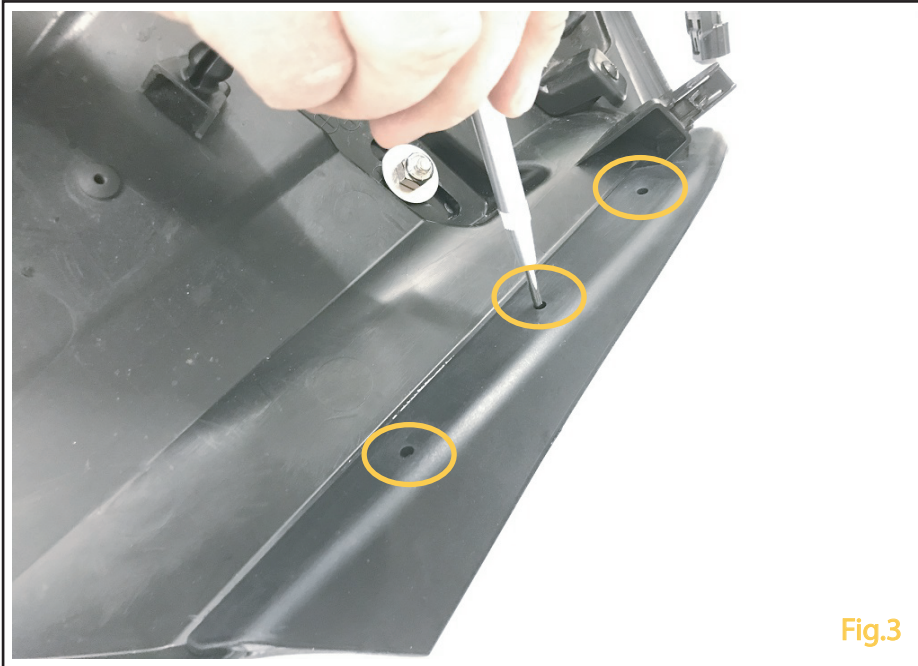

**Fig.3**

5. Make sure the filler strips are pushed fully onto the fender along their entire length. Adjust position if needed for an even fit.
6. Mark holes with a center punch, remove filler strips. Drill a 3/32" hole at each location. (Fig.3)
7. Reinstall filler strips, align holes, and position backplates.
8. Drive screws with washers into position, do not overtighten. (Fig.4)
9. Reinstall license plate. Reinstall fender, connecting and tucking wire into place. Reinstall screws removed in Step 2.

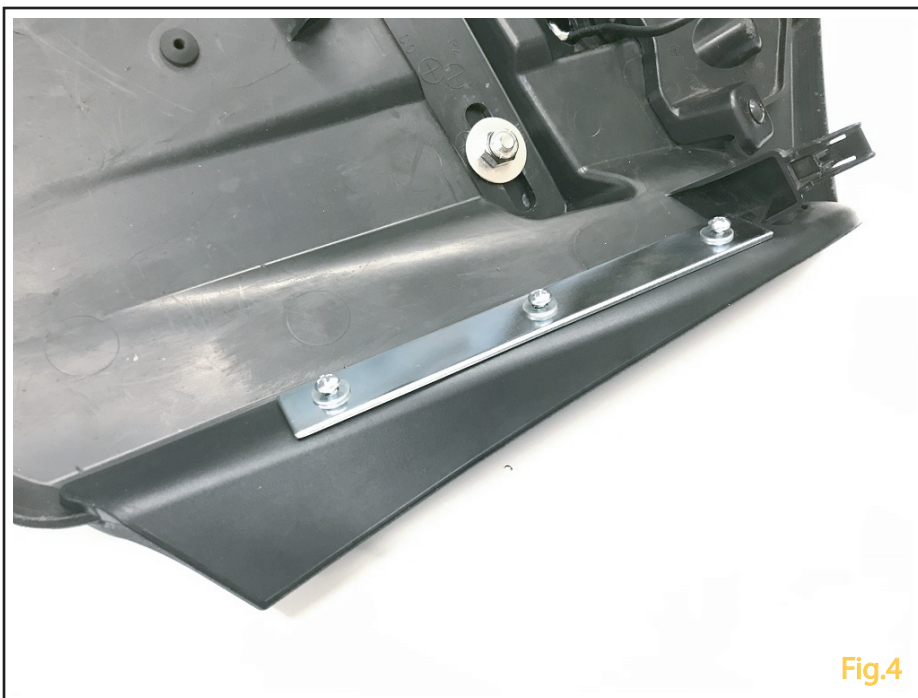

**Fig.4**