



GOLDSTRIKE™ VALVE COVER SET

Parts Included: 1 LEFT VALVE COVER
1 RIGHT VALVE COVER
1 INSTALLATION KIT

Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Lift the motorcycle onto its center stand if available.


ATTENTION: Ensure the engine has time to cool completely before installation.

2. Remove the cover at the front of the cylinder head. Remove the screw from the rear cylinder head cover. Set aside for re-installation. FIG.1

FIG.1



FIG.2

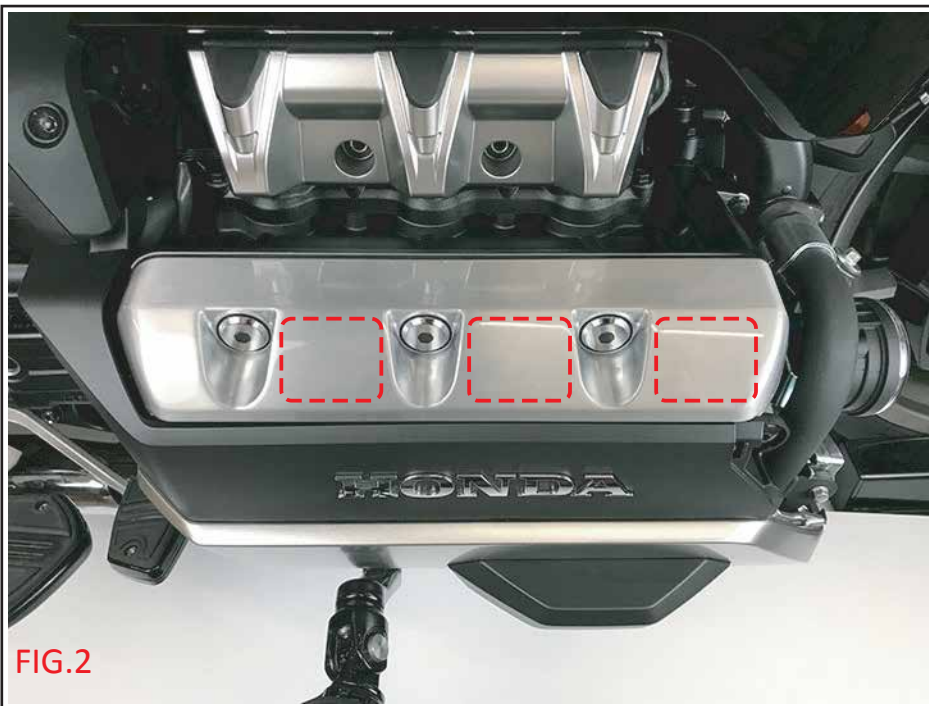

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All **Ciro** products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. **Ciro** warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.

Ciro will not be liable for any consequential and incidental damages, including labor, or non-**Ciro** products.

Please visit our website Ciro3d.com for our complete warranty policy.

3. Test fit the Goldstrike Valve Covers. Identify the appropriate part for the side of the motorcycle you are working on. The right side cover is about 1/2 inch shorter than the left.

4. The Goldstrike Valve Cover has tabs on the ends that fit under the front and rear cylinder head covers from step 2.

5. Clean the surface of the engine valve cover with hot water and soap. FIG.2

ATTENTION: Thoroughly clean the mounting surface with denatured alcohol to remove all wax, oil, and residue.

NOTE: New motorcycles are delivered from the factory covered in protective oil. Remove it before installing this product.

NOTE: Do not install if the temperature is below 50° F. The adhesive will not cure properly.

6. After the valve cover is clean and completely dry, adhere three pieces of 3M Dual Lock to the areas shown in FIG.2.

7. Install the Goldstrike Valve Cover. Press firmly into place. FIG.3

8. Reinstall the front cylinder head cover and the screw from the rear cylinder head cover.

9. Repeat steps 2-7 on the other side of the motorcycle.

ATTENTION: The 3M Dual Lock adhesive takes 12 hours to completely cure. Do not attempt to remove the Goldstrike Valve Covers during this time.

NOTE: You can run the engine and ride the motorcycle immediately after installation.

NOTE: If you also have Goldstrike P/N 40055 LED Engine Lighting Panels, the Light Panels fit on top of the Valve Covers. FIG.4



FIG.3



FIG.4